Power window switch, driver (Regular cab, Super cab)

Terminals

C535

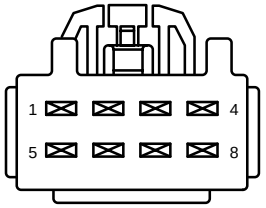

Schematic

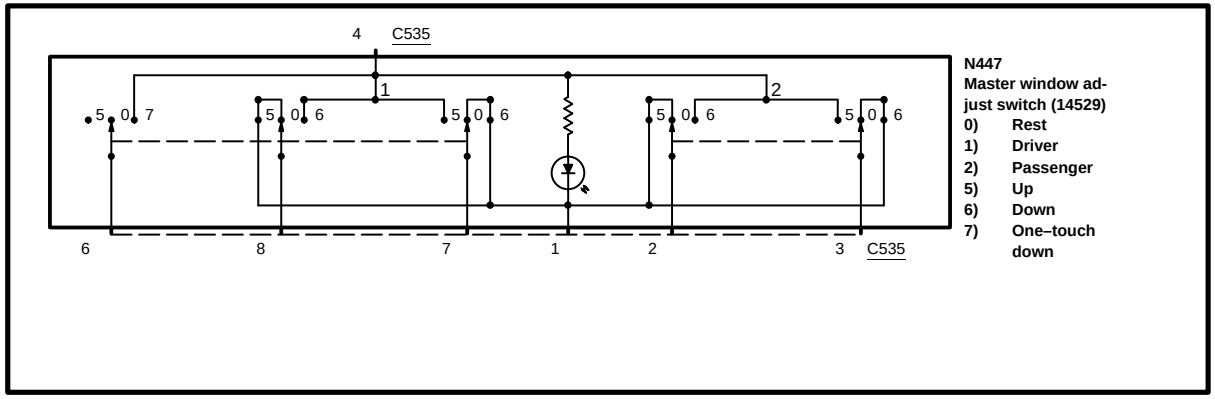

N447
Master window adjust switch (14529)
0) Rest
1) Driver
2) Passenger
5) Up
6) Down
7) One–touch down