24-11 ENGINE CONTROLS (2.0L ZETEC, COUPE)

COUPE

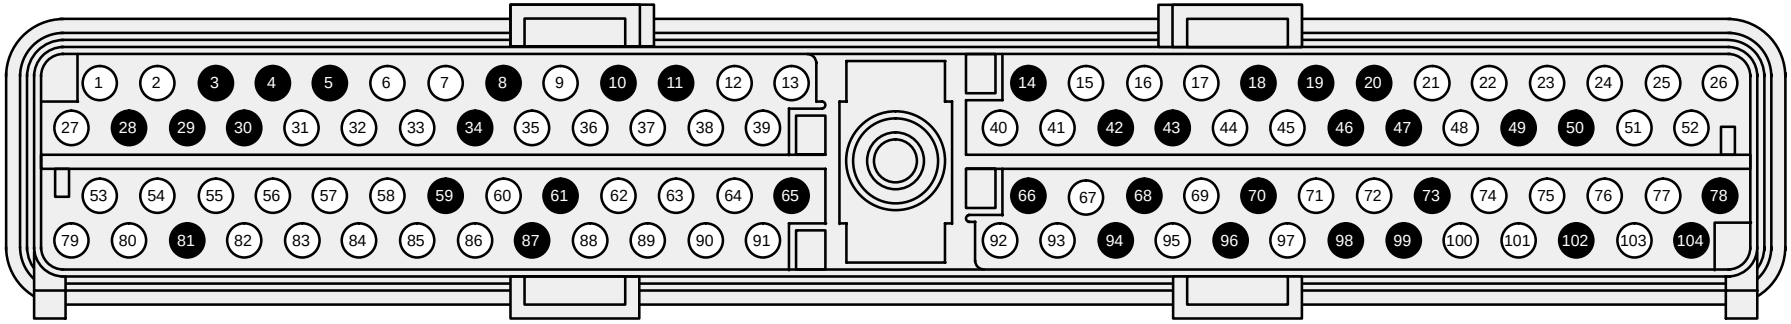

C212

POWERTRAIN CONTROL MODULE (PCM)

*** AUTOMATIC TRANSMISSION**
**** MANUAL TRANSMISSION**

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	*876 (PK/BK)	Shift Solenoid B	18	–	NOT USED
2	129 (YE/BK)	Malfunction Indicator Lamp (MIL)	19	–	NOT USED
3	–	NOT USED	20	–	NOT USED
4	–	NOT USED	21	138 (BK)	Crankshaft Position (CKP+) Sensor
5	–	NOT USED	22	141 (WH)	Crankshaft Position (CKP–) Sensor
6	*855 (BN/BU)	Transmission Range-Overdrive	23	*859 (RD)	Turbine Speed Sensor Input (–)
7	*856 (BN/GN)	Transmission Range-Low	24	999 (BK/YE)	Ground
8	–	NOT USED	25	135 (RD/BU)	Shield Ground (System) Case
9	*857 (BN/YE)	Transmission Range-Drive	26	147 (GN/YE)	Coil Output A
10	–	NOT USED	27	853 (LG/BU)	Shift Solenoid A (Output)
11	–	NOT USED	28	–	NOT USED
12	161 (YE/BN)	Fuel Level Input (FLI)	29	–	NOT USED
13	130 (PK/GN)	Flash EPROM Power Supply (FEPS)	30	–	NOT USED
14	–	NOT USED	31	134 (YE/RD)	Power Steering Pressure (PSP) Sensor
15	132 (BK/BU)	Data Link Connector (DLC) #2 Bus 1–	32	*365 (RD/GN)	Transmission Range-Reverse
16	131 (WH/BU)	Data Link Connector (DLC) #2 Bus 2+	33	57 (BU)	Vehicle Speed Sensor VSS data (–)
17	866 (RD/BK)	High Fan Control (Output to CCRM)	34	–	NOT USED

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
35	98 (GY)	Heated Oxygen Sensor (HO2S) #12 (Rear)	62	86 (BK/WH)	Fuel Tank Pressure (FTP) Sensor Input
36	87 (OG/BU)	Mass Air Flow (MAF) Sensor Return	63	76 (WH/PK)	Injection Pressure Sensor (IPS) Input
37	*878 (OG)	Transmission Fluid Temperature (TFT) Sensor Input	64	*5 (RD)	Park/Neutral Switch Input
				**82 (BN/YE)	Clutch Pedal Position Switch/Neutral Switch Input
38	62 (BU/WH)	Engine Coolant Temperature (ECT) Sensor Input	65	–	NOT USED
39	109 (WH/GN)	Intake Air Temperature (IAT) Sensor Input	66	–	NOT USED
			67	93 (BU/PK)	Evaporative Emission (EVAP) Canister Vent Solenoid Output
40	104 (BK/RD)	Fuel Pump Driver Module (Diagnostic Monitor Input)	68	–	NOT USED
41	717 (WH)	A/C On Input	69	702 (BU/BK)	Wide Open Throttle A/C Cutout (WAC)
42	–	NOT USED	70	–	NOT USED
43	–	NOT USED	71	101 (WH/RD)	PCM Relay Power (Start or Run)
44	91 (VT/GN)	Variable Valve Timing (VVT) Solenoid	72	**124 (PK)	Shift Indicator Light
45	719 (PK/WH)	Low Fan Control Output	73	–	NOT USED
46	–	NOT USED	74	105 (BN/WH)	Injector #3
47	–	NOT USED	75	106 (YE)	Injector #1
48	73 (LG/RD)	Tachometer Output (TACH) Signal	76	127 (BU)	Camshaft Position (CMP) Sensor (–)
49	–	NOT USED	77	999 (BK/YE)	Ground
50	–	NOT USED	78	–	NOT USED
51	999 (BK/YE)	Ground	79	111 (YE/GN)	Fuel Cap Off Indicator
52	146 (BN/RD)	Coil Output B	80	110 (WH/OG)	Fuel Pump Driver Module (Fuel Pump Command Output)
53	*852 (OG/GN)	Shift Solenoid C Output			
54	*851 (GY/WH)	Torque Converter Clutch (TCC) Solenoid Output	81	–	NOT USED
			82	863 (YE/VT)	EPC Solenoid Output
55	360 (BK/RD)	Power (Hot at All Times)	83	83 (BU/OG)	Idle Air Control (IAC) Valve
56	94 (OG/WH)	EVAP Canister Purge Valve	84	*858 (WH)	Turbine Speed Sensor (+)
57	92 (RD)	Knock Sensor Resonant Input	85	128 (GN)	Camshaft Position (CMP) Sensor (+)
58	159 (WH/BK)	Vehicle Speed Sensor (VSS) data (+)	86	133 (GN/BK)	Air Conditioning Pressure Switch
59	–	NOT USED	87	–	NOT USED
60	96 (GY/GN)	Heated Oxygen Sensor (HO2S) #11 (Front)	88	143 (BN/BK)	Mass Air Flow (MAF) Sensor
			89	71 (RD/WH)	Throttle Position (TP) Sensor
61	–	NOT USED	90	85 (LG/WH)	Reference Voltage (5.0V)

PIN	CIRCUIT	CIRCUIT FUNCTION
91	63 (LG/BK)	Signal Return
92	351 (GN)	Brake Pedal Position (BPP) Switch Input
93	95 (OG/BK)	Heater Oxygen Sensor (HO2S) #11 (Front Heater)
94	–	NOT USED
95	97 (VT)	Heater Oxygen Sensor (HO2S) #12 (Rear Heater)
96	–	NOT USED
97	101 (WH/RD)	PCM Relay Power (Start or Run)
98	–	NOT USED
99	–	NOT USED
100	115 (GN/OG)	Injector #4
101	116 (VT/YE)	Injector #2
102	–	NOT USED
103	999 (BK/YE)	Ground
104	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C108	13-13
C110	13-13
C147	33-3
C191	29-5
C210	13-14
C220	13-15
C240	13-16
C252	62-8
C254	62-6
C255	23-12
C264	46-3
C292	31-3
C315	23-11
C386	42-4
C405	111-3
C407	23-11

COUPE

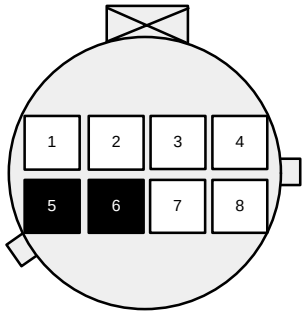

C176

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	63 (LB/BK)	Signal Return
2	87 (OG/BU)	Powertrain Control Module (PCM) MAF Return
3	143 (BN/BK)	Powertrain Control Module (PCM) MAF Signal
4	109 (WH/GN)	Powertrain Control Module (PCM) (IAT)
5	–	NOT USED
6	–	NOT USED
7	101 (WH/RD)	PCM Power Relay
8	999 (BK/YE)	Ground