C113 (BK)

12B637

Coil On Plug (COP)
3 (12029)

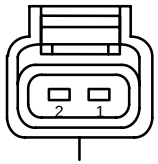

F02026

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1028 (WH/PK)	Coil On Plug (COP) 3 (12029), control

C116 (BK)

12B637

Coil On Plug (COP)
6 (12029)

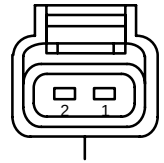

F02026

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control

C114 (BK)

12B637

Coil On Plug (COP)
4 (12029)

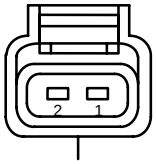

F02026

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1030 (DG/VT)	Coil On Plug (COP) 4 (12029), control

C117 (BK)

12B637

Coil On Plug (COP)
7 (12029)

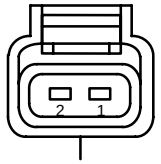

F02026

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control

C115 (BK)

12B637

Coil On Plug (COP)
5 (12029)

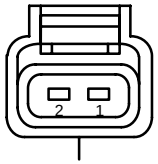

F02026

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control

C118 (BK)

12B637

Coil On Plug (COP)
8 (12029)

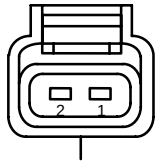

F02026

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control