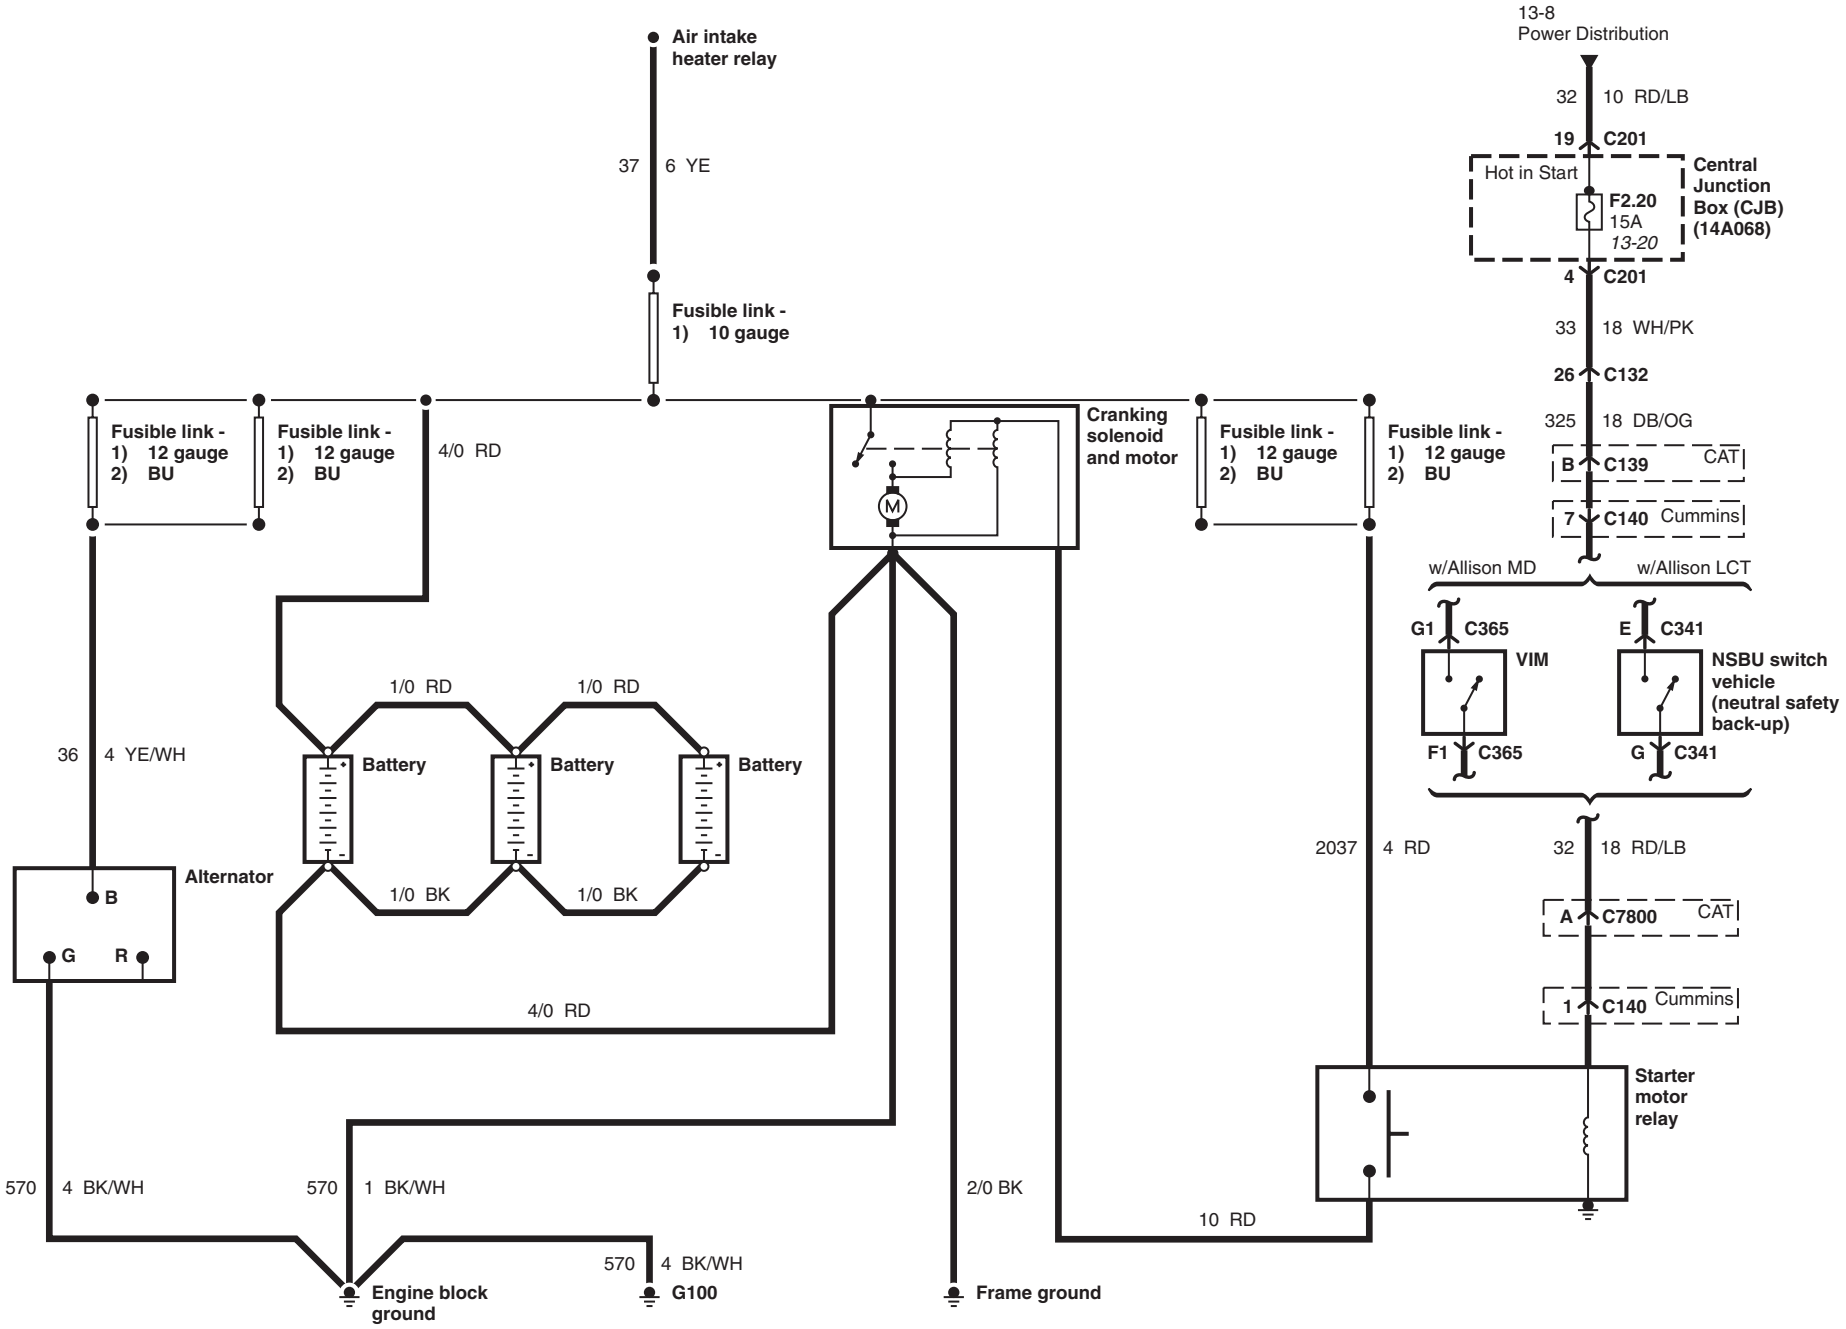
13-8
Power Distribution
Air intake heater relay
37 6 YE
Fusible link - 1) 10 gauge
32 10 RD/LB
19 C201
Hot in Start
F2.20 15A
13-20
Central Junction Box (CJB) (14A068)
4 C201
33 18 WH/PK
26 C132
325 18 DB/OG
B C139 CAT
7 C140 Cummins
w/Allison MD
w/Allison LCT
Fusible link - 1) 12 gauge 2) BU
Fusible link - 1) 12 gauge 2) BU
4/0 RD
Cranking solenoid and motor
Fusible link - 1) 12 gauge 2) BU
Fusible link - 1) 12 gauge 2) BU
G1 C365
VIM
E C341
NSBU switch vehicle (neutral safety back-up)
F1 C365
G C341
36 4 YE/WH
1/0 RD
1/0 RD
Battery
Battery
Battery
1/0 BK
1/0 BK
4/0 RD
2037 4 RD
32 18 RD/LB
A C7800 CAT
1 C140 Cummins
Alternator
B
G
R
Starter motor relay
570 4 BK/WH
570 1 BK/WH
2/0 BK
10 RD
570 4 BK/WH
Engine block ground
G100
Frame ground