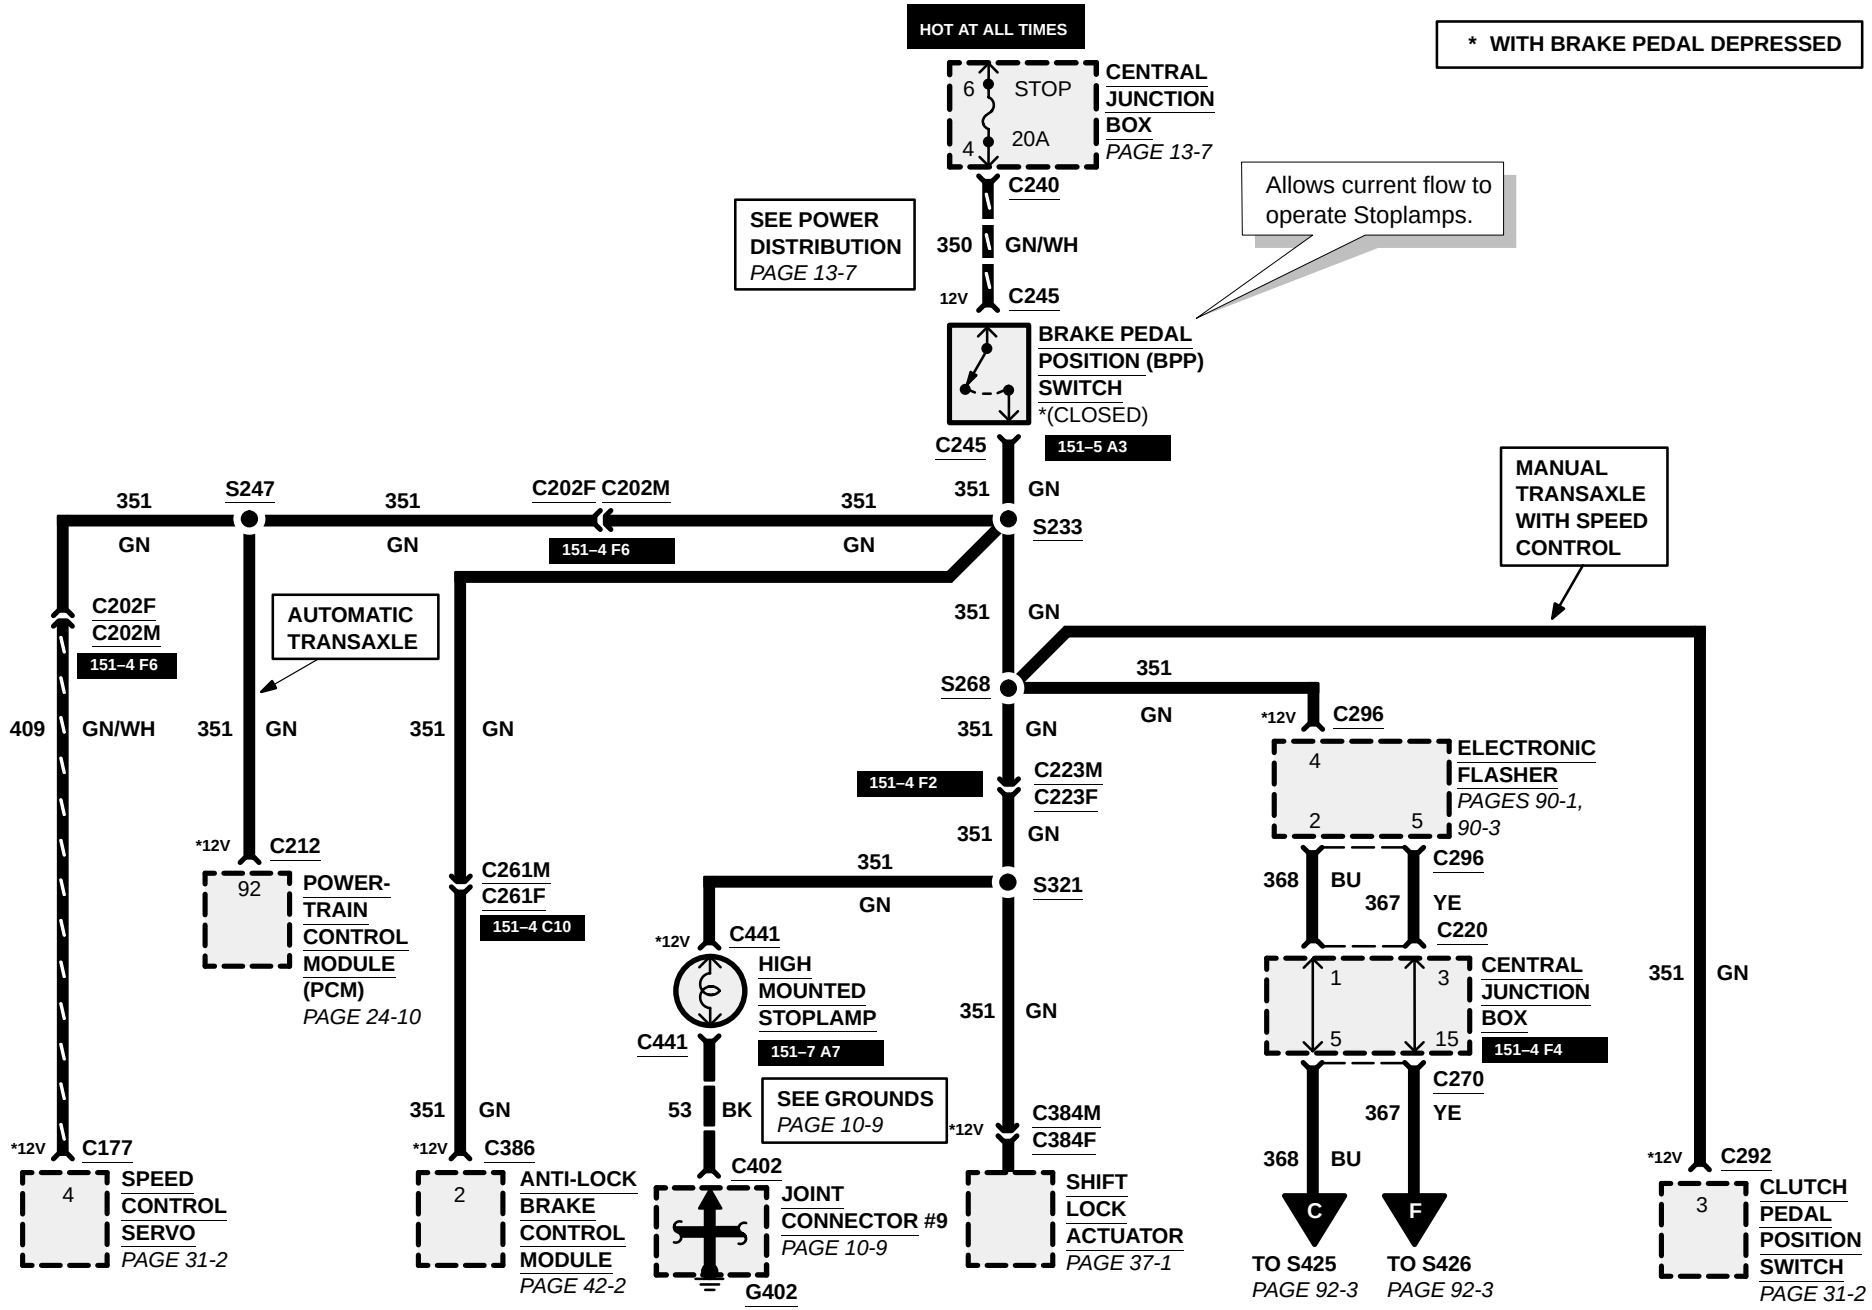
HOT AT ALL TIMES
* WITH BRAKE PEDAL DEPRESSED
6
STOP
4
20A
CENTRAL JUNCTION BOX
PAGE 13-7
C240
350 GN/WH
12V
C245
SEE POWER DISTRIBUTION
PAGE 13-7
Allows current flow to operate Stoplamps.
BRAKE PEDAL POSITION (BPP) SWITCH
*(CLOSED)
C245
151–5 A3
MANUAL TRANSAXLE WITH SPEED CONTROL
351 GN
S247
C202F C202M
151–4 F6
S233
AUTOMATIC TRANSAXLE
C202F
C202M
151–4 F6
409 GN/WH
S268
C296
ELECTRONIC FLASHER
PAGES 90-1, 90-3
C223M
C223F
151–4 F2
*12V
C212
92
POWER-TRAIN CONTROL MODULE (PCM)
PAGE 24-10
C261M
C261F
151–4 C10
S321
C441
HIGH MOUNTED STOPLAMP
151–7 A7
368 BU
367 YE
C220
CENTRAL JUNCTION BOX
151–4 F4
C270
SEE GROUNDS
PAGE 10-9
53 BK
C177
SPEED CONTROL SERVO
PAGE 31-2
C386
ANTI-LOCK BRAKE CONTROL MODULE
PAGE 42-2
C402
JOINT CONNECTOR #9
PAGE 10-9
G402
C384M
C384F
SHIFT LOCK ACTUATOR
PAGE 37-1
C
F
TO S425
PAGE 92-3
TO S426
PAGE 92-3
C292
CLUTCH PEDAL POSITION SWITCH
PAGE 31-2