C3028

14B079

A144
CD changer
(18D806)

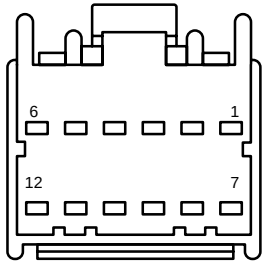

F12103

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	Radio (18806), to CD changer, Left +
6	690 (GY)	Radio (18806), to CD changer, Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	797 (LG/VT)	Voltage supplied at all times (overload protected)
10	48	Shield
11	798 (LG/RD)	Radio (18806), to CD changer, Left –
12	799 (OG/BK)	Radio (18806), to CD changer, Right –

C3047

14408

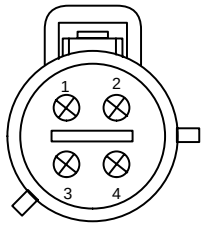

F04263

14405

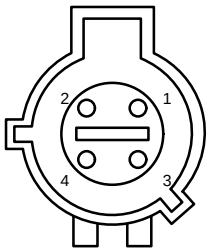

F04082

(1) 57 (BK)
(2) –
(3) –
(4) 667 (WH/RD)

C3049

14335

F02561

F02555

(1) 825 (TN/LG)
(2) 827 (TN/WH)