Driver side

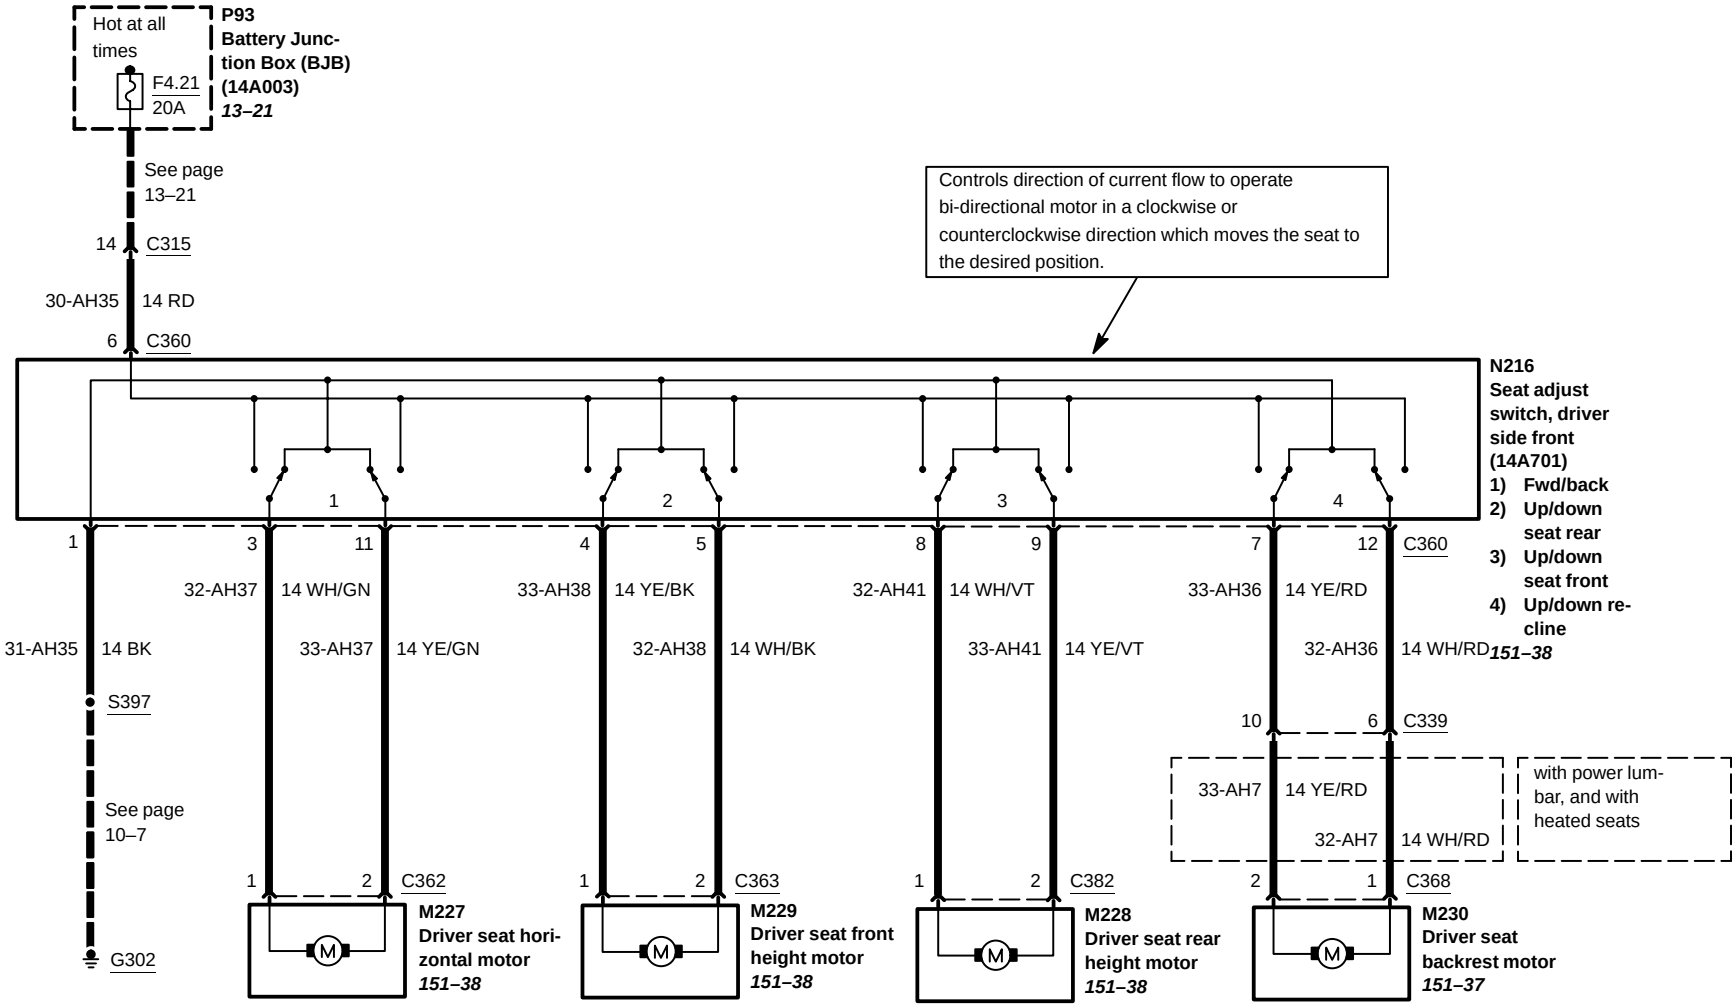
Hot at all times
F4.21
20A
P93
Battery Junction Box (BJB)
(14A003)
13–21
See page 13–21
14
C315
30-AH35
14 RD
6
C360
Controls direction of current flow to operate bi-directional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
N216
Seat adjust switch, driver side front
(14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
4) Up/down recline
151–38
1
2
3
4
1
3
11
4
5
8
9
7
12
C360
32-AH37
14 WH/GN
33-AH38
14 YE/BK
32-AH41
14 WH/VT
33-AH36
14 YE/RD
31-AH35
14 BK
33-AH37
14 YE/GN
32-AH38
14 WH/BK
33-AH41
14 YE/VT
32-AH36
14 WH/RD
S397
10
6
C339
33-AH7
14 YE/RD
32-AH7
14 WH/RD
with power lumbar, and with heated seats
See page 10–7
G302
1
2
C362
1
2
C363
1
2
C382
2
1
C368
M227
Driver seat horizontal motor
151–38
M229
Driver seat front height motor
151–38
M228
Driver seat rear height motor
151–38
M230
Driver seat backrest motor
151–37