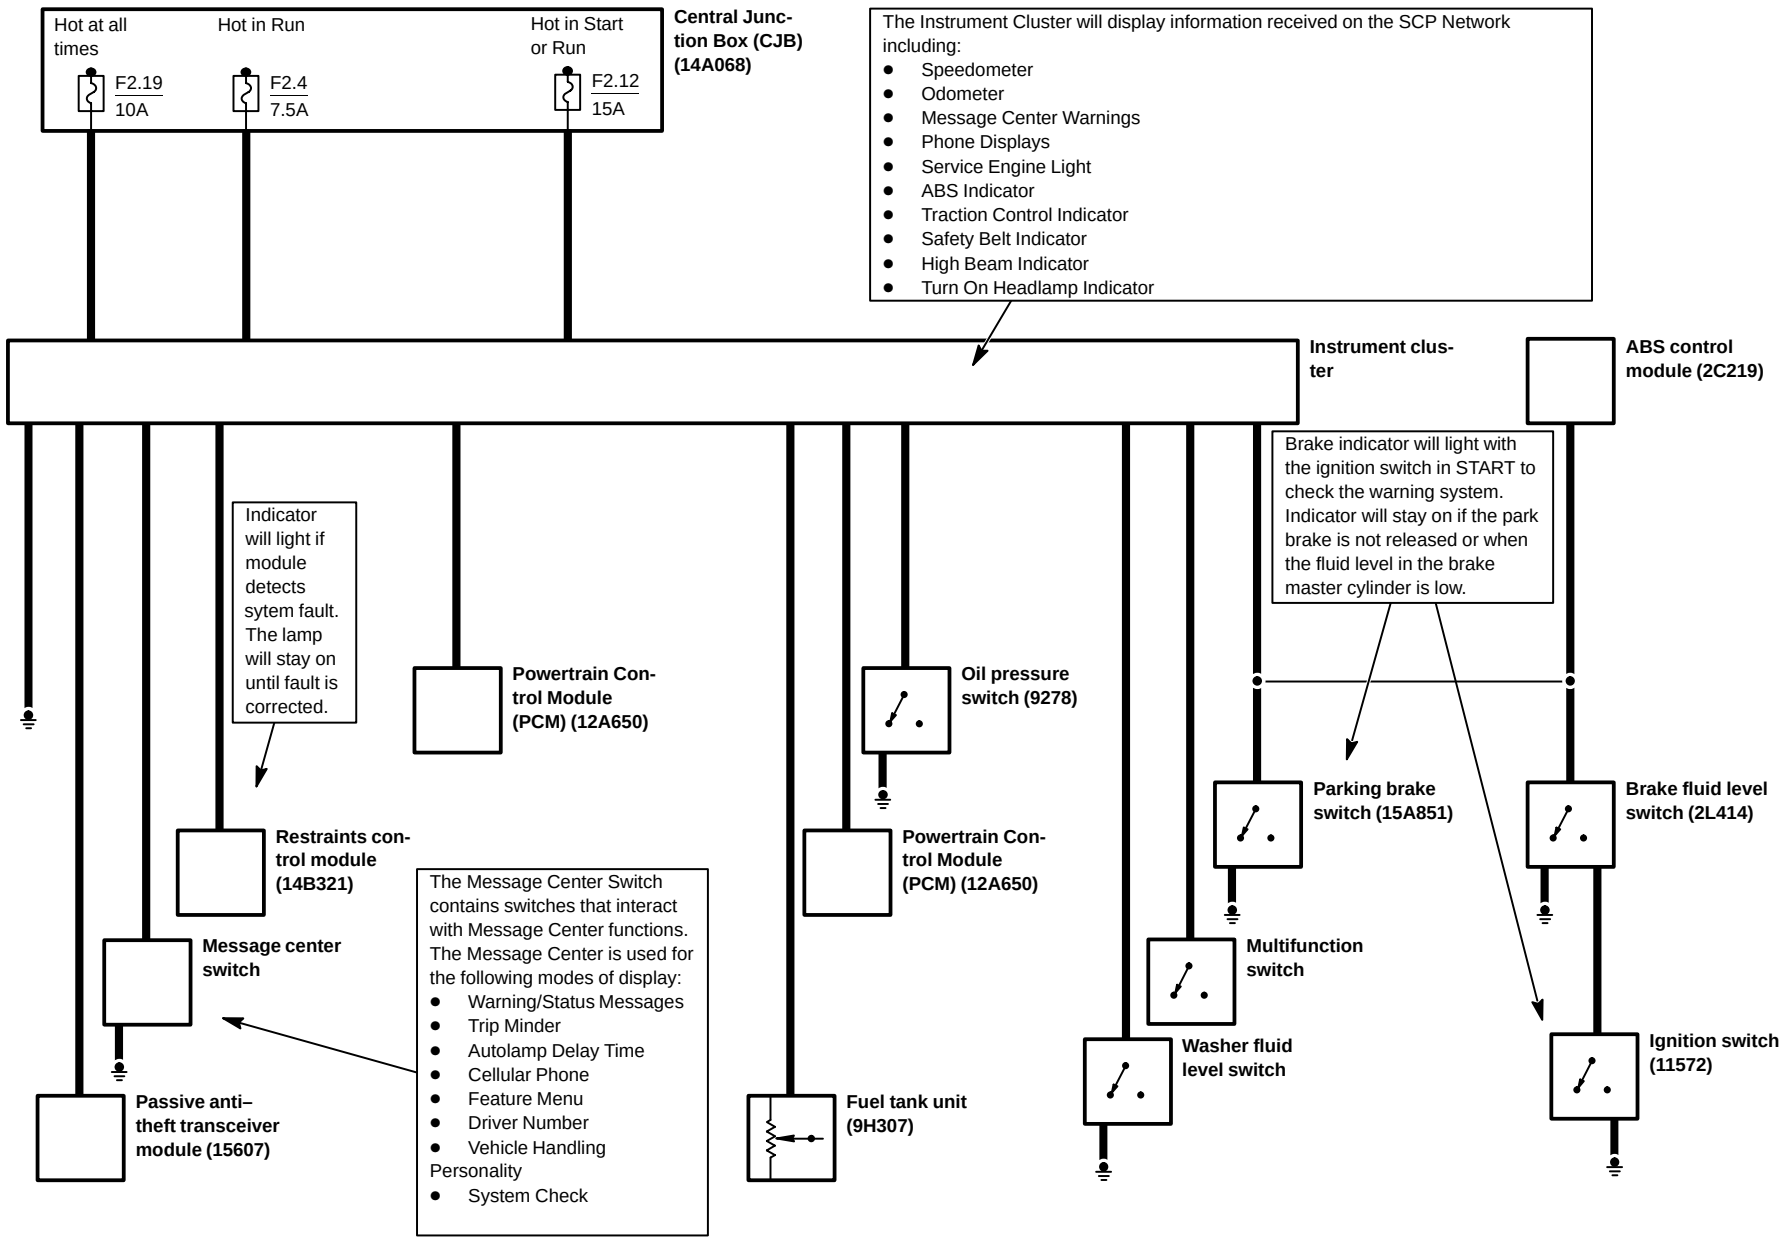
Hot at all times
Hot in Run
Hot in Start or Run
F2.19 10A
F2.4 7.5A
F2.12 15A
Central Junction Box (CJB) (14A068)
The Instrument Cluster will display information received on the SCP Network including:
Speedometer
Odometer
Message Center Warnings
Phone Displays
Service Engine Light
ABS Indicator
Traction Control Indicator
Safety Belt Indicator
High Beam Indicator
Turn On Headlamp Indicator
Instrument cluster
ABS control module (2C219)
Brake indicator will light with the ignition switch in START to check the warning system. Indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
Indicator will light if module detects sytem fault. The lamp will stay on until fault is corrected.
Powertrain Control Module (PCM) (12A650)
Oil pressure switch (9278)
Parking brake switch (15A851)
Brake fluid level switch (2L414)
Restraints control module (14B321)
Powertrain Control Module (PCM) (12A650)
Multifunction switch
Message center switch
The Message Center Switch contains switches that interact with Message Center functions. The Message Center is used for the following modes of display:
Warning/Status Messages
Trip Minder
Autolamp Delay Time
Cellular Phone
Feature Menu
Driver Number
Vehicle Handling Personality
System Check
Washer fluid level switch
Ignition switch (11572)
Passive anti–theft transceiver module (15607)
Fuel tank unit (9H307)