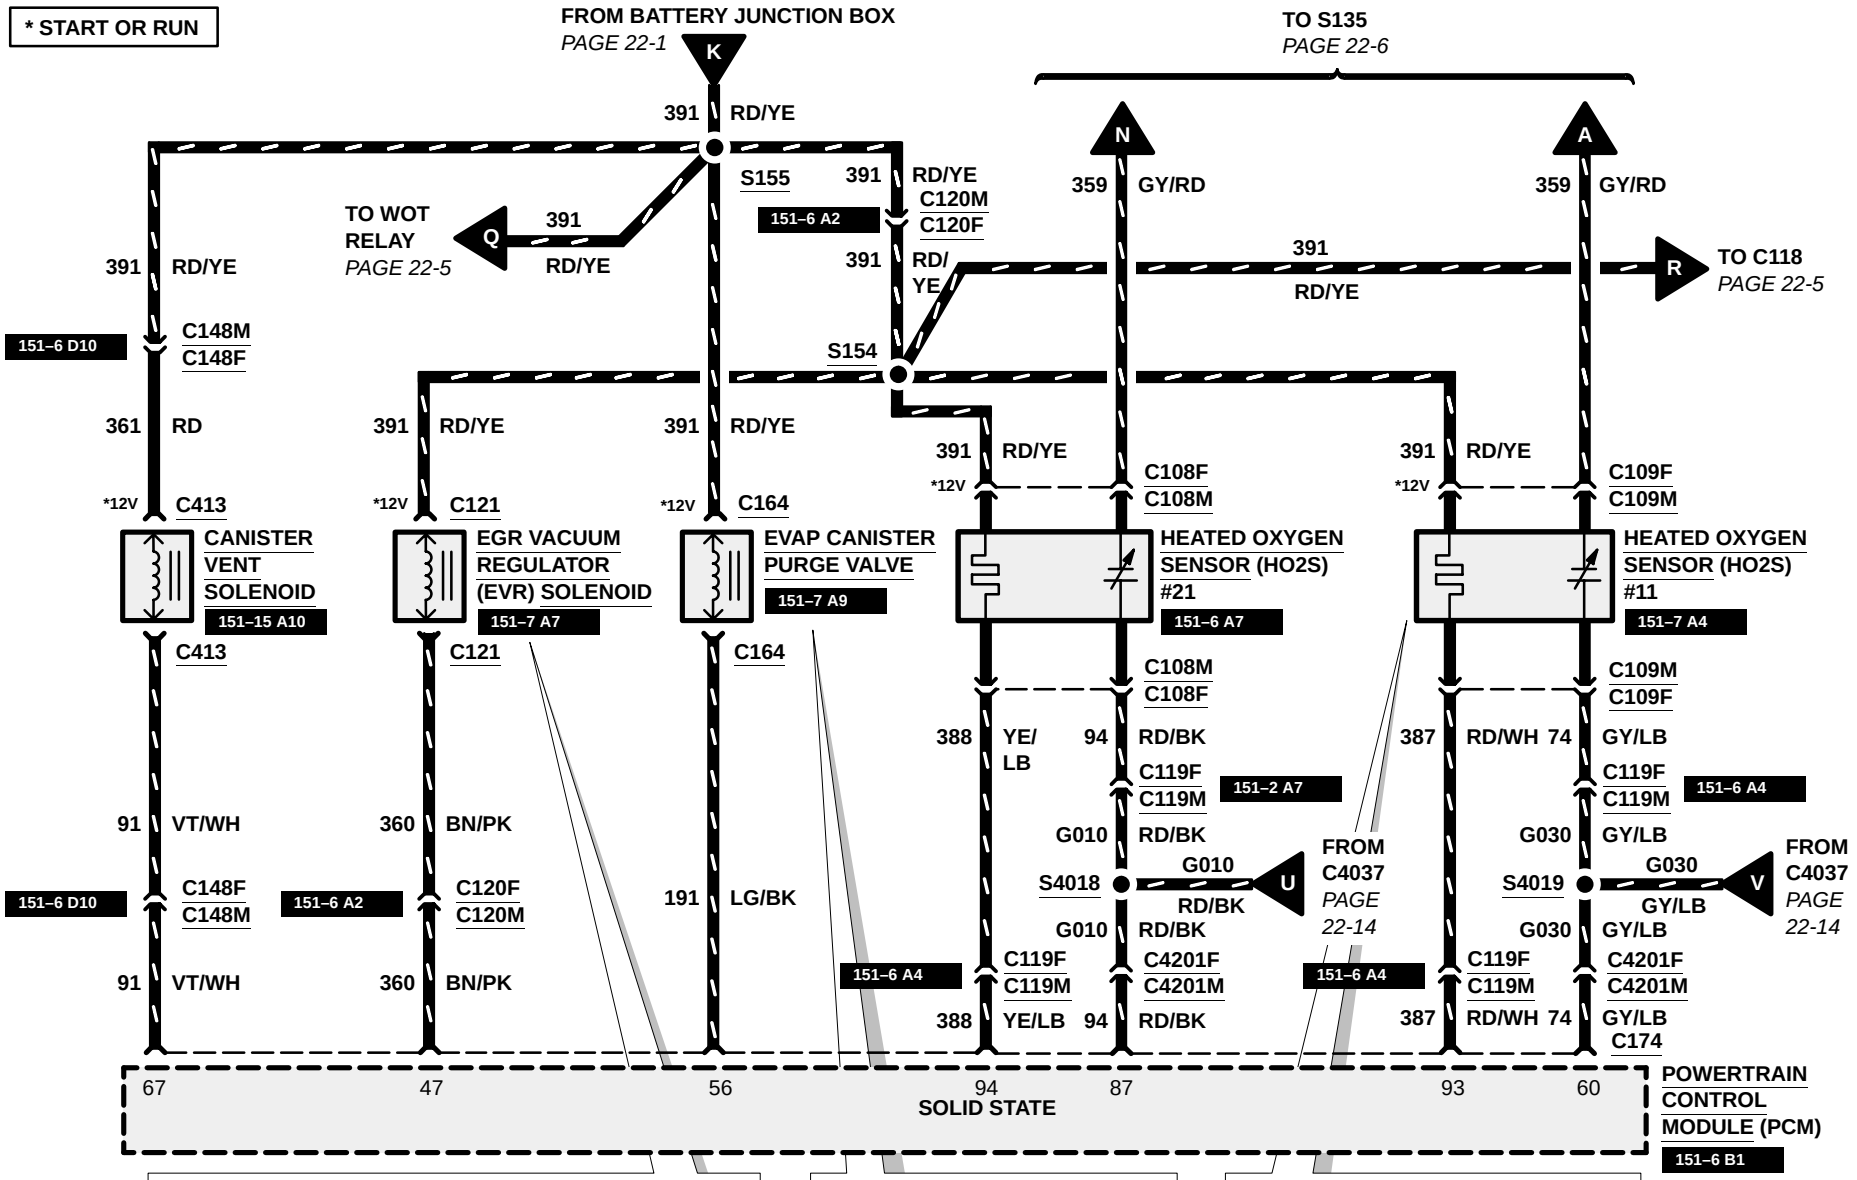
* START OR RUN
FROM BATTERY JUNCTION BOX
PAGE 22-1
K
391 RD/YE
TO S135
PAGE 22-6
N
A
359 GY/RD
359 GY/RD
S155
391 RD/YE
C120M
C120F
151–6 A2
TO WOT RELAY
PAGE 22-5
Q
391 RD/YE
391 RD/YE
391 RD/YE
391
RD/YE
R
TO C118
PAGE 22-5
151–6 D10
C148M
C148F
S154
361 RD
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
*12V
C413
*12V
C121
*12V
C164
*12V
C108F
C108M
*12V
C109F
C109M
CANISTER VENT SOLENOID
151–15 A10
EGR VACUUM REGULATOR (EVR) SOLENOID
151–7 A7
EVAP CANISTER PURGE VALVE
151–7 A9
HEATED OXYGEN SENSOR (HO2S) #21
151–6 A7
HEATED OXYGEN SENSOR (HO2S) #11
151–7 A4
C413
C121
C164
C108M
C108F
C109M
C109F
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
C119F
C119M
151–2 A7
C119F
C119M
151–6 A4
91 VT/WH
360 BN/PK
G010 RD/BK
G030 GY/LB
FROM C4037
PAGE 22-14
G010
RD/BK
U
S4018
G030
GY/LB
V
S4019
FROM C4037
PAGE 22-14
151–6 D10
C148F
C148M
151–6 A2
C120F
C120M
191 LG/BK
G010 RD/BK
G030 GY/LB
151–6 A4
C119F
C119M
C4201F
C4201M
151–6 A4
C119F
C119M
C4201F
C4201M
91 VT/WH
360 BN/PK
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
C174
67
47
56
94
87
93
60
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
When PCM grounds valve, fuel vapors which are collected are released to engine for burning.
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.