C443a (WH)

14K024

A11
Radio (18806)

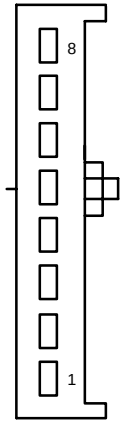

F08043

Pin	Circuit	Circuit function
1	8-MD10 (WH/BK)	Sensor signal
2	10-MD10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
3	8-MD11 (WH/VT)	Sensor signal
4	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-MD17 (WH/RD)	Sensor signal
6	10-MD17 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
7	8-MD18 (WH)	Sensor signal
8	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)

C443b

14K024

A11
Radio (18806)



F07011

Pin	Circuit	Circuit function
1	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
2	91-MD15A (BK/GN)	Ground
3	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
4	64S-LK34 (BU/BK)	Variable D.C. voltage (not overload protected), Switched
5	31S-GL15 (BK/OG)	Ground, Switched
6	91-MD15 (BK/GN)	Ground
7	–	not used