Seat adjust switch, passenger side front

Schematic

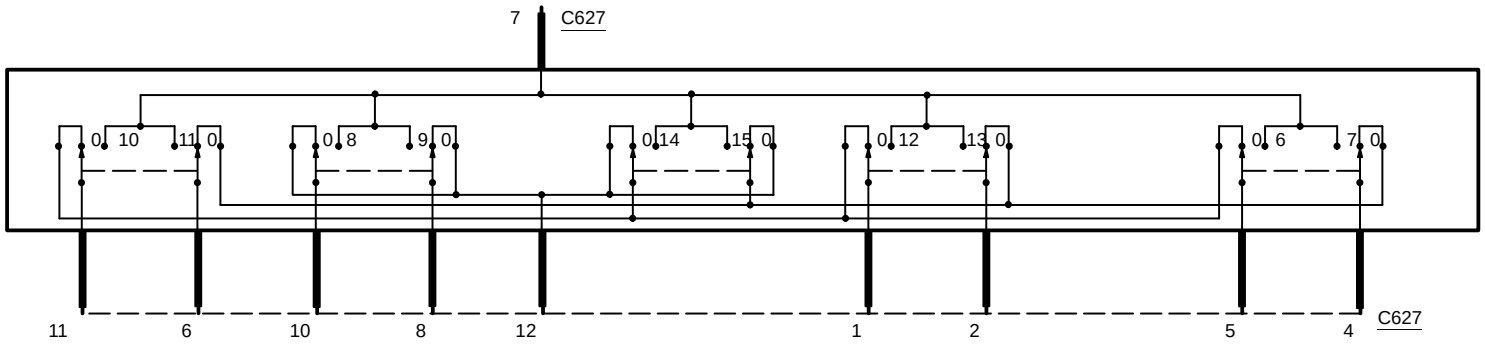

N217
Seat adjust switch, passenger side front

- **0) Rest**
- **6) Backrest forward**
- **7) Backrest rearward**
- **8) Seat forward**
- **9) Seat rearward**
- **10) Front height up**
- **11) Front height down**
- **12) Rear height up**
- **13) Rear height down**
- **14) Seat up**
- **15) Seat down**

Terminals

C627

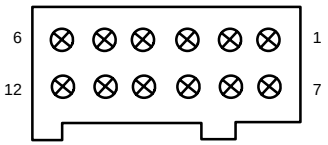

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	12 all others, except 7	All switches at rest	Closed circuit
	7 and 12	All switches at rest	Open circuit
Front up/down circuit	7 and 1	Up	Closed circuit
	7 and 6	Down	Closed circuit
Rear up/down circuit	7 and 1	Up	Closed circuit
	7 and 2	Down	Closed circuit
Forward/Rearward circuit	7 and 10	Forward	Closed circuit
	7 and 8	Rearward	Closed circuit
without stability assist	7 and 5	Forward	Closed circuit
	7 and 4	Rearward	Closed circuit