Seat adjust switch, driver side front (14A701)

Schematic

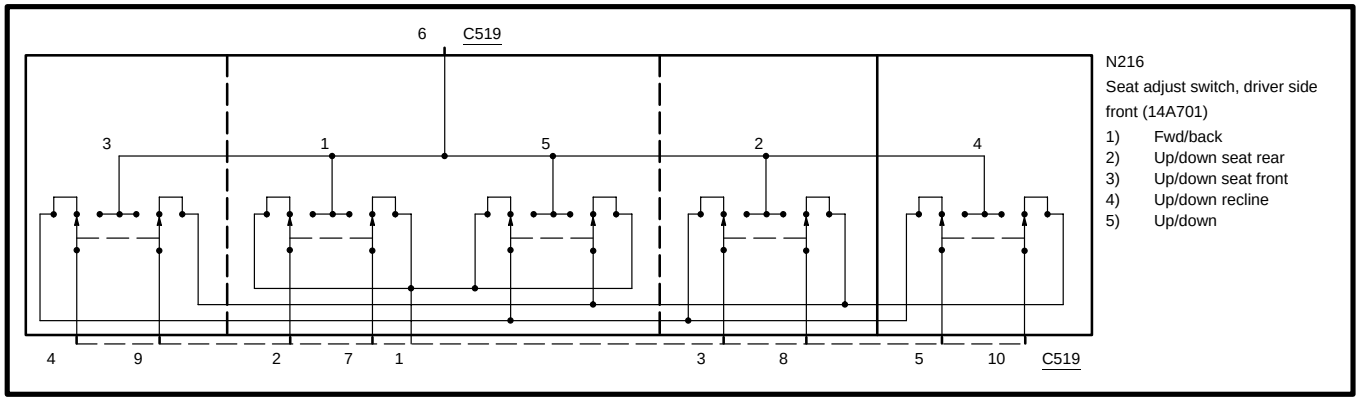

N216
Seat adjust switch, driver side front (14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
4) Up/down recline
5) Up/down

Terminals

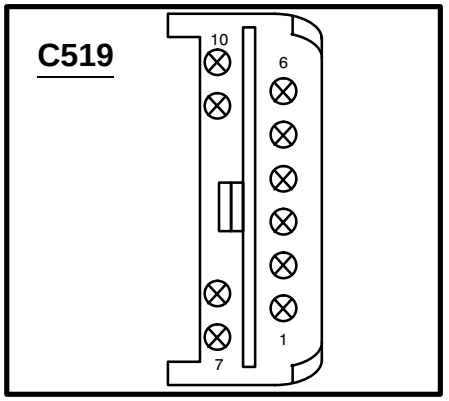

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Front up/down circuit	6 and 4	Up	Closed circuit
	6 and 9	Down	Closed circuit
Rear up/down circuit	6 and 3	Up	Closed circuit
	6 and 8	Down	Closed circuit
Recliner up/down cir-cuit	6 and 5	Up	Closed circuit
	6 and 10	Down	Closed circuit
Entire seat circuit	6 and 7	Rearward	Closed circuit
	6 and 2	Forward	Closed circuit
	6 and 8	Down	Closed circuit
	6 and 9	Down	Closed circuit
	6 and 3	Up	Closed circuit
	6 and 4	Up	Closed circuit