C310b

14A005

A208
Restraints Control
Module (RCM)

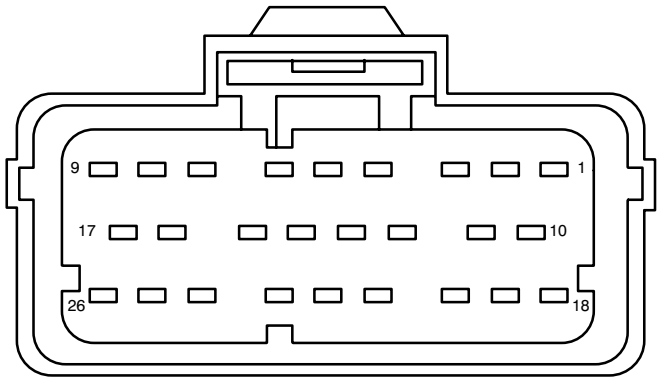

F26023

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	1257 (WH/LB)	Air bag - driver side impact - to module - feed
4	1258 (RD)	Air bag - driver side impact - to module - return
5	85 (BN/LB)	Safety belt buckle switch, input
6	1259 (WH/YE)	Air bag - passenger side impact - to module - feed
7	1260 (BN/YE)	Air bag - passenger side impact - to module - return
8	1520 (LG)	Seat position sensor - horizontal sense
9	442 (LG/OG)	Seat position sensor - horizontal sense
10	1514 (RD/BK)	Safety belt buckle switch, input
11	1516 (YE/WH)	Driver air bag, feed, monitor
12	1517 (RD/OG)	Driver air bag, return
13	1261 (WH/LG)	Air bag - driver side impact - crash sensor to module - feed
14	1262 (BN/LG)	Air bag - driver side impact - crash sensor to module - return

Pin	Circuit	Circuit Function
15	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
16	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
17	–	not used
18	1264 (BN)	Air bag - passenger side impact - crash sensor to module - return
19	1263 (WH)	Air bag - passenger side impact - crash sensor to module - feed
20	1518 (RD/WH)	Passenger air bag, feed, monitor
21	1519 (LG/RD)	Passenger air bag, return
22	–	not used
23	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
24	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
25	617 (PK/OG)	Air bag crash sensor #1, feed
26	618 (VT/LG)	Air bag crash sensor #1, monitor

C313

14A699

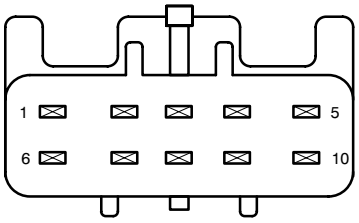

F10041

1) 57 (BK)
2) 442 (LG/OG)
3) 85 (BN/LB)
4) 649 (BK/OG)
5) 490 (RD)
6) 1492 (LB/RD)
7) 1520 (LG)
8) 1079 (LG/RD)
9) 1080 (LG/BK)
10) 1493 (PK/BK)

14A005

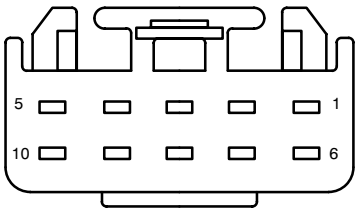

F10042

1) 57 (BK)
2) 442 (LG/OG)
3) 85 (BN/LB)
4) 649 (BK/OG)
5) 490 (RD)
6) 1492 (LB/RD)
7) 1520 (LG)
8) 1079 (LG/RD)
9) 1080 (LG/BK)
10) 1493 (PK/BK)