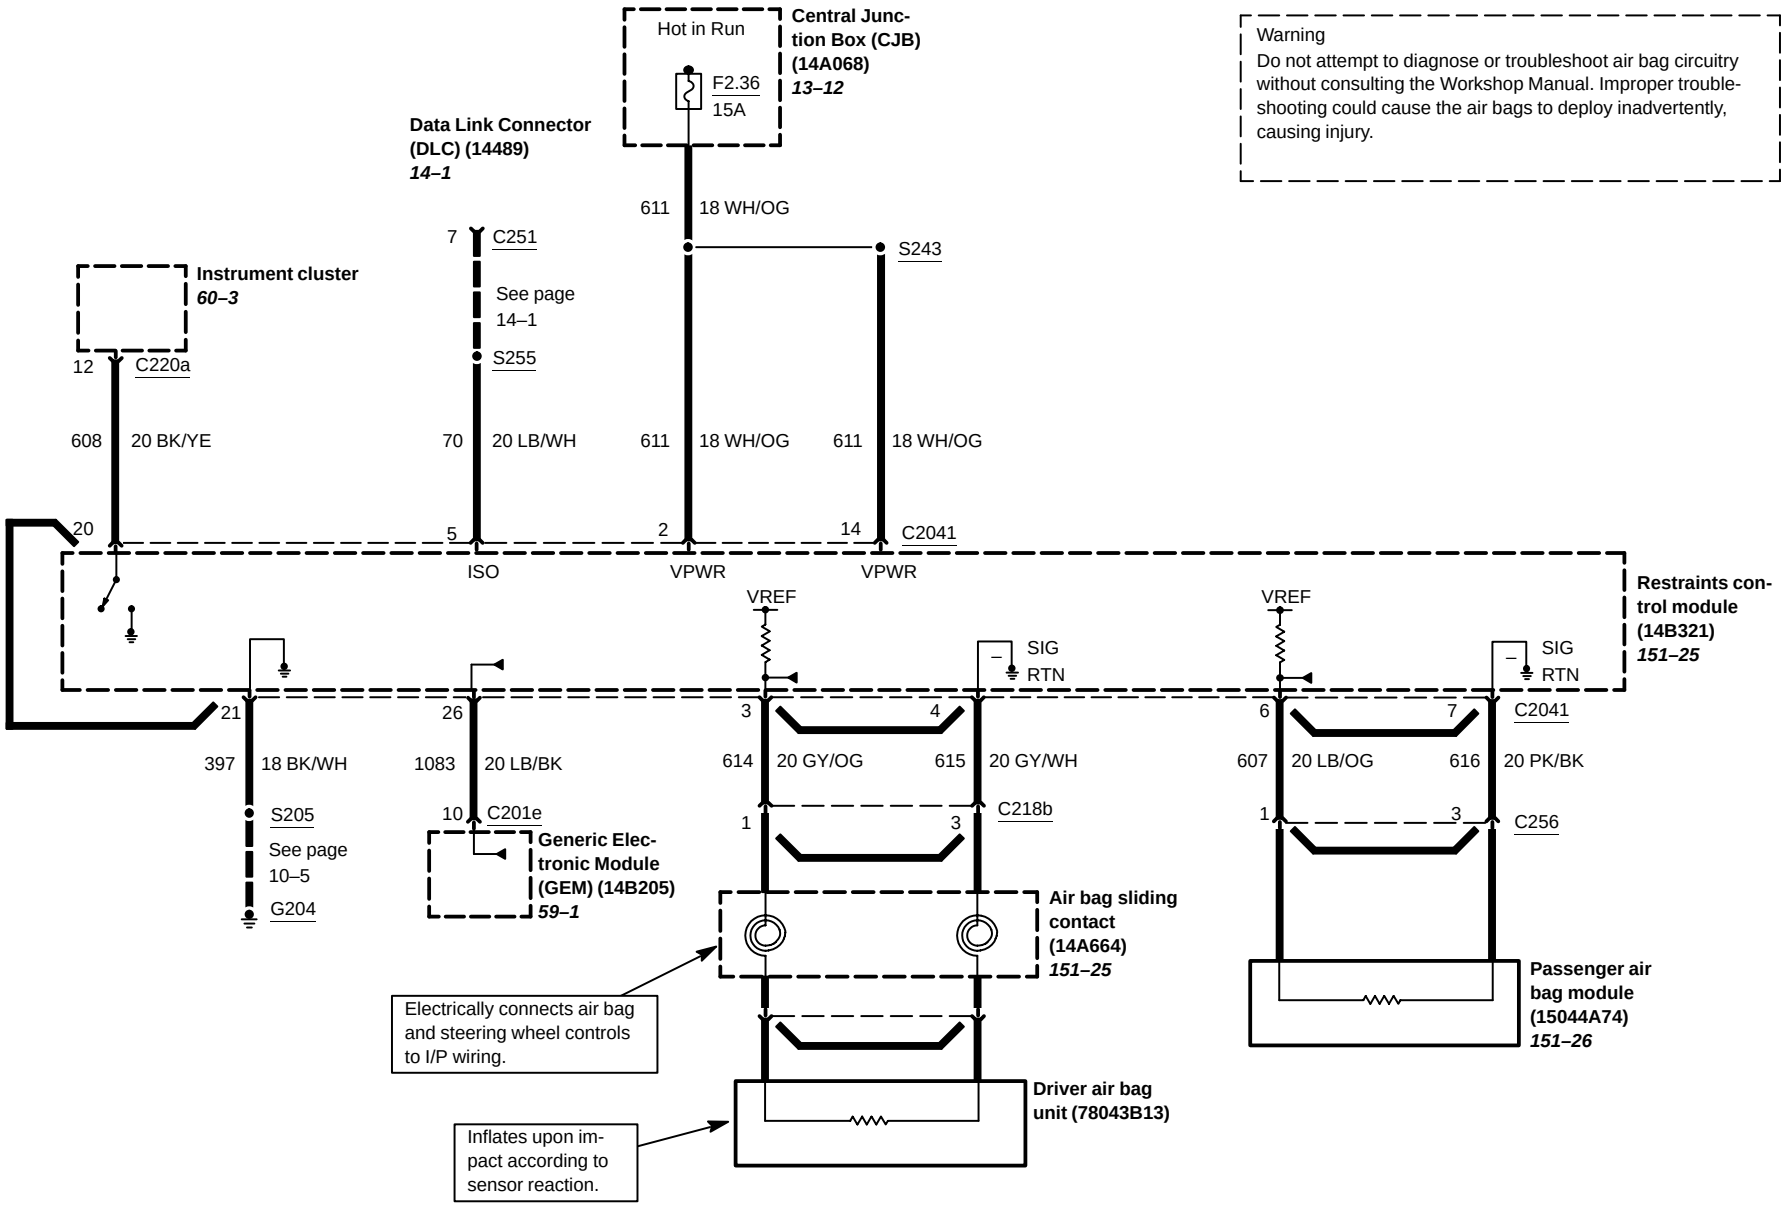
Hot in Run
F2.36
15A
Central Junction Box (CJB) (14A068) 13–12
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Data Link Connector (DLC) (14489) 14–1
611 18 WH/OG
7 C251
S243
See page 14–1
Instrument cluster 60–3
12 C220a
S255
608 20 BK/YE
70 20 LB/WH
611 18 WH/OG
611 18 WH/OG
20
5
2
14
C2041
ISO
VPWR
VPWR
Restraints control module (14B321) 151–25
VREF
SIG RTN
VREF
SIG RTN
21
26
3
4
6
7
C2041
397 18 BK/WH
1083 20 LB/BK
614 20 GY/OG
615 20 GY/WH
607 20 LB/OG
616 20 PK/BK
S205
See page 10–5
G204
10
C201e
Generic Electronic Module (GEM) (14B205) 59–1
1
3
C218b
1
3
C256
Air bag sliding contact (14A664) 151–25
Electrically connects air bag and steering wheel controls to I/P wiring.
Passenger air bag module (15044A74) 151–26
Driver air bag unit (78043B13)
Inflates upon impact according to sensor reaction.