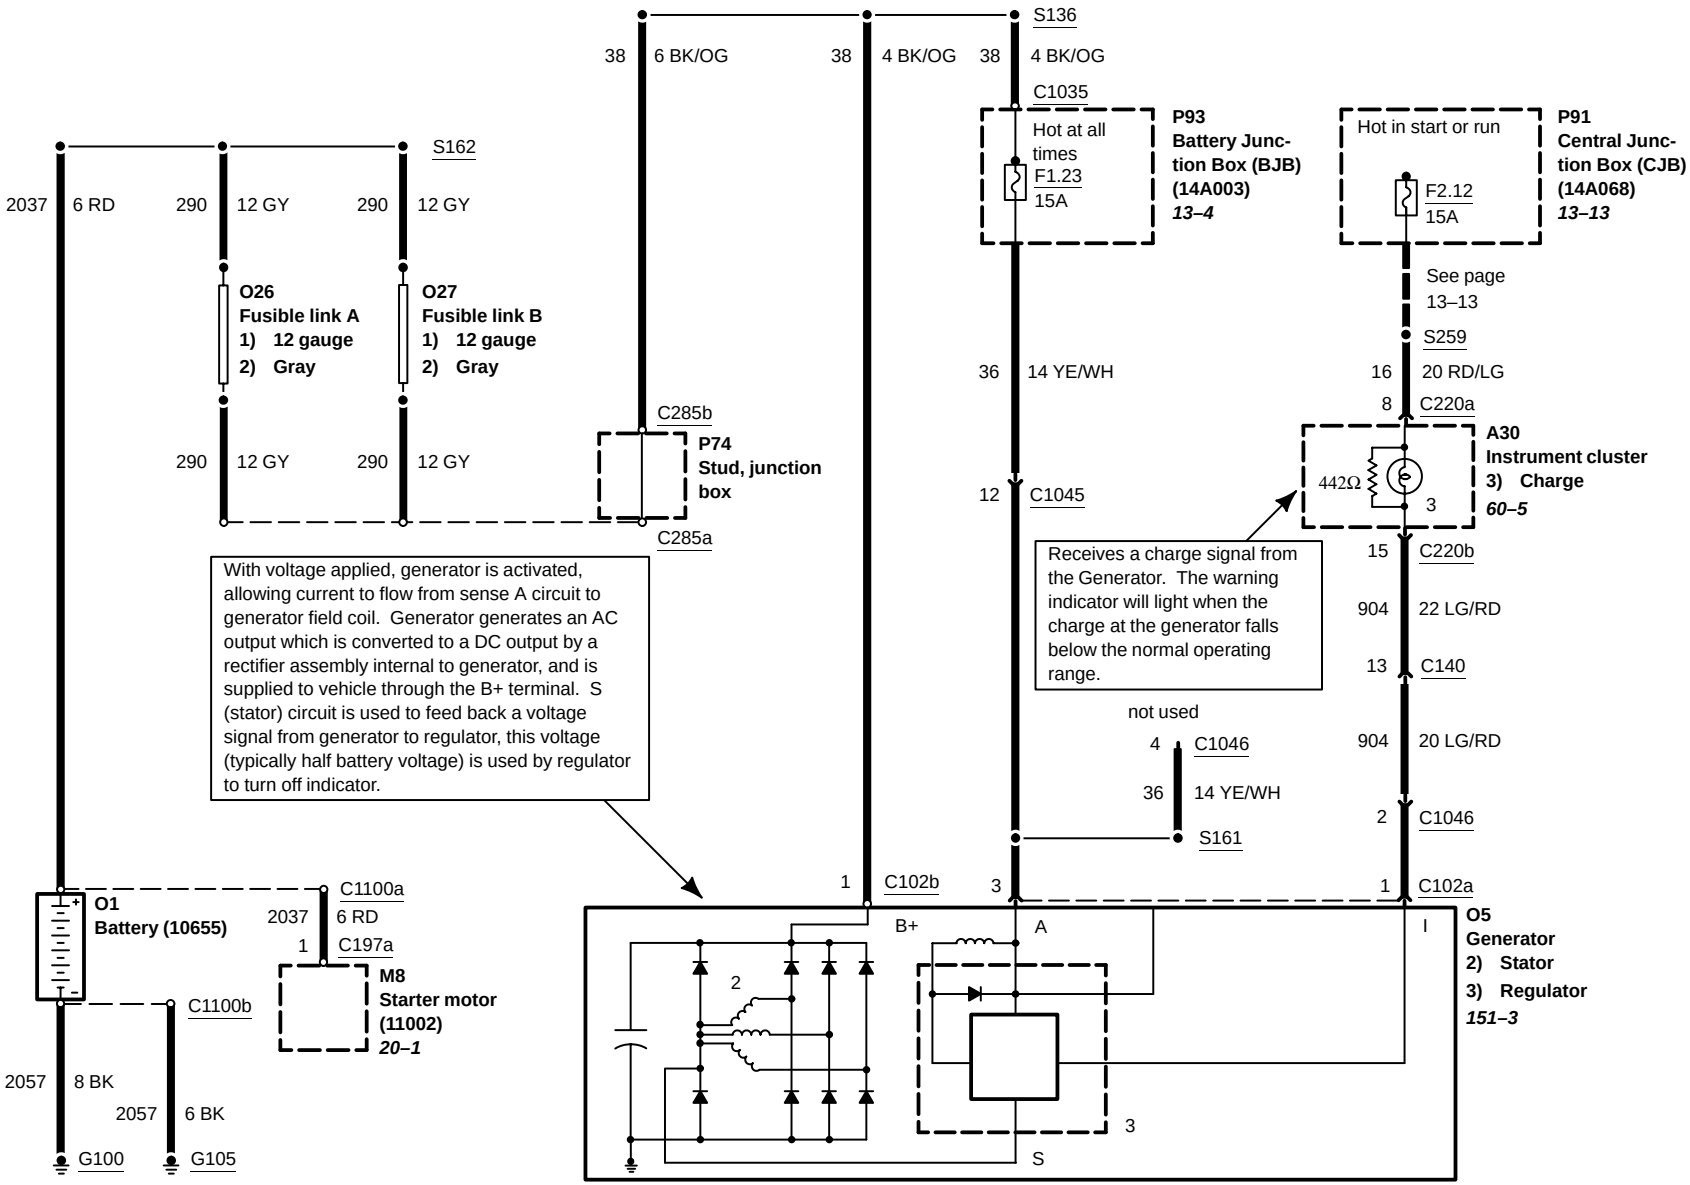
S136
38 6 BK/OG
38 4 BK/OG
38 4 BK/OG
C1035
Hot at all times
F1.23
15A
P93
Battery Junction Box (BJB)
(14A003)
13–4
Hot in start or run
F2.12
15A
P91
Central Junction Box (CJB)
(14A068)
13–13
See page 13–13
S162
2037 6 RD
290 12 GY
290 12 GY
O26
Fusible link A
1) 12 gauge
2) Gray
O27
Fusible link B
1) 12 gauge
2) Gray
S259
36 14 YE/WH
16 20 RD/LG
8 C220a
C285b
P74
Stud, junction box
290 12 GY
290 12 GY
C285a
A30
Instrument cluster
3) Charge
60–5
442Ω
3
12 C1045
15 C220b
904 22 LG/RD
13 C140
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generator generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator, this voltage (typically half battery voltage) is used by regulator to turn off indicator.
Receives a charge signal from the Generator. The warning indicator will light when the charge at the generator falls below the normal operating range.
not used
4 C1046
904 20 LG/RD
36 14 YE/WH
2 C1046
S161
O1
Battery (10655)
C1100a
2037 6 RD
1 C197a
M8
Starter motor (11002)
20–1
1 C102b
3
1 C102a
B+
A
I
O5
Generator
2) Stator
3) Regulator
151–3
C1100b
2057 8 BK
2057 6 BK
G100
G105
2
3
S