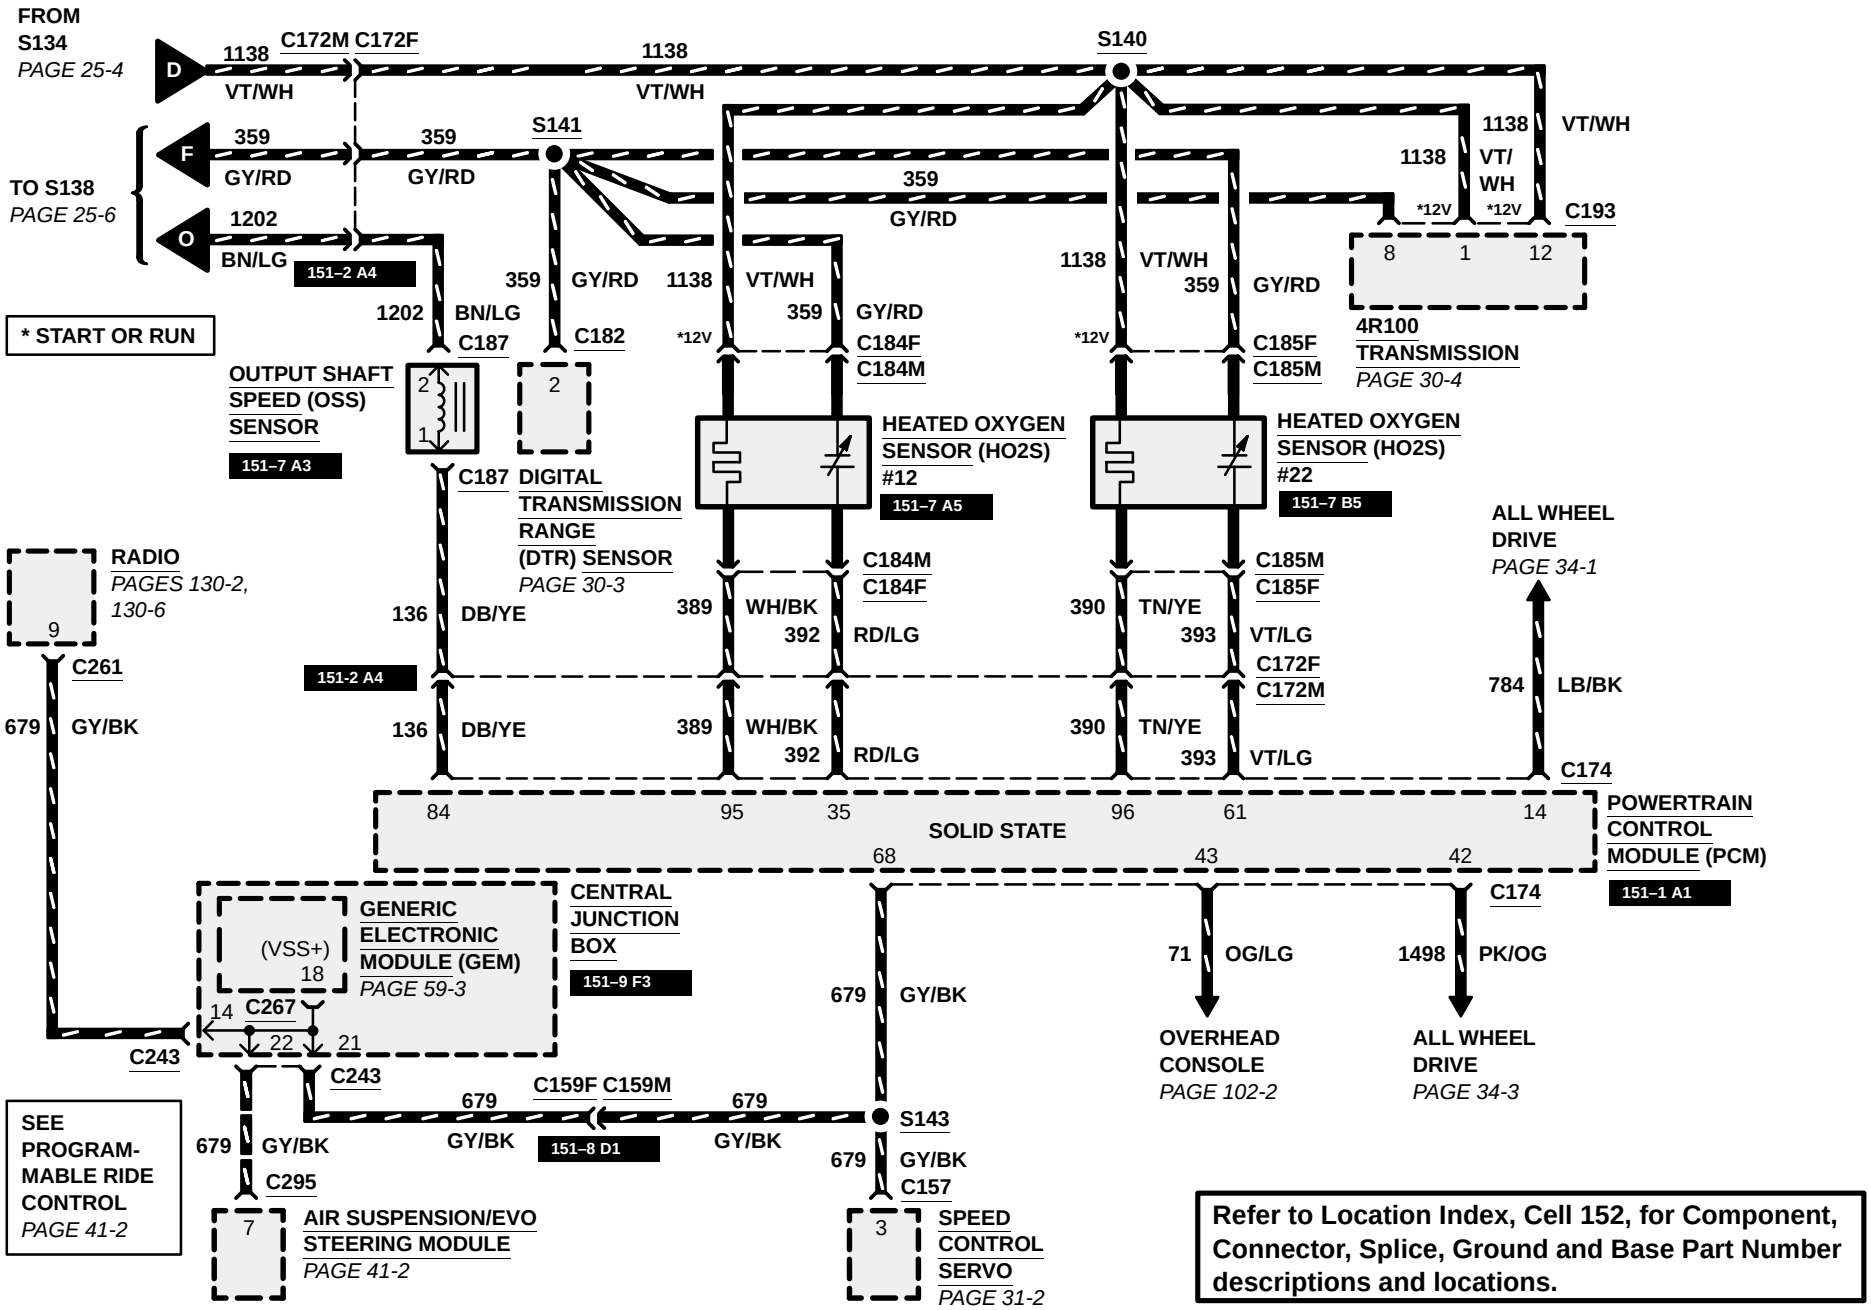
FROM S134 PAGE 25-4
TO S138 PAGE 25-6
D
F
O
1138 VT/WH
359 GY/RD
1202 BN/LG
151–2 A4
C172M C172F
S140
S141
1138 VT/WH
359 GY/RD
1202 BN/LG
C187
C182
359 GY/RD
1138 VT/WH
359 GY/RD
1138 VT/WH
359 GY/RD
1138 VT/ WH
*12V
C193
8 1 12
4R100 TRANSMISSION
PAGE 30-4
* START OR RUN
OUTPUT SHAFT SPEED (OSS) SENSOR
151–7 A3
C184F C184M
C185F C185M
HEATED OXYGEN SENSOR (HO2S) #12
151–7 A5
HEATED OXYGEN SENSOR (HO2S) #22
151–7 B5
C187 DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 30-3
ALL WHEEL DRIVE
PAGE 34-1
RADIO
PAGES 130-2, 130-6
C261
679 GY/BK
136 DB/YE
389 WH/BK
392 RD/LG
390 TN/YE
393 VT/LG
C172F C172M
784 LB/BK
C174
84 95 35 96 61 14
68 43 42
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-3
(VSS+) 18
C267
14 22 21
CENTRAL JUNCTION BOX
151–9 F3
C243
679 GY/BK
71 OG/LG
1498 PK/OG
OVERHEAD CONSOLE
PAGE 102-2
ALL WHEEL DRIVE
PAGE 34-3
C159F C159M
679 GY/BK
S143
C295
C157
SEE PROGRAM-MABLE RIDE CONTROL
PAGE 41-2
7
AIR SUSPENSION/EVO STEERING MODULE
PAGE 41-2
3
SPEED CONTROL SERVO
PAGE 31-2
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.