## C183

**9D930/12B637**

Y110
Fuel injector 3
(9F593)

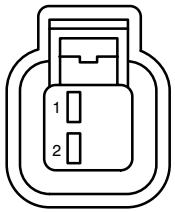


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91S-RL12 (BN/RD) | Ground, Switched |
| 2 | 15S-RL12 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), Switched |

## C184

**9D930/12B637**

Y111
Fuel injector 4
(9F593)

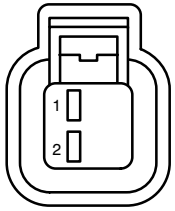


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91S-RL13 (BN/BU) | Ground, Switched |
| 2 | 15S-RL13 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected), Switched |

## C185

**9D930/12B637**

Y112
Fuel injector 5
(9F593)

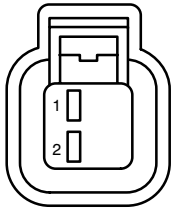


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91S-RL14 (BN/GN) | Ground, Switched |
| 2 | 15S-RL14 (GN/BK) | Voltage, ignition switch in Start or Run (not overload protected), Switched |

## C186

**9D930/12B637**

Y113
Fuel injector 6
(9F593)

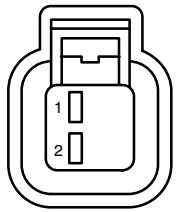


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91S-RL15 (BN/YE) | Ground, Switched |
| 2 | 15S-RL15 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), Switched |

## C187

**12B637**

Y207
Fuel injector 7
(9F593)

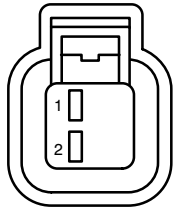


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91S-RL16 (BN/WH) | Ground, Switched |
| 2 | 15S-RL16 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected), Switched |

## C188

**12B637**

Y209
Fuel injector 8
(9F593)

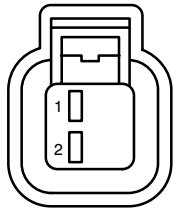


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91S-RL17 (BN) | Ground, Switched |
| 2 | 15S-RL17 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected), Switched |