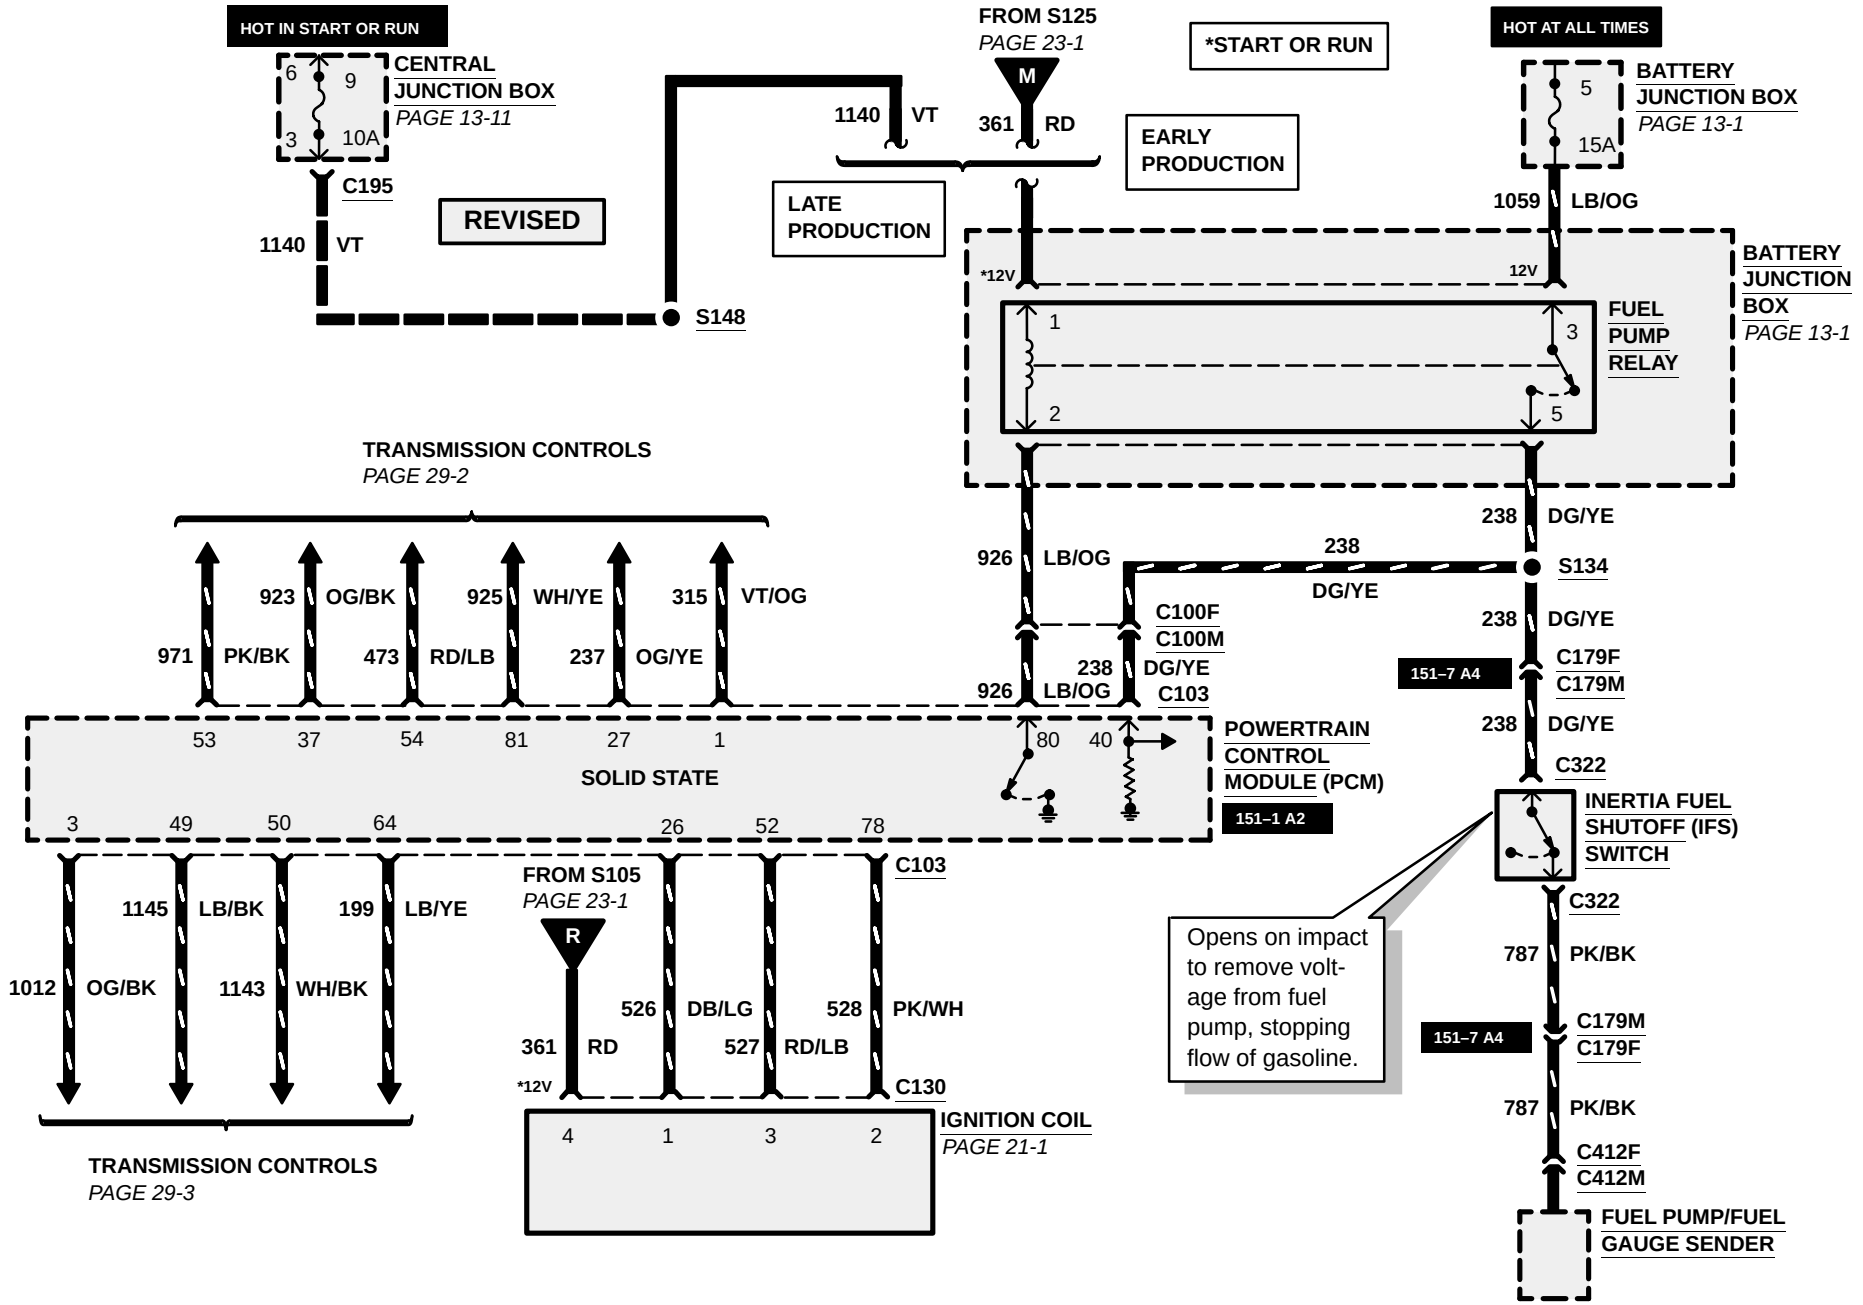
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-11
6
9
3
10A
C195
1140 VT
REVISED
S148
FROM S125
PAGE 23-1
M
1140 VT
361 RD
*START OR RUN
EARLY PRODUCTION
LATE PRODUCTION
HOT AT ALL TIMES
5
15A
BATTERY JUNCTION BOX
PAGE 13-1
1059 LB/OG
*12V
12V
1
2
3
5
FUEL PUMP RELAY
BATTERY JUNCTION BOX
PAGE 13-1
TRANSMISSION CONTROLS
PAGE 29-2
971 PK/BK
923 OG/BK
473 RD/LB
925 WH/YE
237 OG/YE
315 VT/OG
926 LB/OG
238 DG/YE
238 DG/YE
S134
C100F
C100M
238 DG/YE
926 LB/OG
238 DG/YE
C103
151–7 A4
C179F
C179M
238 DG/YE
C322
53
37
54
81
27
1
80
40
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A2
3
49
50
64
26
52
78
INERTIA FUEL SHUTOFF (IFS) SWITCH
C322
787 PK/BK
C179M
C179F
151–7 A4
787 PK/BK
C412F
C412M
FUEL PUMP/FUEL GAUGE SENDER
Opens on impact to remove voltage from fuel pump, stopping flow of gasoline.
1145 LB/BK
199 LB/YE
1012 OG/BK
1143 WH/BK
C103
FROM S105
PAGE 23-1
R
526 DB/LG
528 PK/WH
361 RD
527 RD/LB
*12V
C130
4
1
3
2
IGNITION COIL
PAGE 21-1
TRANSMISSION CONTROLS
PAGE 29-3