C4081d

14A005

Power luggage compartment lid module

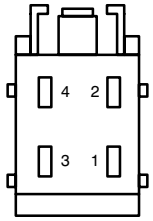

F04137

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	57 (BK)	Ground
4	1190 (YE/BK)	Voltage supplied at all times (overload protected)

C4082

14N139

Parking aid radar sensor

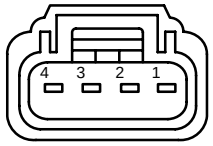

F04162

Pin	Circuit	Circuit function
1	48 (BK)	Shield
2	1443 (WH/LB)	signal
3	1438 (DG)	Ground
4	1437 (BK/PK)	Power

C4087

14A005

Air suspension disable switch



F03301

Pin	Circuit	Circuit function
1	635 (YE)	to, Air suspension module (3C142)
2	–	not used
3	417 (VT/OG)	Air suspension disable switch, feed

C4116

14A005

EVAP canister vent control solenoid

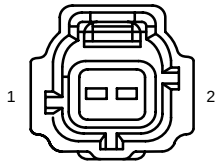

F02103

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C4168

14A005

Inertia Fuel Shutoff (IFS) switch (9D362)



F03032

Pin	Circuit	Circuit function
1	866 (WH)	Inertia Fuel Shutoff (IFS) switch (9D362), switched output
2	366 (RD/BK)	Fuel pump relay, switched output
3	–	not used