C218b

14401

P140
Air bag sliding contact

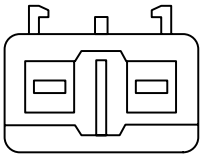

F02297

Pin	Circuit	Circuit Function
A	614 (GY/OG)	Driver air bag, feed, monitor
B	615 (GY/WH)	Driver air bag, return

C220a

14401

A30
Instrument cluster

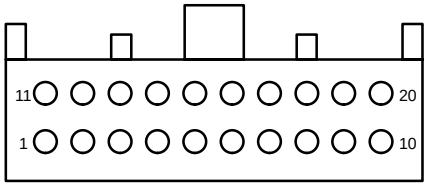

F20037

Pin	Circuit	Circuit Function
1	-	not used
2	158 (BK/PK)	Key warning switch, input
3	-	not used
4	-	not used
5	1011 (TN/OG)	Instrument illumination
6	29 (YE/WH)	Fuel pump/fuel gauge sender
7	1169 (WH/LB)	Transmission range sensor, signal
8	1168 (YE/BK)	Transmission range sensor, signal
9	1167 (WH/BK)	Transmission range sensor, signal
10	-	not used
11	1166 (YE/RD)	Transmission range sensor, signal
12	-	not used
13	-	not used
14	12 (LG/BK)	Switched, Ground
15	930 (VT/LG)	Door ajar indicator, control
16	1083 (LB/BK)	Air bag, tone driver
17	-	not used
18	-	not used
19	-	not used
20	-	not used

C220b

14401

A30
Instrument cluster

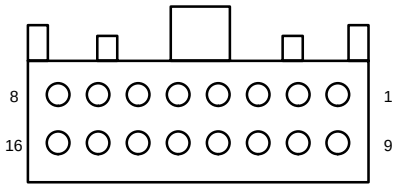

F16085

Pin	Circuit	Circuit Function
1	140 (BK/PK)	Voltage supplied in reverse
2	1165 (WH/RD)	Switched, Ground
3	469 (LG)	Instrument cluster, feed, to, Safety belt buckle switch
4	-	not used
5	1415 (LB/YE)	Switched, Ground
6	603 (DG)	Anti–lock brake indicator, control
7	398 (BK/YE)	Anti–lock brake indicator, control
8	784 (LB/BK)	Four–wheel drive, indicator, Low
9	-	not used
10	704 (DG/LG)	Voltage supplied in Start and Run (overload protected)
11	608 (BK/YE)	Air bag indicator, control
12	794 (LB)	Low coolant level switch, signal
13	3 (LG/WH)	Turn lamps, feed, left front
14	-	not used
15	203 (OG/LB)	Cruise set, indicator, control
16	162 (LG/RD)	Park brake switch