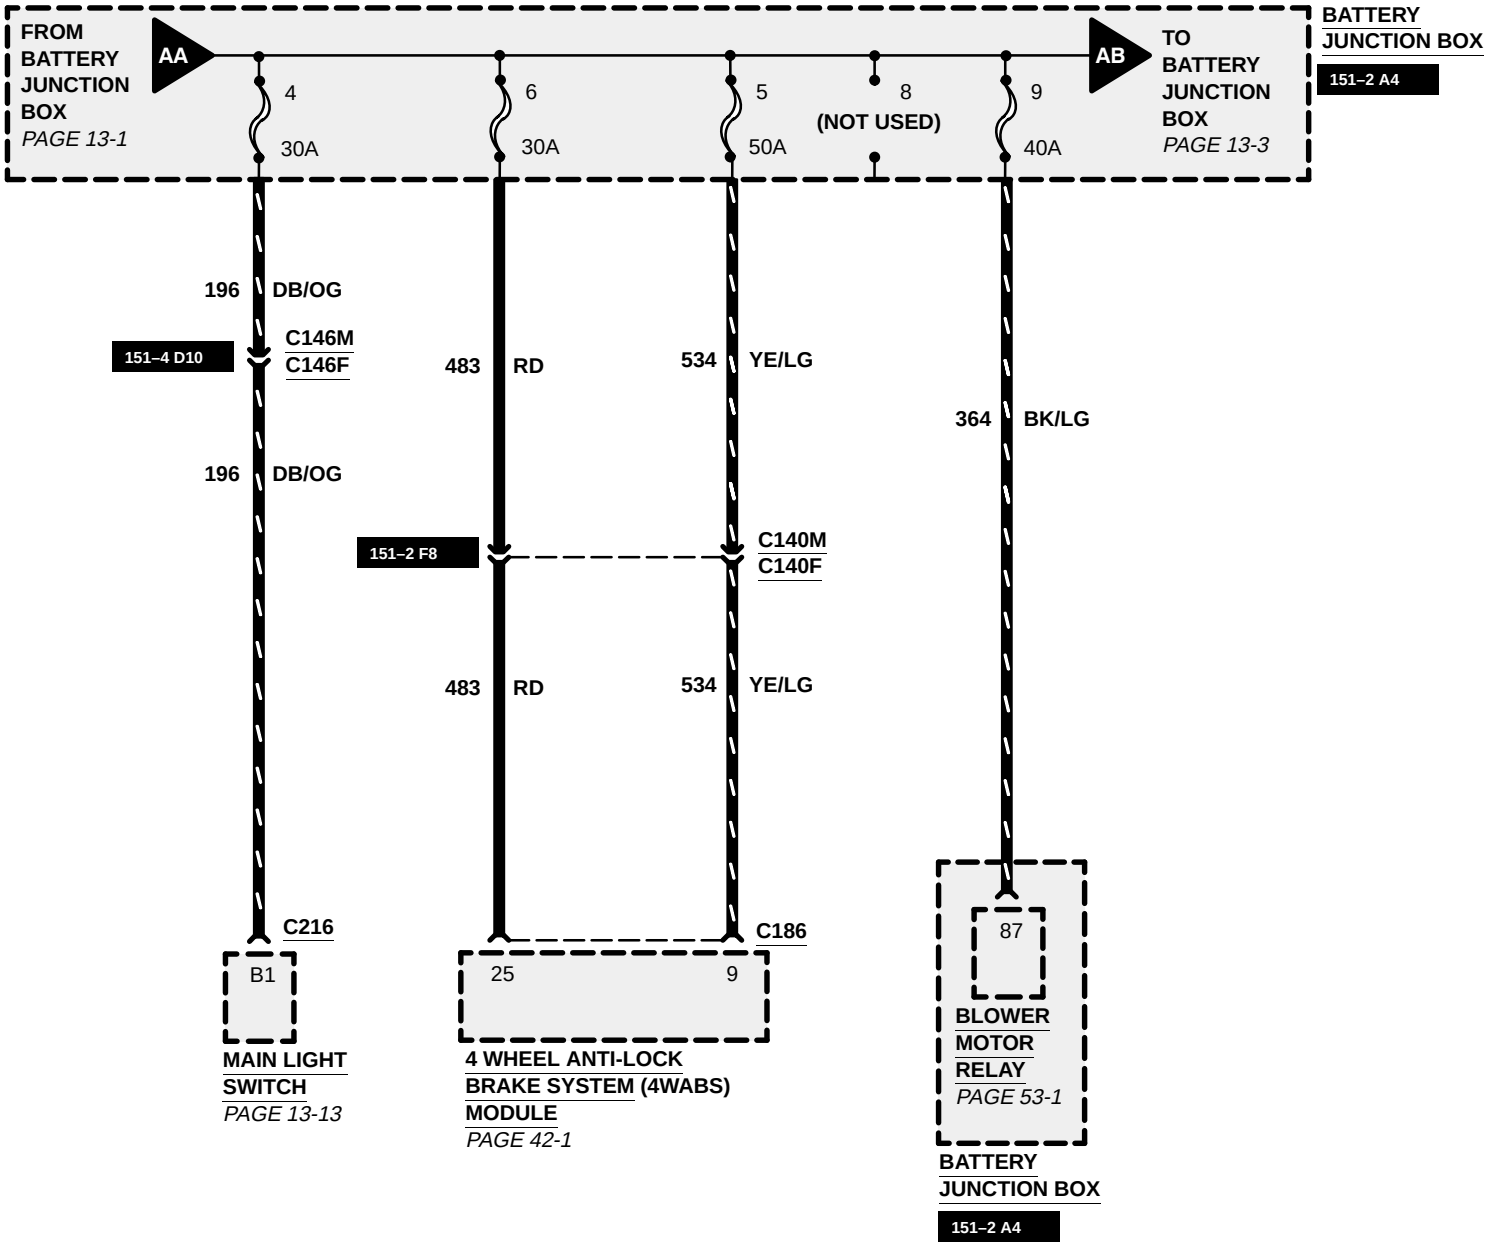
FROM BATTERY JUNCTION BOX
PAGE 13-1
AA
4
30A
6
30A
5
50A
8
(NOT USED)
9
40A
AB
TO BATTERY JUNCTION BOX
PAGE 13-3
BATTERY JUNCTION BOX
151–2 A4
196 DB/OG
151–4 D10
C146M
C146F
196 DB/OG
483 RD
534 YE/LG
364 BK/LG
151–2 F8
C140M
C140F
483 RD
534 YE/LG
C216
B1
MAIN LIGHT SWITCH
PAGE 13-13
C186
25
9
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
87
BLOWER MOTOR RELAY
PAGE 53-1
BATTERY JUNCTION BOX
151–2 A4