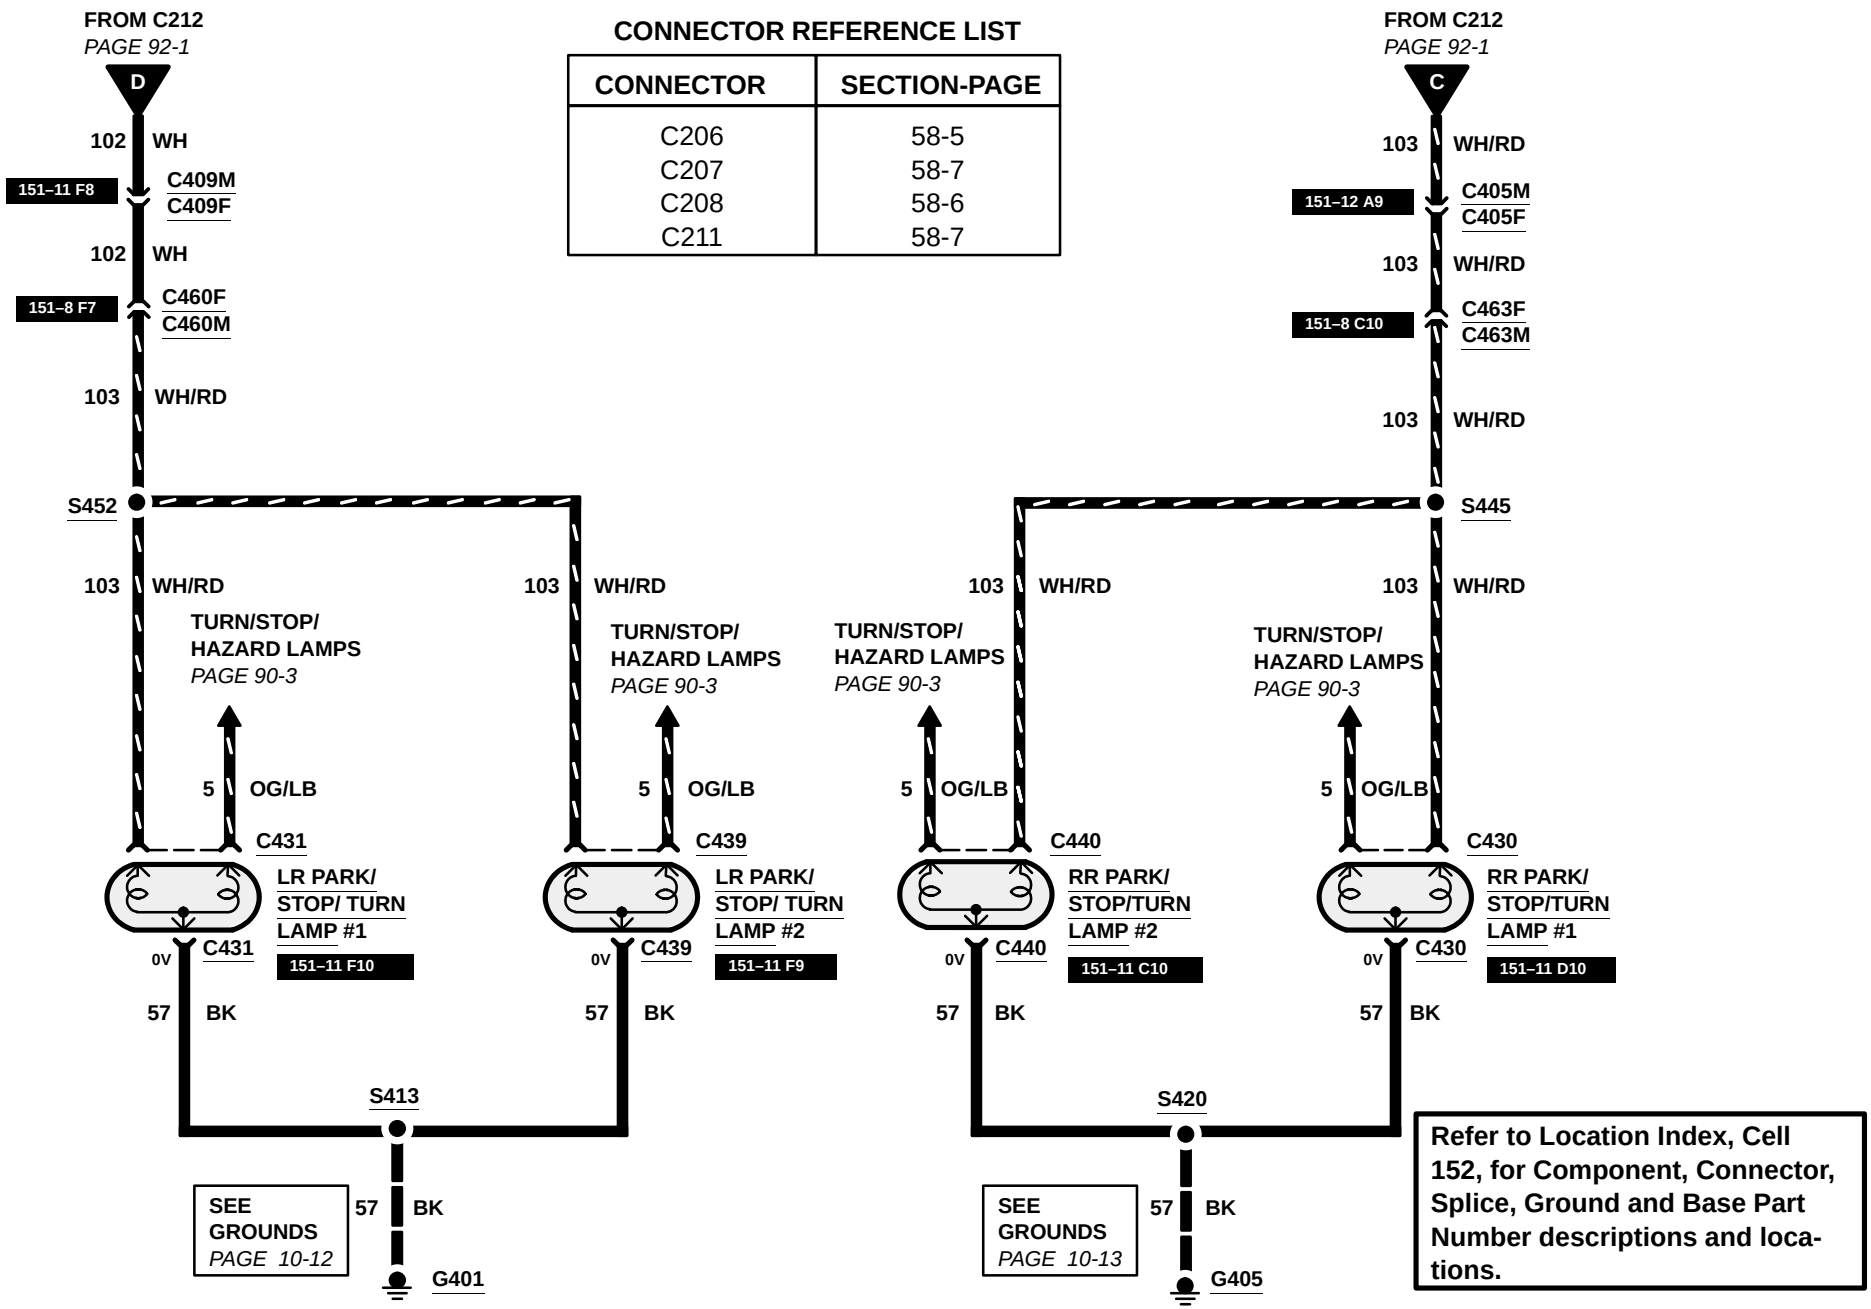

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C206	58-5
C207	58-7
C208	58-6
C211	58-7

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.