C376

14A699

Driver memory backrest sensor

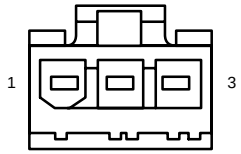

F03111

Pin	Circuit	Circuit function
1	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
2	445 (OG/LB)	Backrest forward/rearward sensor
3	447 (OG/RD)	Sensor, return, from, Driver seat module (14C718)

C383

14B719

Power seat motor assembly, left

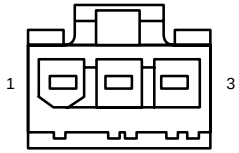

F03111

Pin	Circuit	Circuit function
1	446 (OG/WH)	Sensor, feed, Driver seat module (14C718)
2	443 (LG/RD)	Front height motor, Sensor
3	447 (OG/RD)	Sensor, return, Driver seat module (14C718)

C401a

14A005

Vehicle Emergency Message System (VEMS) module

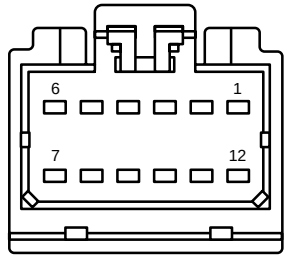

F12105

Pin	Circuit	Circuit function
1	828 (VT/LB)	Voltage supplied at all times (overload protected)
2	1880 (WH)	VEMS serial communication interface receive data from PSE
3	1882 (LG)	VEMS status mode
4	1881 (RD)	VEMS serial communication interface transmit data to PSE
5	915 (PK/LB)	SCP Bus –
6	694 (BK/LG)	Ground
7	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
8	–	not used
9	1883 (LB)	VEMS Transmit audio to PSE
10	1884 (OG)	VEMS Receive audio from PSE
11	914 (TN/OG)	SCP Bus +
12	1885 (BK)	VEMS Audio ground from PSE