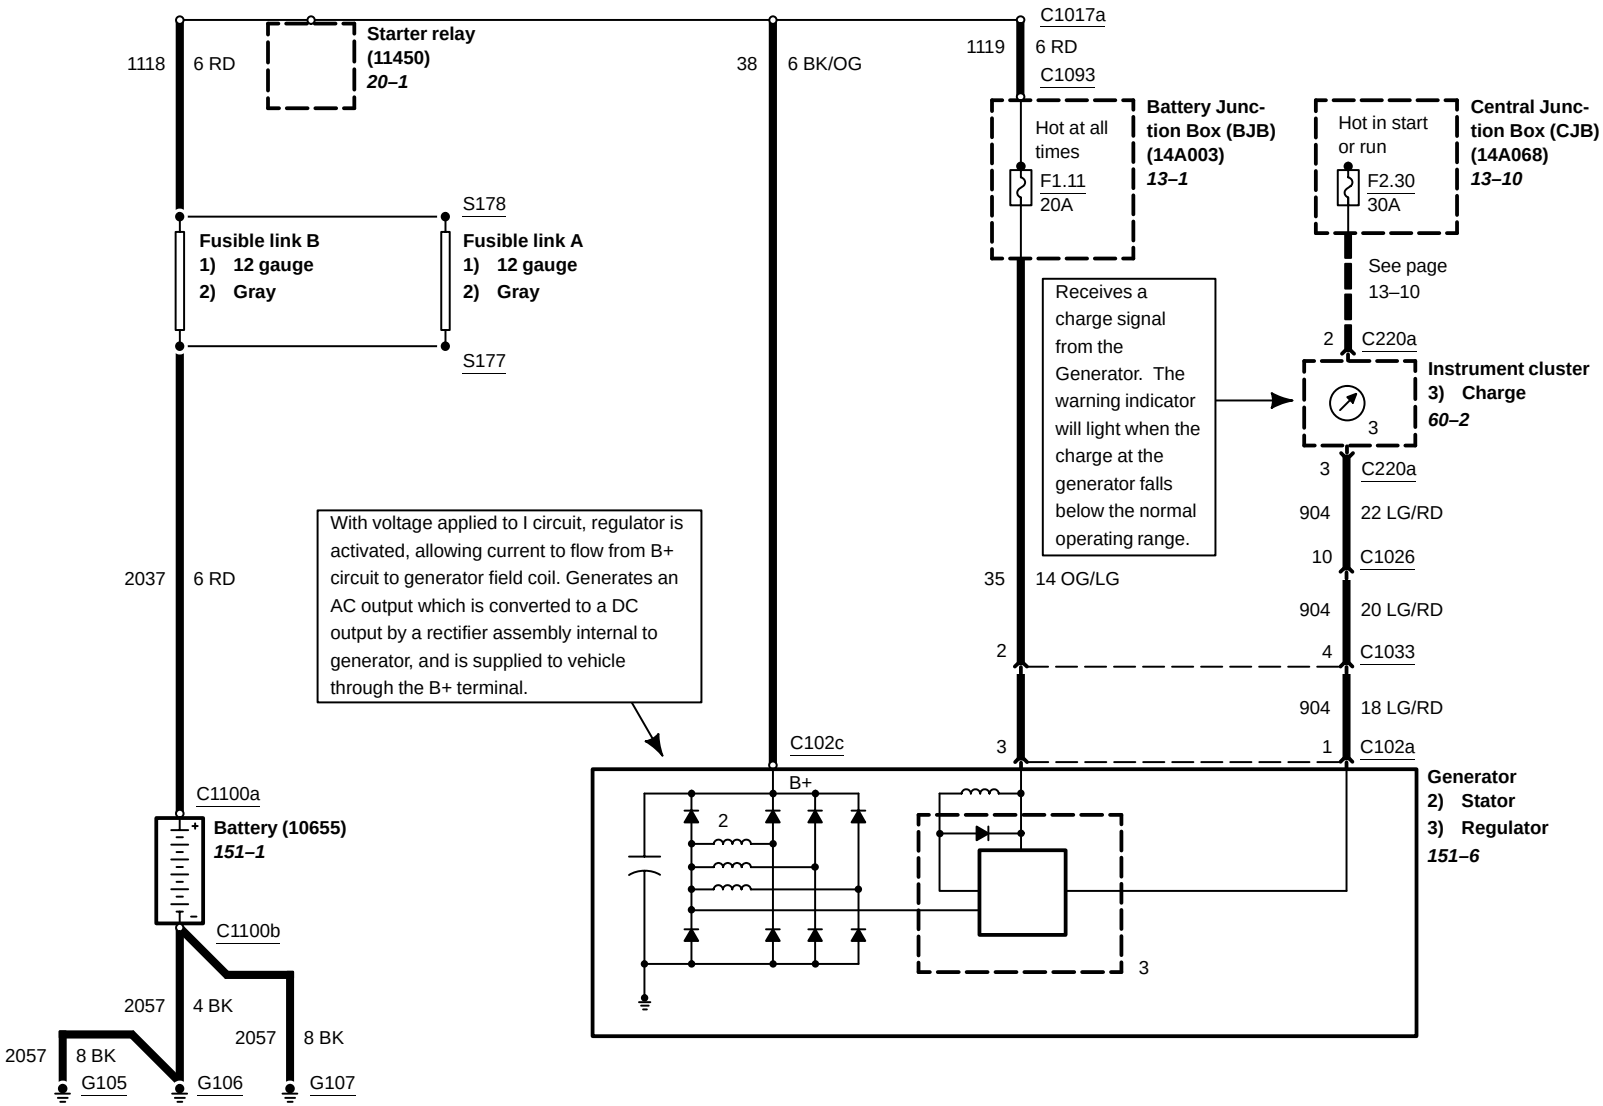
1118
6 RD
Starter relay
(11450)
20–1
38
6 BK/OG
1119
6 RD
C1017a
C1093
Hot at all
times
F1.11
20A
Battery Junc-
tion Box (BJB)
(14A003)
13–1
Hot in start
or run
F2.30
30A
Central Junc-
tion Box (CJB)
(14A068)
13–10
See page
13–10
S178
Fusible link B
1) 12 gauge
2) Gray
Fusible link A
1) 12 gauge
2) Gray
S177
Receives a
charge signal
from the
Generator. The
warning indicator
will light when the
charge at the
generator falls
below the normal
operating range.
2
C220a
Instrument cluster
3) Charge
60–2
3
3
C220a
904
22 LG/RD
10
C1026
904
20 LG/RD
4
C1033
904
18 LG/RD
1
C102a
2037
6 RD
With voltage applied to I circuit, regulator is
activated, allowing current to flow from B+
circuit to generator field coil. Generates an
AC output which is converted to a DC
output by a rectifier assembly internal to
generator, and is supplied to vehicle
through the B+ terminal.
35
14 OG/LG
2
C102c
B+
3
Generator
2) Stator
3) Regulator
151–6
C1100a
Battery (10655)
151–1
C1100b
2057
4 BK
2057
8 BK
2057
8 BK
G105
G106
G107