C225

14401

Y281
Center image amplifier

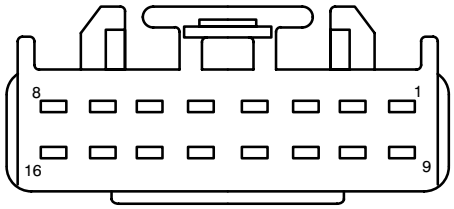

F16029

Pin	Circuit	Circuit function
1	1-MD12 (WH)	Center image amplifier, audio, In, Audio signal positive, (+)
2	2-MD12 (GY)	Center image amplifier, audio, In, Audio signal negative, (–)
3	48-MD12	Center image amplifier, audio, Drain wire
4	–	not used
5	8-MD31 (WH/GN)	Center image speaker, right, Audio signal positive, (+)
6	10-MD31 (GY/OG)	Center image speaker, right, Audio signal negative, (–)
7	8-MD30 (WH/BU)	Center image speaker, left, Audio signal positive, (+)
8	10-MD30 (GY/VT)	Center image speaker, left, Audio signal negative, (–)
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	7-MD12 (YE)	Center image amplifier, Enable
14	–	not used
15	31-MD12 (BK/YE)	Ground
16	29-MD12 (OG/YE)	Voltage supplied at all times (overload protected)

C226

14401

B36
Steering position sensor (18B015)



F04027

Pin	Circuit	Circuit function
1	9–CC16 (BN/YE)	Sensor signal return (reference/ground)
2	8-CC18 (WH/RD)	Sensor signal
3	10-CC17 (GY)	Signal 2 (Y–direction, reverse, downward)
4	15-CC16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)