C701

14632

N111
Window adjust
switch, left rear

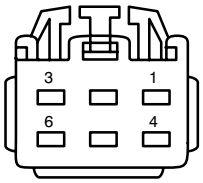

F06213

Pin	Circuit	Circuit Function
1	316 (YE/LB)	Window switch, feed, left rear, Up
2	884 (YE/BK)	Window switch, to, Window motor, left rear
3	170 (RD/LB)	Accessory delay relay, switched power, output
4	-	not used
5	885 (YE/LB)	Window switch, to, Window motor, left rear
6	317 (GY/OG)	Window switch, feed, left rear, Down

C702

14632/19A017

Y17
Speaker, left rear

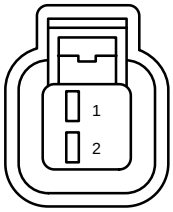

F02069

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Speaker, left rear +
2	803 (BN/PK)	Speaker, left rear -

C703

14632

M116
Power window mo-
tor, left rear

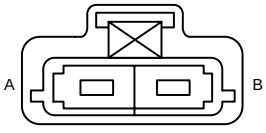

F02311

Pin	Circuit	Circuit Function
A	884 (YE/BK)	Window switch, to, Window motor, left rear
B	885 (YE/LB)	Window switch, to, Window motor, left rear

C704

14632/19A017

M64
Door lock actuator,
left rear

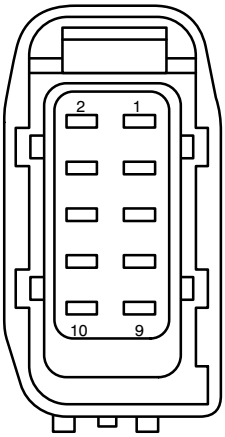

F10089

Pin	Circuit	Circuit Function
1	-	not used
2	117 (PK/BK)	Door lock, output
3	-	not used
4	-	not used
5	-	not used
6	57 (BK)	Ground
7	-	not used
8	760 (PK/LB)	Door ajar switch, left rear
9	-	not used
10	118 (PK/OG)	Door unlock, output