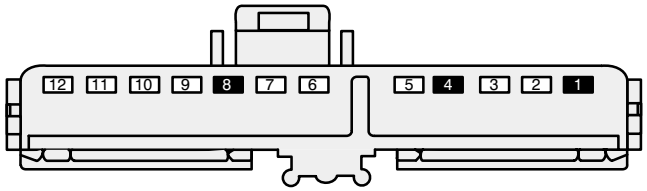

* ALLISON MD TRANSMISSION
** ALLISON 2000/2400 TRANSMISSION

C213
INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	464 (BK/PK)	“Wait to Start” Indicator
3	643 (RD)	“Water in Fuel” Indicator
4	–	NOT USED
5	450 (DG/LG)	“Safety Belt” Indicator
6	*115 (LG/BK)	“Do Not Shift” Indicator
	**125 (DB/WH)	“Do Not Shift” Indicator
7	658 (PK/LG)	“Engine Warn” Indicator
8	–	NOT USED
9	–	NOT USED
	** 123 (RD)	“Range Inhbt” Indicator
10	12 (LG/BK)	High Beam Indicator
11	603 (DG)	“ABS” Indicator
12	57 (BK)	Ground

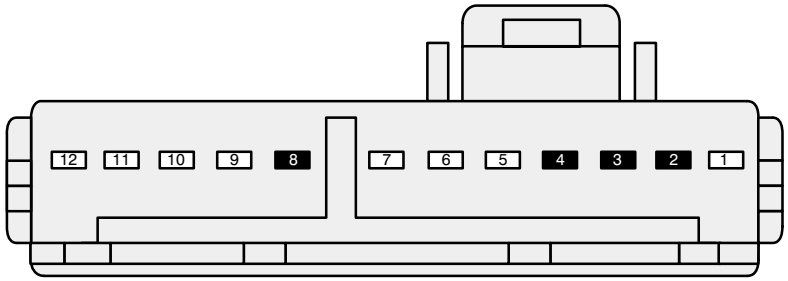

* CUMMINS
** HYDRAULIC

C215
INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	617 (PK/OG)	“Engine Shut” Indicator
2	–	NOT USED
3	–	NOT USED
4	–	NOT USED
5	20 (WH/LB)	“Emergency Brake Warning” Indicator
6	1044 (WH/YE)	“Alternator Warning” Indicator Power (Hot at All Times)
7	904 (LG/RD)	“Alternator Warning” Indicator
8	–	NOT USED
9	977 (VT/WH)	“Brake Warn” Indicator
10	162 (LG/RD)	“Park Brake” Indicator
	**338 (TN/RD)	”Park Brake” Indicator
11	*618 (PK/LG)	“Eng Prot” Indicator
12	640 (RD/YE)	Power (Hot in Start or Run)