C701

14A005

Window adjust switch, left rear (14A412)

* without heated seats
** with heated seats

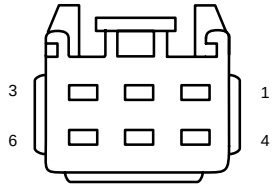

F06214

Pin	Circuit	Circuit function
1	31-LH16 (BK/OG)	Illumination, Ground
2	10-AJ14A (GY/VT)	Down, switch sense
3	7-AJ14A (YE/BU)	Reference voltage
4	*64S-LH16 (BU/WH)	Illumination, feed
	**64S-LH16A (BU/WH)	Illumination, feed
5	8-AJ14A (WH/BU)	Up, switch sense
6	–	not used

C702

14633

Speaker, left rear (18808)

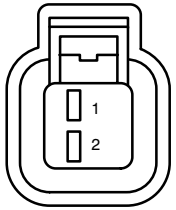

F02069

Pin	Circuit	Circuit function
1	8-MD11 (WH/VT)	Speaker, left rear (18808) +
2	10-MD11 (GY/WH)	Speaker, left rear (18808) –

C703

14633

Power window motor, left rear (23394)

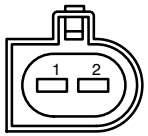

F02065

Pin	Circuit	Circuit function
1	35-AJ13 (VT/BU)	Power window motor, left rear (23394) +/–
2	34-AJ13 (BU/RD)	Power window motor, left rear (23394) +/=

C704

14633

Door lock actuator, left rear (218A43)

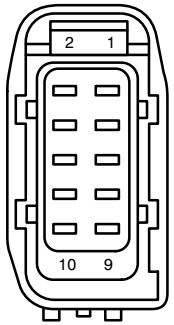

F10061

Pin	Circuit	Circuit function
1	–	not used
2	33-AA15 (YE/GN)	Door lock actuator, left rear (218A43) +/–
3	–	not used
4	–	not used
5	–	not used
6	31-AA58D (BK)	Ground
7	–	not used
8	31S-GL12 (BK/OG)	Door ajar switch, left rear, switch sense
9	–	not used
10	32-AA16 (WH/BK)	Door lock actuator, left rear (218A43) +/–