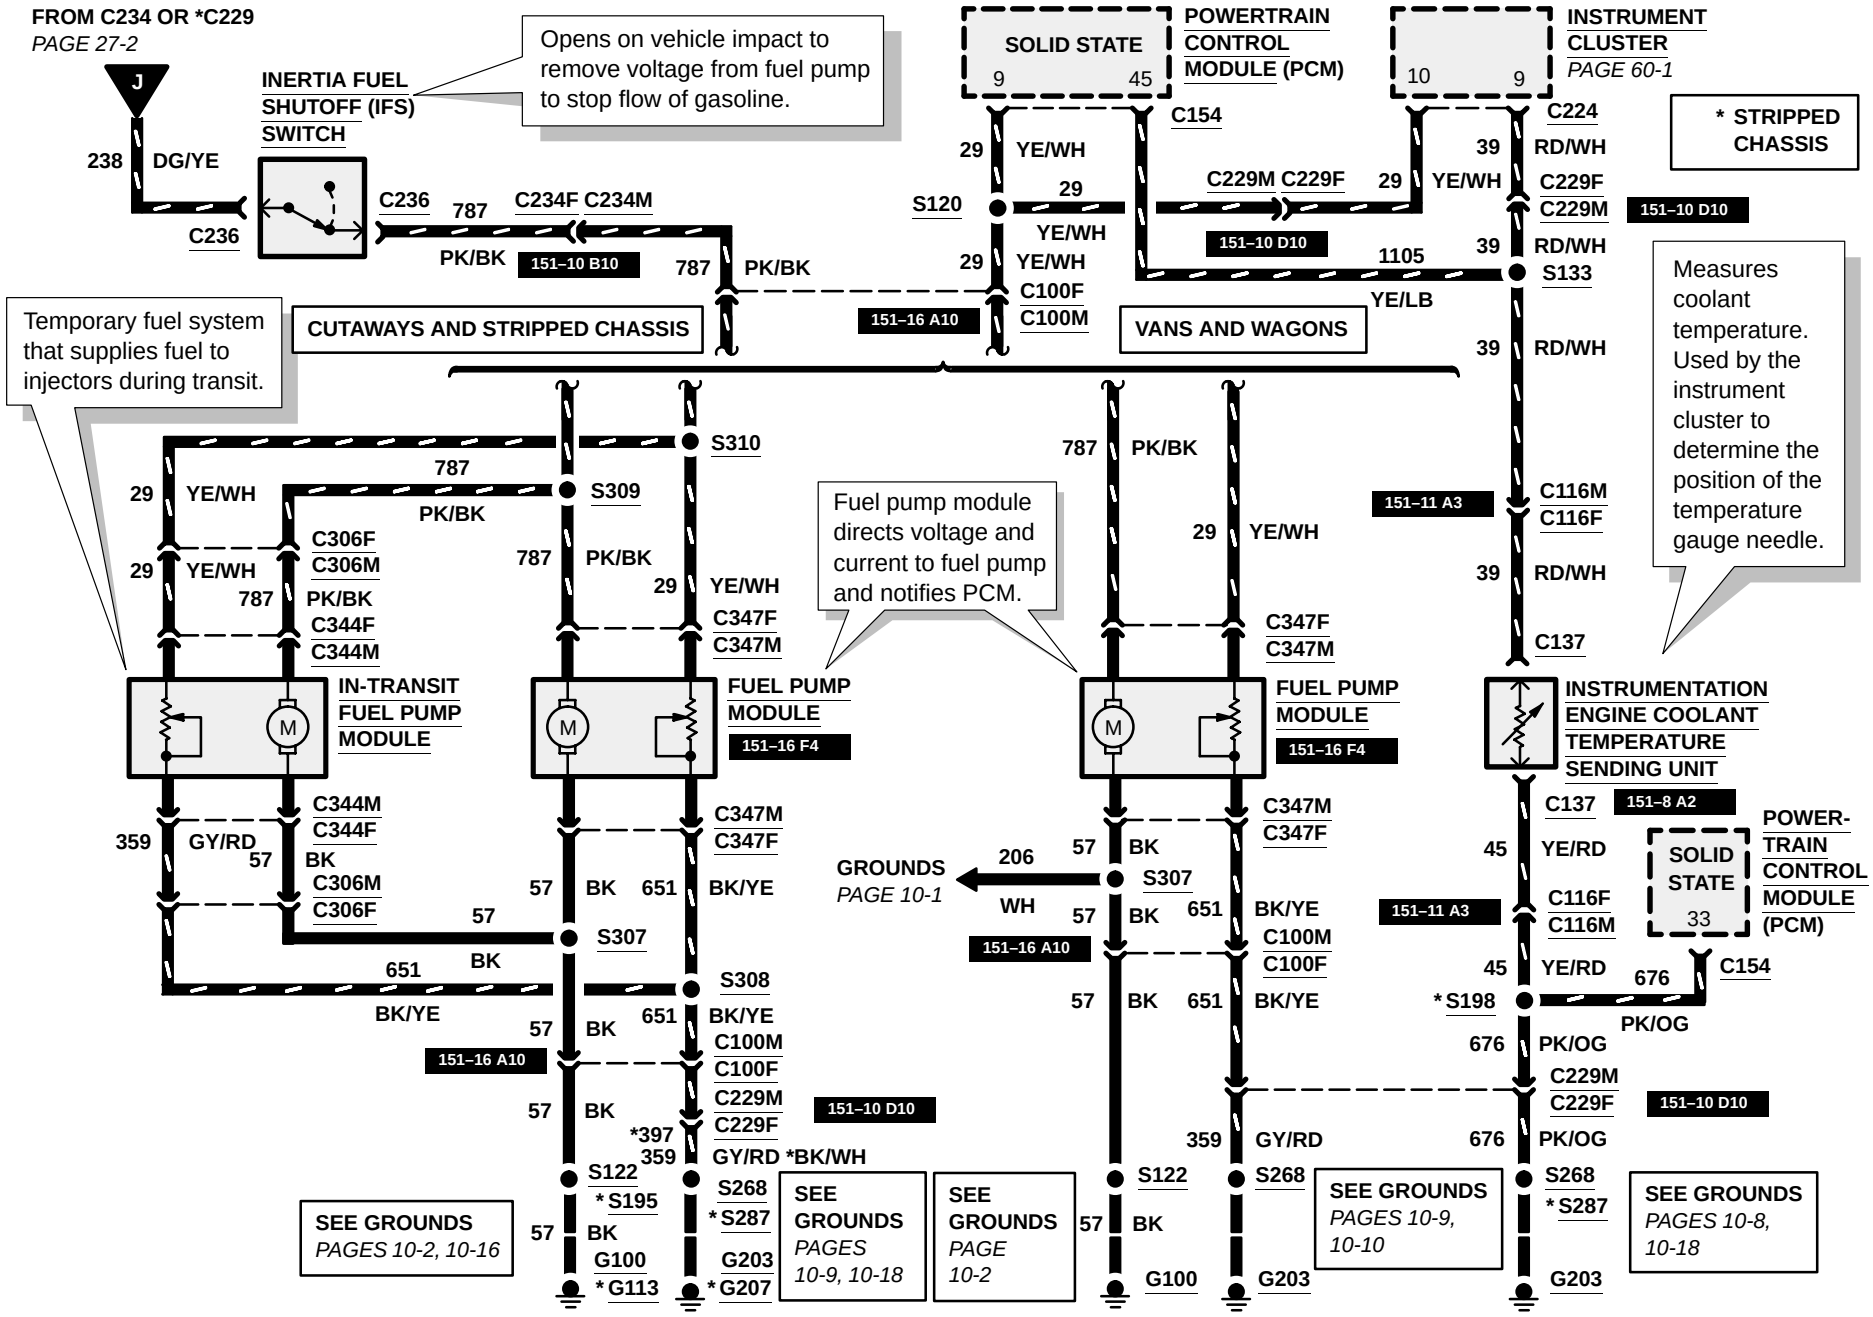
FROM C234 OR *C229
PAGE 27-2
J
INERTIA FUEL SHUTOFF (IFS) SWITCH
Opens on vehicle impact to remove voltage from fuel pump to stop flow of gasoline.
238 DG/YE
C236
C236
787
C234F C234M
PK/BK
151–10 B10
787 PK/BK
SOLID STATE
9
45
POWERTRAIN CONTROL MODULE (PCM)
C154
10
9
INSTRUMENT CLUSTER
PAGE 60-1
* STRIPPED CHASSIS
29 YE/WH
S120
29
YE/WH
C229M C229F
29 YE/WH
39 RD/WH
C224
C229F
C229M
151–10 D10
151–10 D10
29 YE/WH
C100F
C100M
151–16 A10
1105
YE/LB
39 RD/WH
S133
CUTAWAYS AND STRIPPED CHASSIS
VANS AND WAGONS
Temporary fuel system that supplies fuel to injectors during transit.
Measures coolant temperature. Used by the instrument cluster to determine the position of the temperature gauge needle.
39 RD/WH
C116M
C116F
151–11 A3
39 RD/WH
C137
S310
787
29 YE/WH
S309
PK/BK
787 PK/BK
29 YE/WH
C306F
C306M
29 YE/WH
787 PK/BK
C344F
C344M
C347F
C347M
787 PK/BK
29 YE/WH
C347F
C347M
Fuel pump module directs voltage and current to fuel pump and notifies PCM.
IN-TRANSIT FUEL PUMP MODULE
FUEL PUMP MODULE
151–16 F4
FUEL PUMP MODULE
151–16 F4
INSTRUMENTATION ENGINE COOLANT TEMPERATURE SENDING UNIT
C137
151–8 A2
POWER-TRAIN CONTROL MODULE (PCM)
SOLID STATE
33
C344M
C344F
359 GY/RD
57 BK
C306M
C306F
57 BK 651 BK/YE
57
S307
651 BK
BK/YE
S308
57 BK 651 BK/YE
C100M
C100F
151–16 A10
57 BK
C229M
C229F
151–10 D10
*397
359
GY/RD *BK/WH
S122
*S195
S268
*S287
G100
*G113
G203
*G207
SEE GROUNDS PAGES 10-2, 10-16
SEE GROUNDS PAGES 10-9, 10-18
SEE GROUNDS PAGE 10-2
GROUNDS PAGE 10-1
206
WH
C347F
C347M
57 BK
S307
57 BK 651 BK/YE
C100M
C100F
151–16 A10
57 BK 651 BK/YE
S122
57 BK
G100
S268
G203
SEE GROUNDS PAGES 10-9, 10-10
45 YE/RD
C116F
C116M
151–11 A3
45 YE/RD
676
C154
*S198
PK/OG
676 PK/OG
C229M
C229F
151–10 D10
359 GY/RD
676 PK/OG
S268
*S287
G203
SEE GROUNDS PAGES 10-8, 10-18