C504a

14631

N447
Master window adjust switch

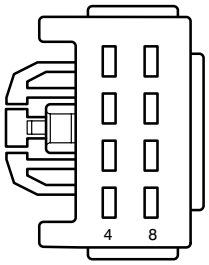

F08167

Pin	Circuit	Circuit Function
1	–	not used
2	320 (RD/BK)	Window switch, feed, right rear, Down
3	1505 (YE/RD)	Window switch, feed, right front, Down
4	313 (WH/YE)	Window switch, feed, right front, Up
5	–	not used
6	992 (WH/BK)	Master window adjust switch, feed, Up
7	991 (TN/LB)	Master window adjust switch, feed, Down
8	769 (GY/LB)	One–touch down power relay - fused feed

C505 (GN)

14631

N204
Door lock switch, driver side

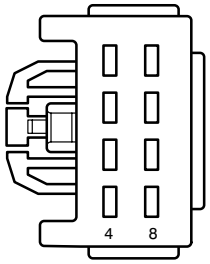

F08167

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
5	400 (LB/BK)	Accessory relay, switched power, output
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used

C504b

14631

N447
Master window adjust switch

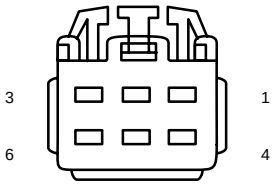

F06237

Pin	Circuit	Circuit Function
1	170 (RD/LB)	Window lockout, switched power, output
2	57 (BK)	Ground
3	319 (YE/BK)	Window switch, feed, right rear, Up
4	400 (LB/BK)	Accessory relay, switched power, output
5	316 (YE/LB)	Window switch, feed, left rear, Up
6	317 (GY/OG)	Window switch, feed, left rear, Down