C3070c (WH)

14A005

Rear Electronic Module (REM)

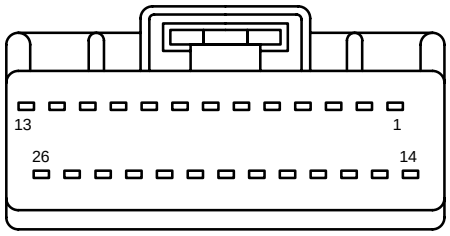

F26018

Pin	Circuit	Circuit function
1	1380 (TN/YE)	auxiliary mode door +/–
2	1375 (PK/YE)	auxiliary blend door +/–
3	1376 (BK/LB)	auxiliary blend door +/–
4	1387 (VT)	Power sliding door unit, LH side, Door lock actuator +/–
5	–	not used
6	–	not used
7	1388 (GY)	Power sliding door unit, LH side, Door lock actuator +/–
8	–	not used
9	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door +/–
10	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door +/–
11	–	not used
12	–	not used
13	1454 (TN/RD)	relay control battery feed
14	374 (DB/WH)	Trailer tow – Stoplamps, Left turn, control
15	378 (BN/YE)	Trailer tow – Stoplamps, Right turn, control
16	1432 (WH/VT)	Sliding door ajar switch, left, signal
17	1381 (WH/LB)	auxiliary mode door, position sense
18	1377 (TN/LG)	auxiliary blend door, position sense
19	–	not used
20	121 (YE/BK)	Key pad button 7/8, input
21	79 (LG/RD)	Key pad button 3/4, Key pad button 9/0, input
22	–	not used
23	1357 (LB/YE)	Fuel tank sender, Signal return
24	–	not used
25	1205 (BK)	Ground
26	1205 (BK)	Ground