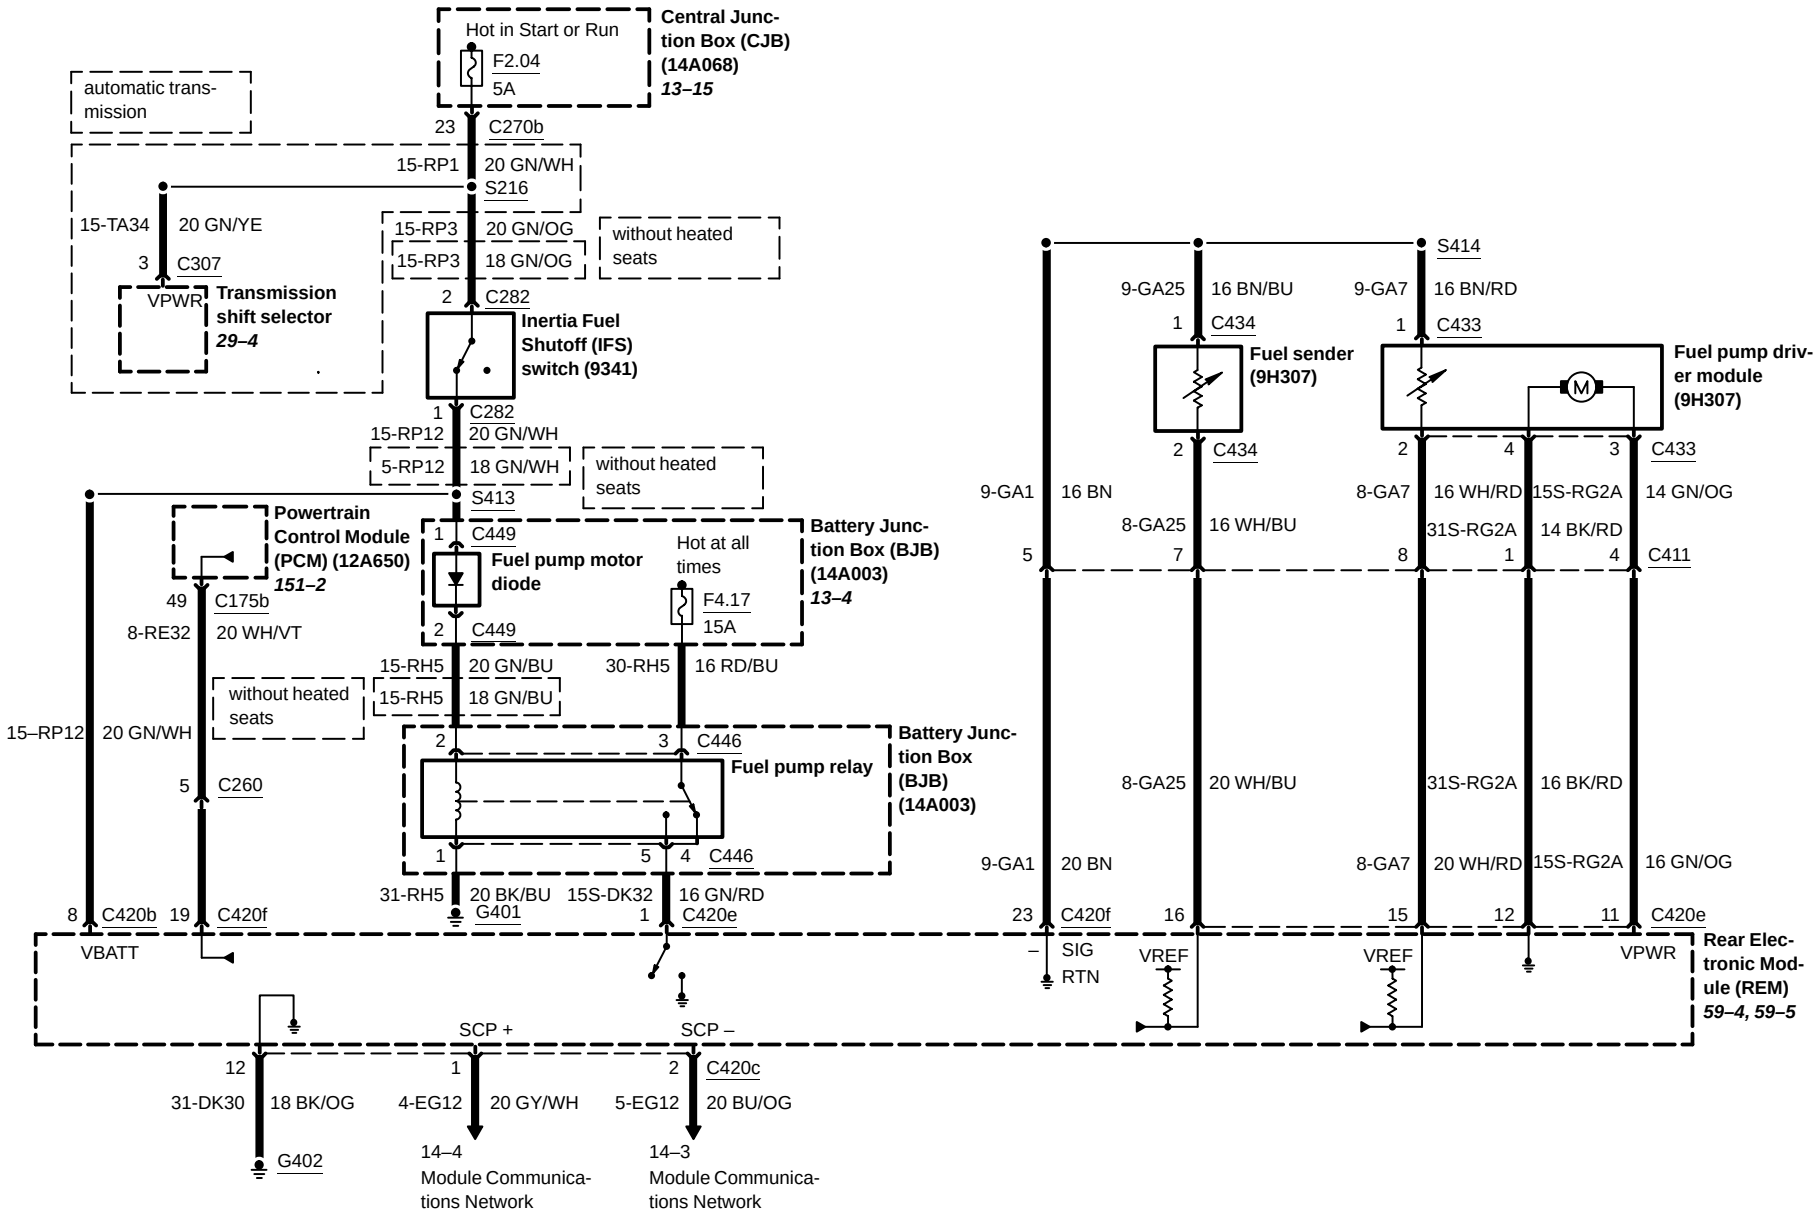
Central Junction Box (CJB) (14A068) 13–15
Hot in Start or Run
F2.04
5A
automatic transmission
23 C270b
15-RP1 20 GN/WH S216
15-TA34 20 GN/YE
3 C307
VPWR
Transmission shift selector 29–4
15-RP3 20 GN/OG
15-RP3 18 GN/OG
without heated seats
2 C282
Inertia Fuel Shutoff (IFS) switch (9341)
1 C282
15-RP12 20 GN/WH
5-RP12 18 GN/WH
without heated seats
S413
Powertrain Control Module (PCM) (12A650) 151–2
1 C449
Fuel pump motor diode
Hot at all times
F4.17
15A
Battery Junction Box (BJB) (14A003) 13–4
49 C175b
8-RE32 20 WH/VT
2 C449
15-RH5 20 GN/BU
15-RH5 18 GN/BU
30-RH5 16 RD/BU
without heated seats
15–RP12 20 GN/WH
2 3 C446
Fuel pump relay
Battery Junction Box (BJB) (14A003)
5 C260
1 5 4 C446
31-RH5 20 BK/BU
15S-DK32 16 GN/RD
G401
8 C420b 19 C420f
1 C420e
VBATT
SCP + SCP –
12 1 2 C420c
31-DK30 18 BK/OG
4-EG12 20 GY/WH
5-EG12 20 BU/OG
G402
14–4 Module Communications Network
14–3 Module Communications Network
S414
9-GA25 16 BN/BU
9-GA7 16 BN/RD
1 C434
1 C433
Fuel sender (9H307)
Fuel pump driver module (9H307)
2 C434
2 4 3 C433
9-GA1 16 BN
8-GA7 16 WH/RD
15S-RG2A 14 GN/OG
8-GA25 16 WH/BU
31S-RG2A 14 BK/RD
5 7 8 1 4 C411
8-GA25 20 WH/BU
31S-RG2A 16 BK/RD
9-GA1 20 BN
8-GA7 20 WH/RD
15S-RG2A 16 GN/OG
23 C420f 16 15 12 11 C420e
– SIG RTN
VREF
VREF
VPWR
Rear Electronic Module (REM) 59–4, 59–5