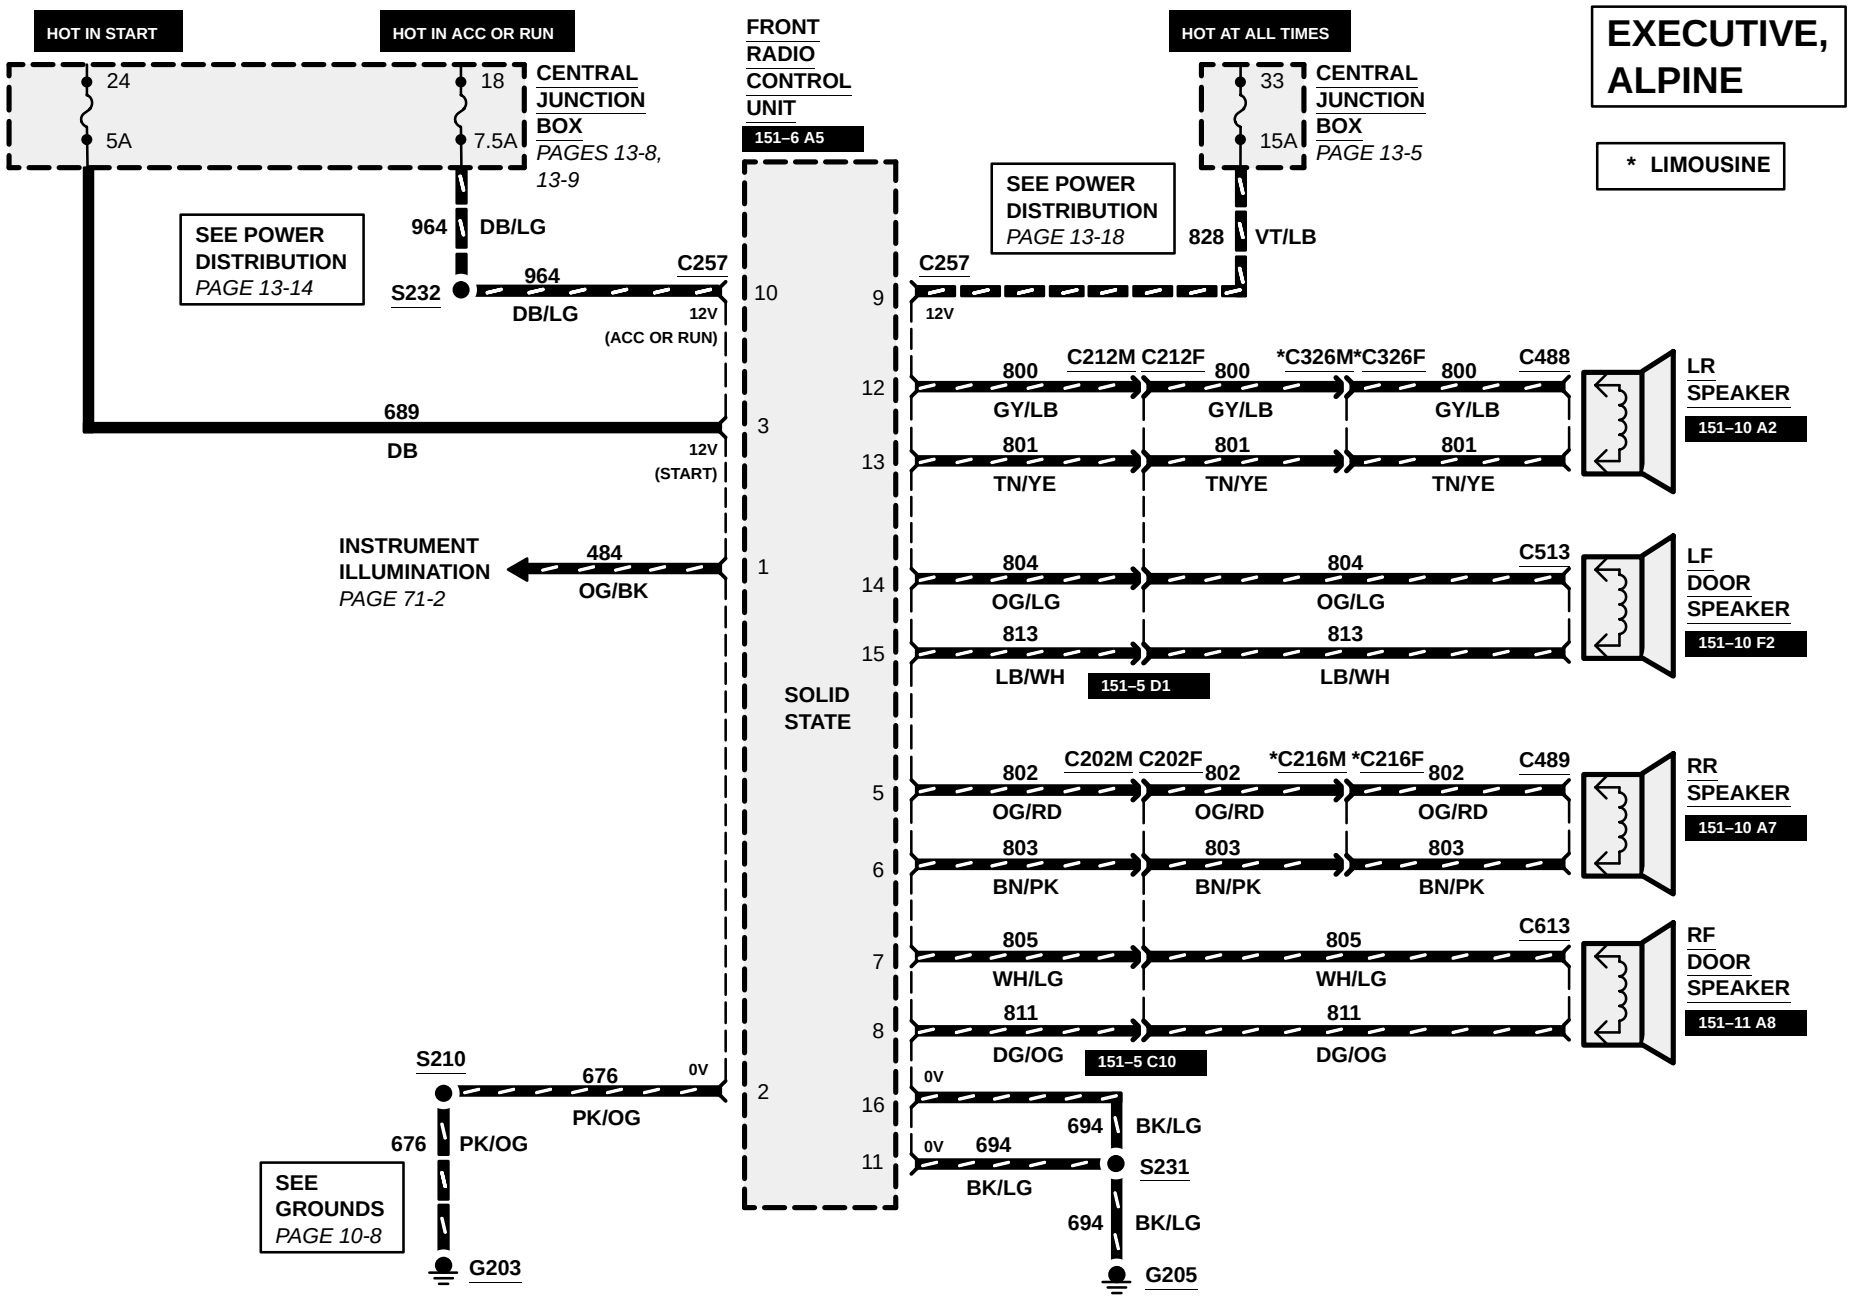
EXECUTIVE, ALPINE
* LIMOUSINE
HOT IN START
HOT IN ACC OR RUN
HOT AT ALL TIMES
FRONT RADIO CONTROL UNIT
151–6 A5
CENTRAL JUNCTION BOX
PAGES 13-8, 13-9
24
5A
18
7.5A
33
15A
CENTRAL JUNCTION BOX
PAGE 13-5
SEE POWER DISTRIBUTION
PAGE 13-14
SEE POWER DISTRIBUTION
PAGE 13-18
964 DB/LG
828 VT/LB
S232
C257
964 DB/LG
12V (ACC OR RUN)
689 DB
12V (START)
INSTRUMENT ILLUMINATION
PAGE 71-2
484 OG/BK
SOLID STATE
10
3
1
2
9
12V
C212M C212F *C326M*C326F C488
800 GY/LB
801 TN/YE
LR SPEAKER
151–10 A2
C513
804 OG/LG
813 LB/WH
151–5 D1
LF DOOR SPEAKER
151–10 F2
C202M C202F *C216M *C216F C489
802 OG/RD
803 BN/PK
RR SPEAKER
151–10 A7
C613
805 WH/LG
811 DG/OG
151–5 C10
RF DOOR SPEAKER
151–11 A8
S210
676 PK/OG
0V
694 BK/LG
S231
G203
G205
SEE GROUNDS
PAGE 10-8