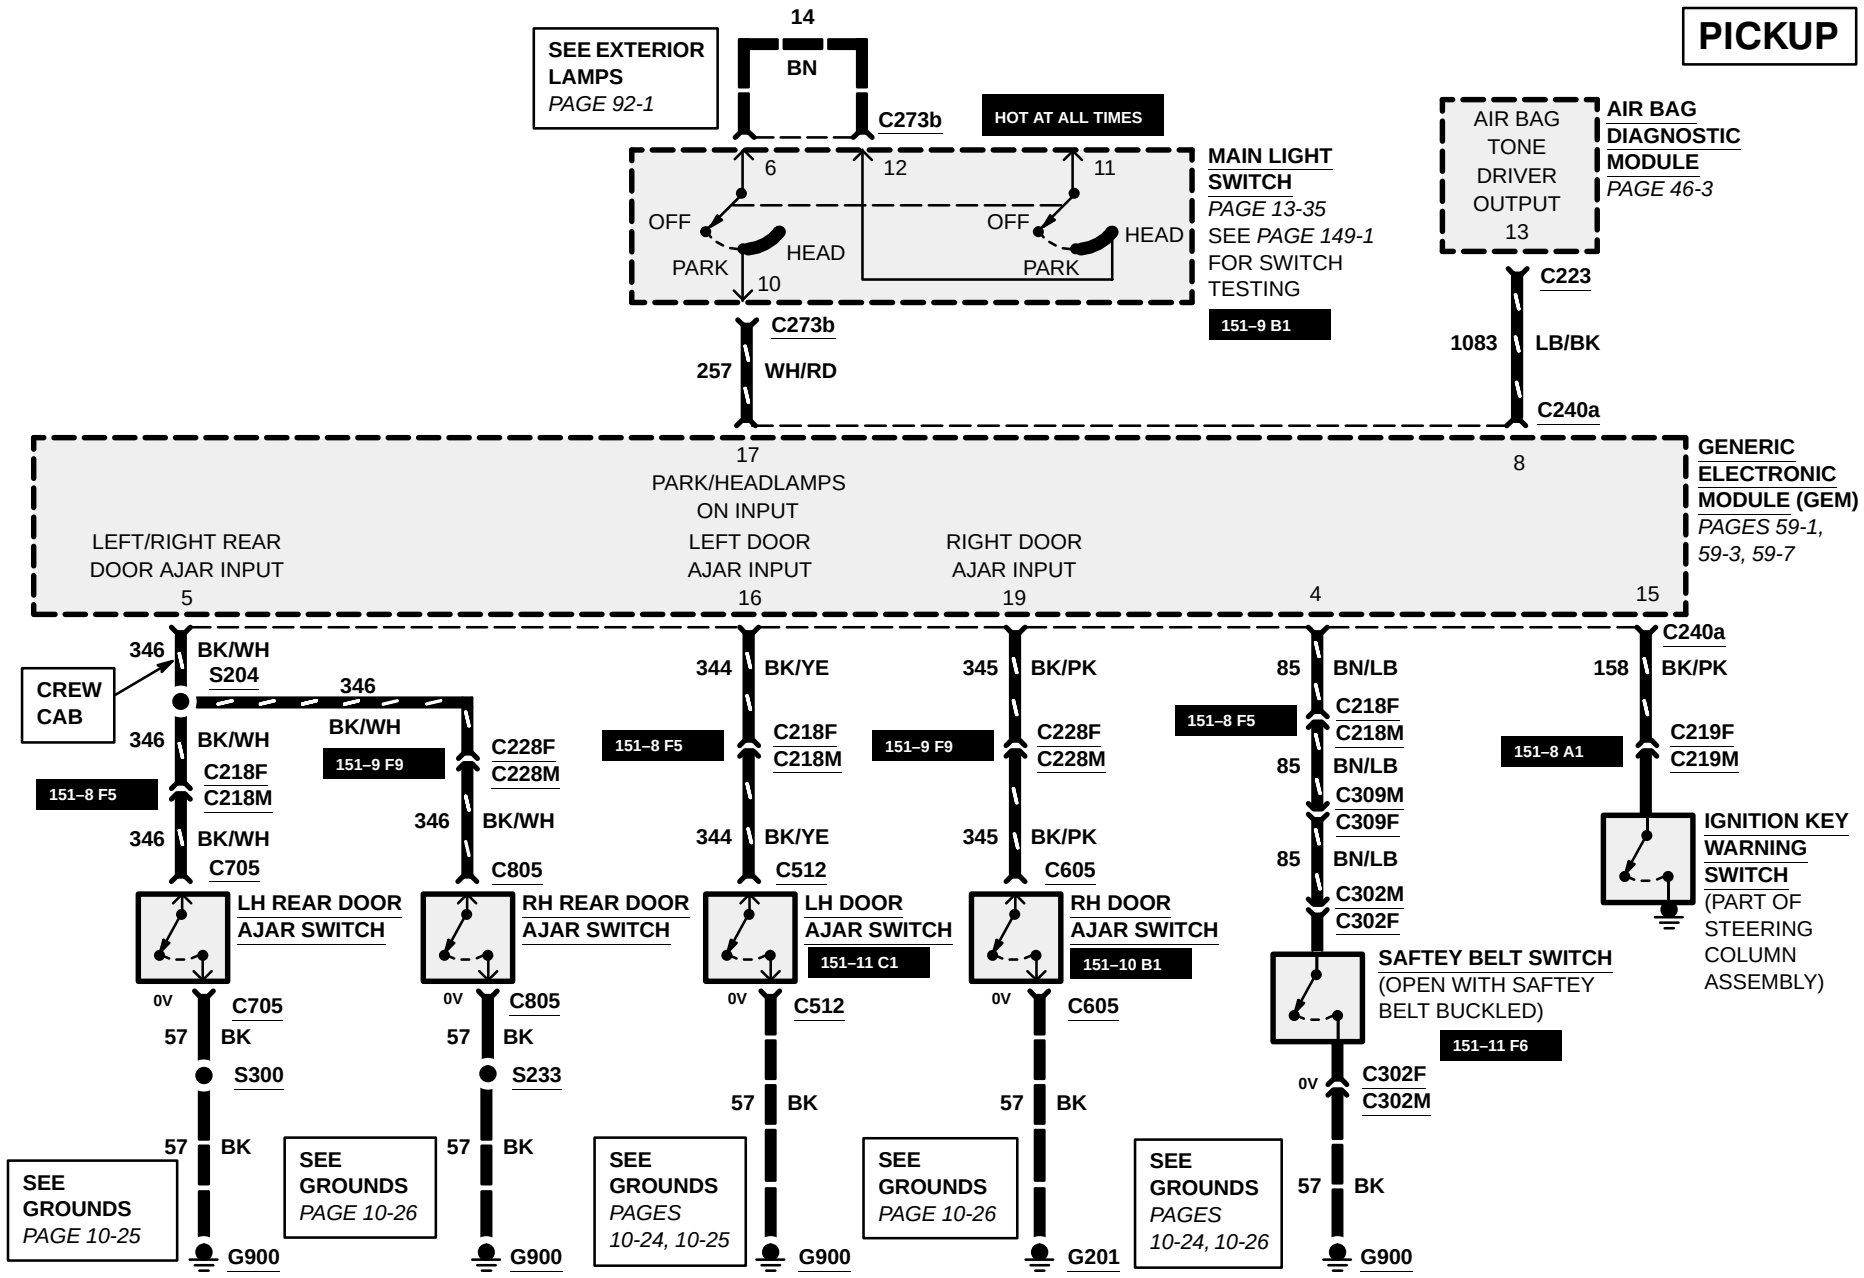
PICKUP
SEE EXTERIOR LAMPS
PAGE 92-1
14
BN
C273b
HOT AT ALL TIMES
MAIN LIGHT SWITCH
PAGE 13-35
SEE PAGE 149-1 FOR SWITCH TESTING
151–9 B1
OFF
PARK
HEAD
6
10
12
11
C273b
257 WH/RD
AIR BAG TONE DRIVER OUTPUT 13
AIR BAG DIAGNOSTIC MODULE
PAGE 46-3
C223
1083 LB/BK
C240a
8
GENERIC ELECTRONIC MODULE (GEM)
PAGES 59-1, 59-3, 59-7
17
PARK/HEADLAMPS ON INPUT
LEFT/RIGHT REAR DOOR AJAR INPUT
LEFT DOOR AJAR INPUT
RIGHT DOOR AJAR INPUT
5
16
19
4
15
CREW CAB
346 BK/WH S204
346 BK/WH C218F C218M
151–8 F5
346 BK/WH C705
LH REAR DOOR AJAR SWITCH
346 BK/WH
151–9 F9
C228F C228M
346 BK/WH C805
RH REAR DOOR AJAR SWITCH
344 BK/YE
151–8 F5
C218F C218M
344 BK/YE C512
LH DOOR AJAR SWITCH
151–11 C1
345 BK/PK
151–9 F9
C228F C228M
345 BK/PK C605
RH DOOR AJAR SWITCH
151–10 B1
85 BN/LB
151–8 F5
C218F C218M
85 BN/LB C309M C309F
85 BN/LB C302M C302F
SAFTEY BELT SWITCH
(OPEN WITH SAFTEY BELT BUCKLED)
151–11 F6
C240a
158 BK/PK
151–8 A1
C219F C219M
IGNITION KEY WARNING SWITCH
(PART OF STEERING COLUMN ASSEMBLY)
0V C705
57 BK S300
57 BK
SEE GROUNDS
PAGE 10-25
G900
0V C805
57 BK S233
57 BK
SEE GROUNDS
PAGE 10-26
G900
0V C512
57 BK
SEE GROUNDS
PAGES 10-24, 10-25
G900
0V C605
57 BK
SEE GROUNDS
PAGE 10-26
G201
0V C302F C302M
57 BK
SEE GROUNDS
PAGES 10-24, 10-26
G900