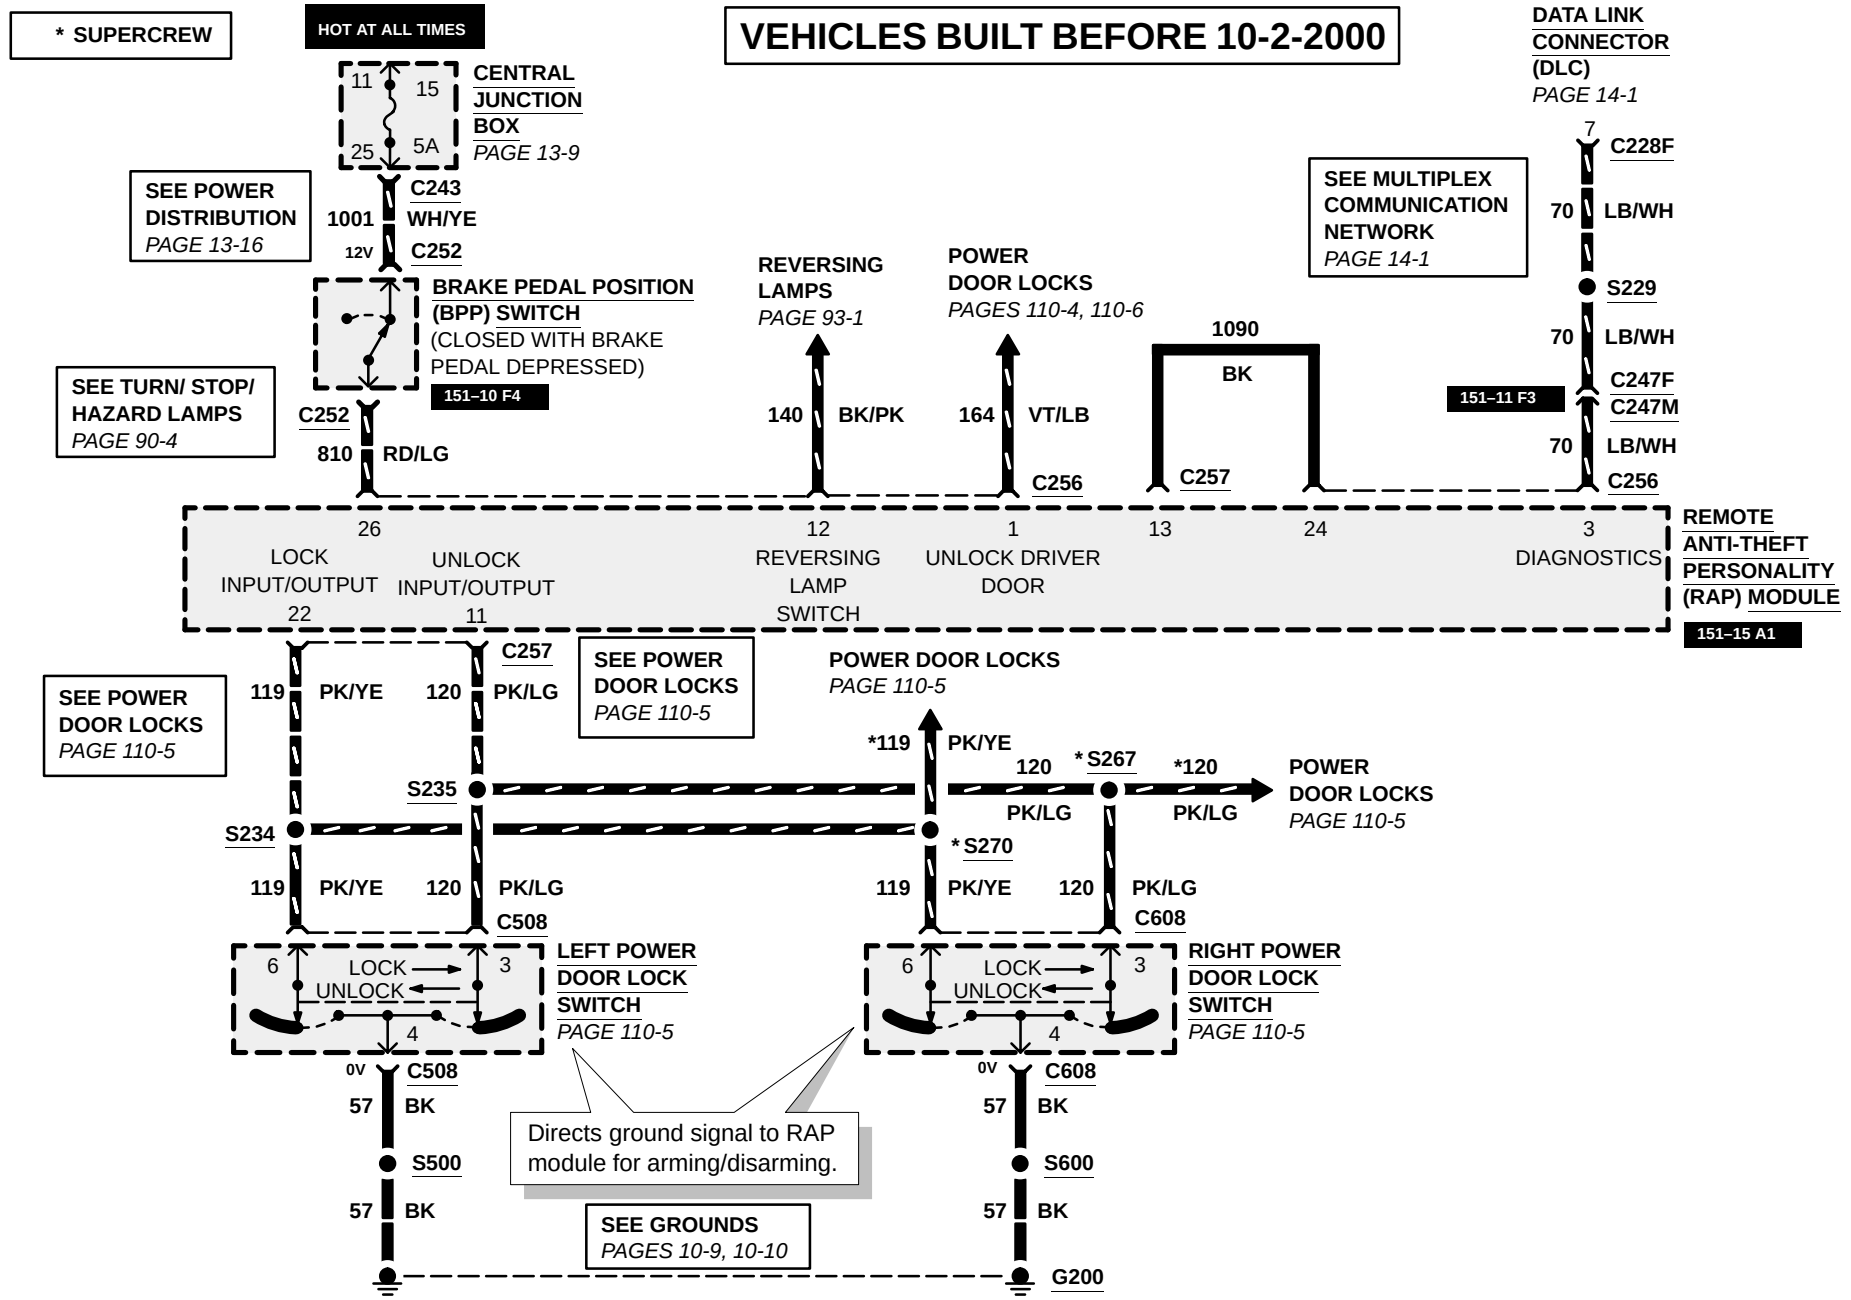
* SUPERCREW
HOT AT ALL TIMES
VEHICLES BUILT BEFORE 10-2-2000
DATA LINK CONNECTOR (DLC)
PAGE 14-1
CENTRAL JUNCTION BOX
PAGE 13-9
11
15
25
5A
SEE POWER DISTRIBUTION
PAGE 13-16
C243
1001
WH/YE
12V
C252
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–10 F4
SEE TURN/ STOP/ HAZARD LAMPS
PAGE 90-4
C252
810
RD/LG
REVERSING LAMPS
PAGE 93-1
140
BK/PK
POWER DOOR LOCKS
PAGES 110-4, 110-6
164
VT/LB
C256
1090
BK
C257
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
151–11 F3
7
C228F
70
LB/WH
S229
70
LB/WH
C247F
C247M
70
LB/WH
C256
26
LOCK INPUT/OUTPUT
22
UNLOCK INPUT/OUTPUT
11
12
REVERSING LAMP SWITCH
1
UNLOCK DRIVER DOOR
13
24
3
DIAGNOSTICS
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
151–15 A1
SEE POWER DOOR LOCKS
PAGE 110-5
C257
119
PK/YE
120
PK/LG
SEE POWER DOOR LOCKS
PAGE 110-5
POWER DOOR LOCKS
PAGE 110-5
*119
PK/YE
120
*S267
*120
POWER DOOR LOCKS
PAGE 110-5
PK/LG
PK/LG
S235
S234
*S270
119
PK/YE
120
PK/LG
C508
119
PK/YE
120
PK/LG
C608
6
LOCK
UNLOCK
3
4
LEFT POWER DOOR LOCK SWITCH
PAGE 110-5
6
LOCK
UNLOCK
3
4
RIGHT POWER DOOR LOCK SWITCH
PAGE 110-5
0V
C508
57
BK
S500
57
BK
0V
C608
57
BK
S600
57
BK
Directs ground signal to RAP module for arming/disarming.
SEE GROUNDS
PAGES 10-9, 10-10
G200