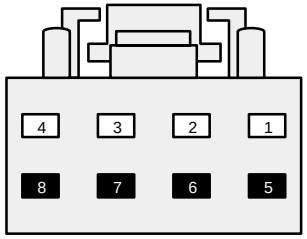

C215

RADIO

PIN	CIRCUIT	CIRCUIT FUNCTION
1	168 (RD/BK)	Radio Subwoofer High Audio (+)
2	167 (BN/OG)	Radio Subwoofer High Audio (–)
3	57 (BK)	Ground
4	173 (DG/VT)	Radio Subwoofer High Audio Mute
5	–	NOT USED
6	–	NOT USED
7	–	NOT USED
8	–	NOT USED