C322 (WH)

14N104

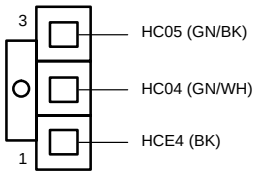

F03056

19D887

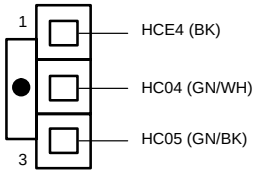

F03056

C323

14A333

N275
Seat heater switch, passenger side



F02129

Pin	Circuit	Circuit Function
1	SB11 (WH/RD)	Power window relay, switched output
2	SBE6 (BK)	Ground

C327 (GY)

14A507

M213
Door lock actuator assembly, right sliding door

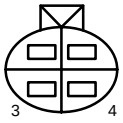

F04157

Pin	Circuit	Circuit Function
1	PH50 (GN/YE)	Door lock, output
2	PH31 (WH/RD)	Door unlock, output
3	SC24 (VT)	Door unlock, switch sense
4	PH46 (GN/YE)	Door lock, output

C329a (BK)

14A333

N432
Sliding door contact switch, right



F04163

Pin	Circuit	Circuit Function
1	–	not used
2	PH31 (WH/RD)	Door unlock, output
3	SC24 (VT)	Door unlock, switch sense
4	PH46 (GN/YE)	Door lock, output

C329b (WH)

14A507

N432
Sliding door contact switch, right

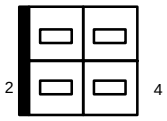

F04043

Pin	Circuit	Circuit Function
1	PH31 (WH/RD)	Door unlock, output
2	PH46 (GN/YE)	Door lock, output
3	–	not used
4	SC24 (VT)	Door unlock, output