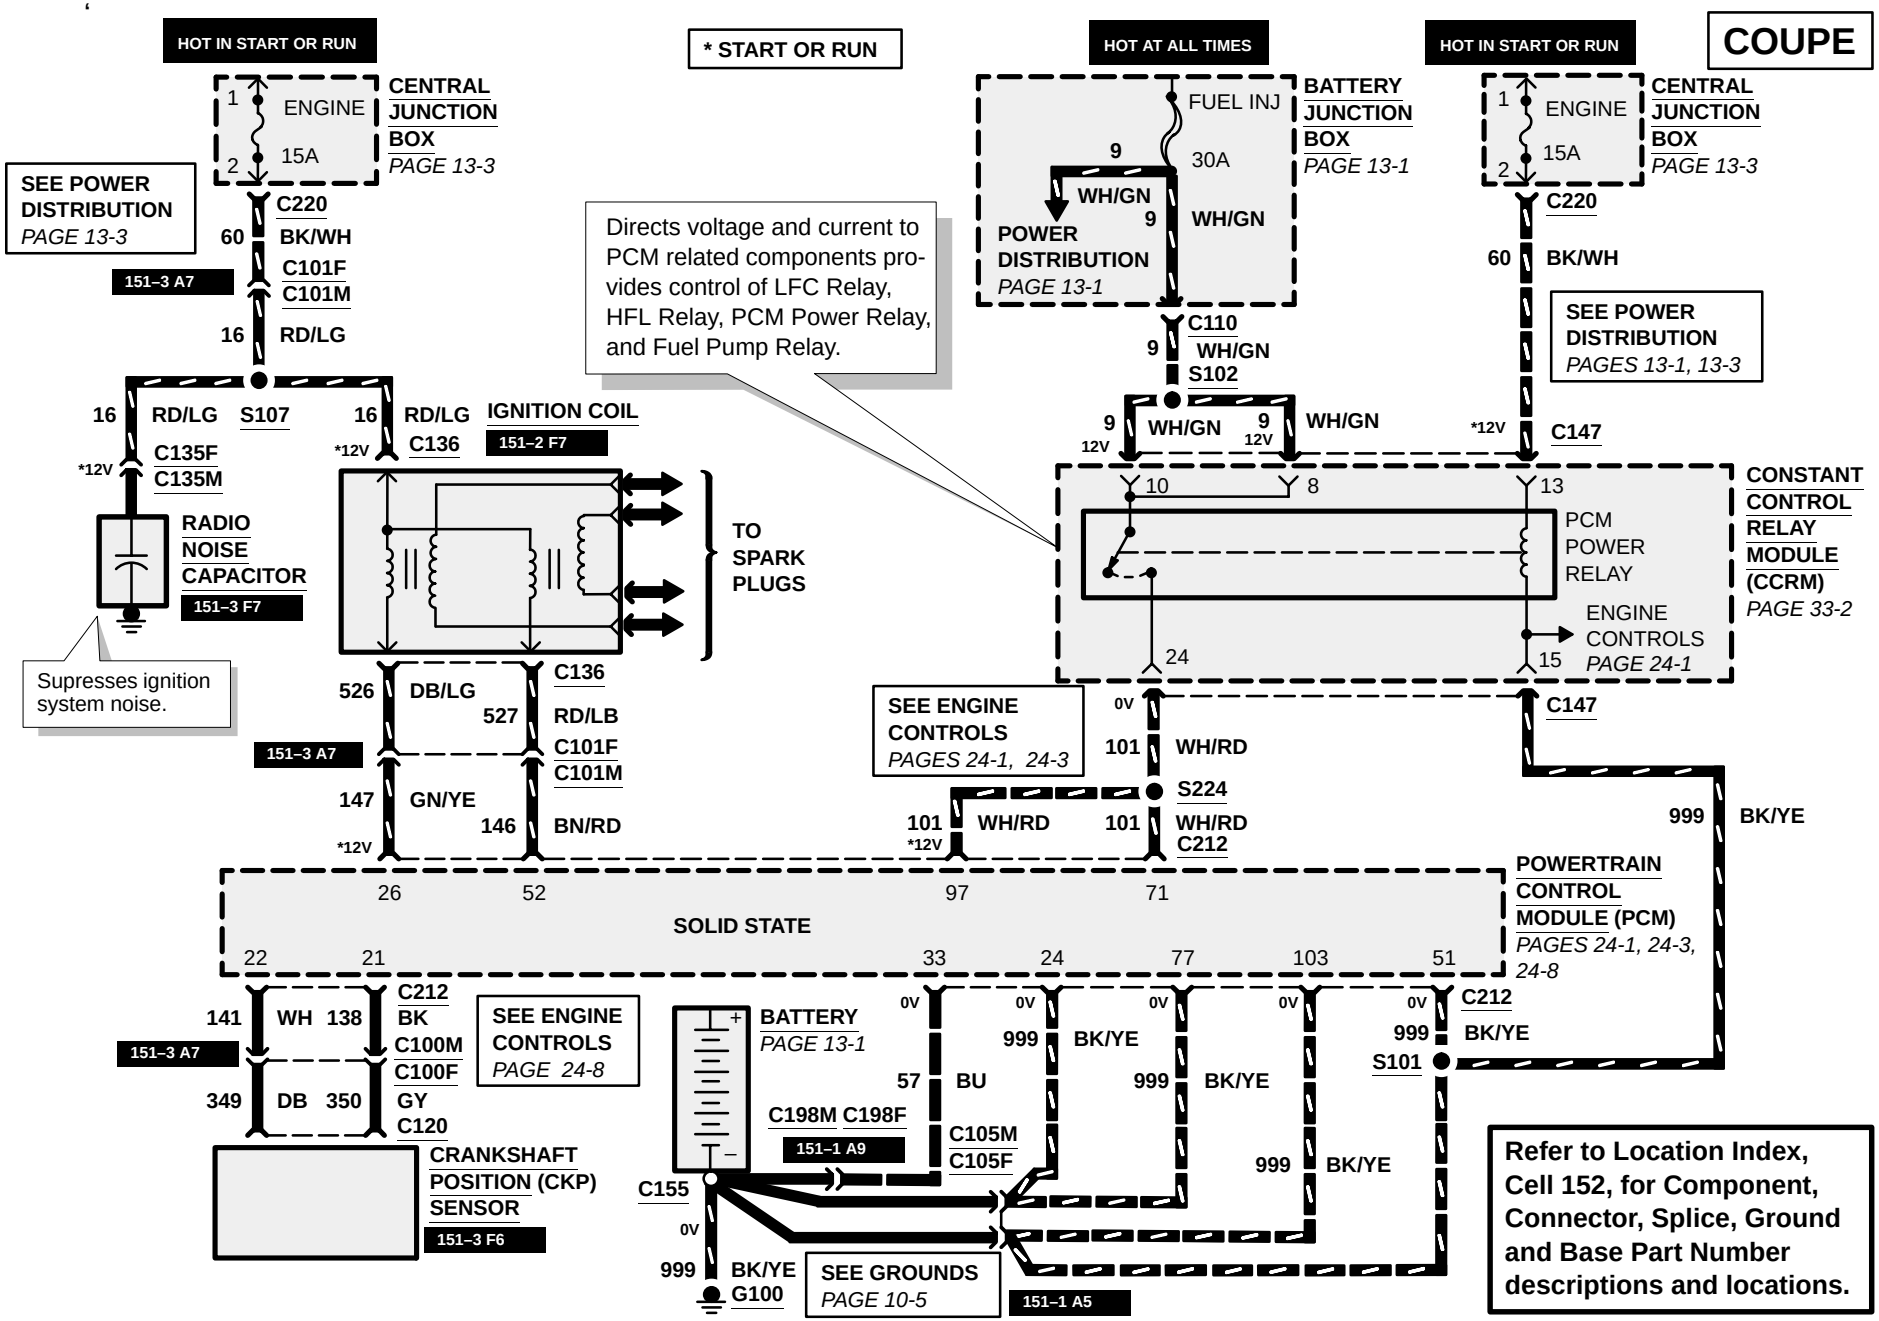
COUPE
HOT IN START OR RUN
* START OR RUN
HOT AT ALL TIMES
HOT IN START OR RUN
CENTRAL JUNCTION BOX PAGE 13-3
ENGINE
15A
BATTERY JUNCTION BOX PAGE 13-1
FUEL INJ
30A
POWER DISTRIBUTION PAGE 13-1
SEE POWER DISTRIBUTION PAGE 13-3
151–3 A7
C220
60 BK/WH
C101F
C101M
16 RD/LG
Directs voltage and current to PCM related components provides control of LFC Relay, HFL Relay, PCM Power Relay, and Fuel Pump Relay.
C110
9 WH/GN
S102
SEE POWER DISTRIBUTION PAGES 13-1, 13-3
16 RD/LG S107
C135F
C135M
*12V
16 RD/LG
C136
*12V
IGNITION COIL
151–2 F7
C147
CONSTANT CONTROL RELAY MODULE (CCRM) PAGE 33-2
PCM POWER RELAY
ENGINE CONTROLS PAGE 24-1
RADIO NOISE CAPACITOR
151–3 F7
Supresses ignition system noise.
TO SPARK PLUGS
526 DB/LG
527 RD/LB
C136
C101F
C101M
151–3 A7
147 GN/YE
146 BN/RD
*12V
SEE ENGINE CONTROLS PAGES 24-1, 24-3
0V
101 WH/RD
S224
101 WH/RD
101 WH/RD
C212
*12V
999 BK/YE
POWERTRAIN CONTROL MODULE (PCM) PAGES 24-1, 24-3, 24-8
SOLID STATE
26 52 97 71
22 21 33 24 77 103 51
141 WH 138
C212
BK
C100M
C100F
349 DB 350
GY
C120
151–3 A7
SEE ENGINE CONTROLS PAGE 24-8
CRANKSHAFT POSITION (CKP) SENSOR
151–3 F6
BATTERY PAGE 13-1
C198M C198F
151–1 A9
57 BU
C105M
C105F
999 BK/YE
S101
C155
0V
999 BK/YE
G100
SEE GROUNDS PAGE 10-5
151–1 A5
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.