Early build

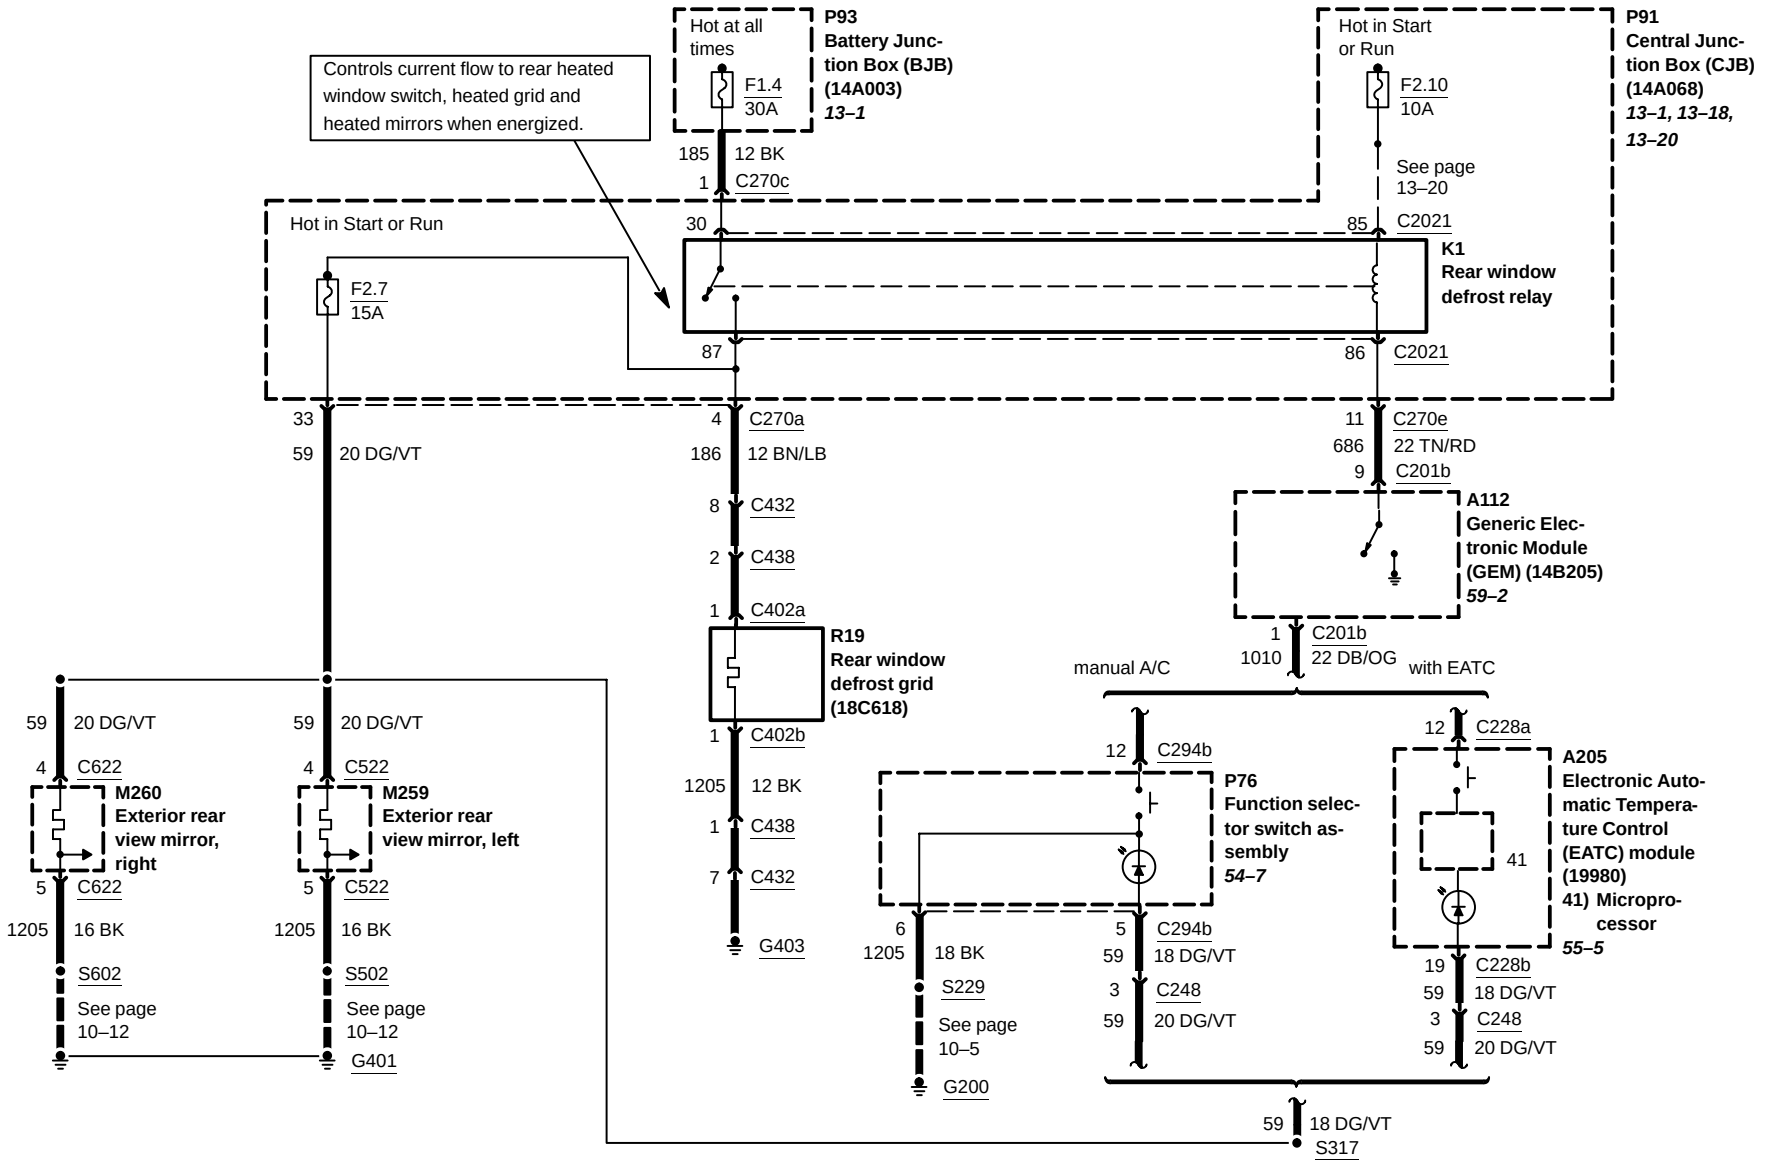
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Hot at all times
P93 Battery Junction Box (BJB) (14A003) 13–1
F1.4 30A
185 12 BK
1 C270c
Hot in Start or Run
F2.7 15A
30
87
Hot in Start or Run
F2.10 10A
See page 13–20
85 C2021
86 C2021
K1 Rear window defrost relay
P91 Central Junction Box (CJB) (14A068) 13–1, 13–18, 13–20
33 59 20 DG/VT
4 C270a
186 12 BN/LB
8 C432
2 C438
1 C402a
R19 Rear window defrost grid (18C618)
1 C402b
1205 12 BK
1 C438
7 C432
G403
11 C270e
686 22 TN/RD
9 C201b
A112 Generic Electronic Module (GEM) (14B205) 59–2
1 C201b
1010 22 DB/OG
manual A/C
with EATC
59 20 DG/VT
4 C622
M260 Exterior rear view mirror, right
5 C622
1205 16 BK
S602
See page 10–12
G401
59 20 DG/VT
4 C522
M259 Exterior rear view mirror, left
5 C522
1205 16 BK
S502
See page 10–12
G401
12 C294b
P76 Function selector switch assembly 54–7
6 1205 18 BK
S229
See page 10–5
G200
5 C294b
59 18 DG/VT
3 C248
59 20 DG/VT
12 C228a
A205 Electronic Automatic Temperature Control (EATC) module (19980) 41) Microprocessor 55–5
41
19 C228b
59 18 DG/VT
3 C248
59 20 DG/VT
59 18 DG/VT
S317