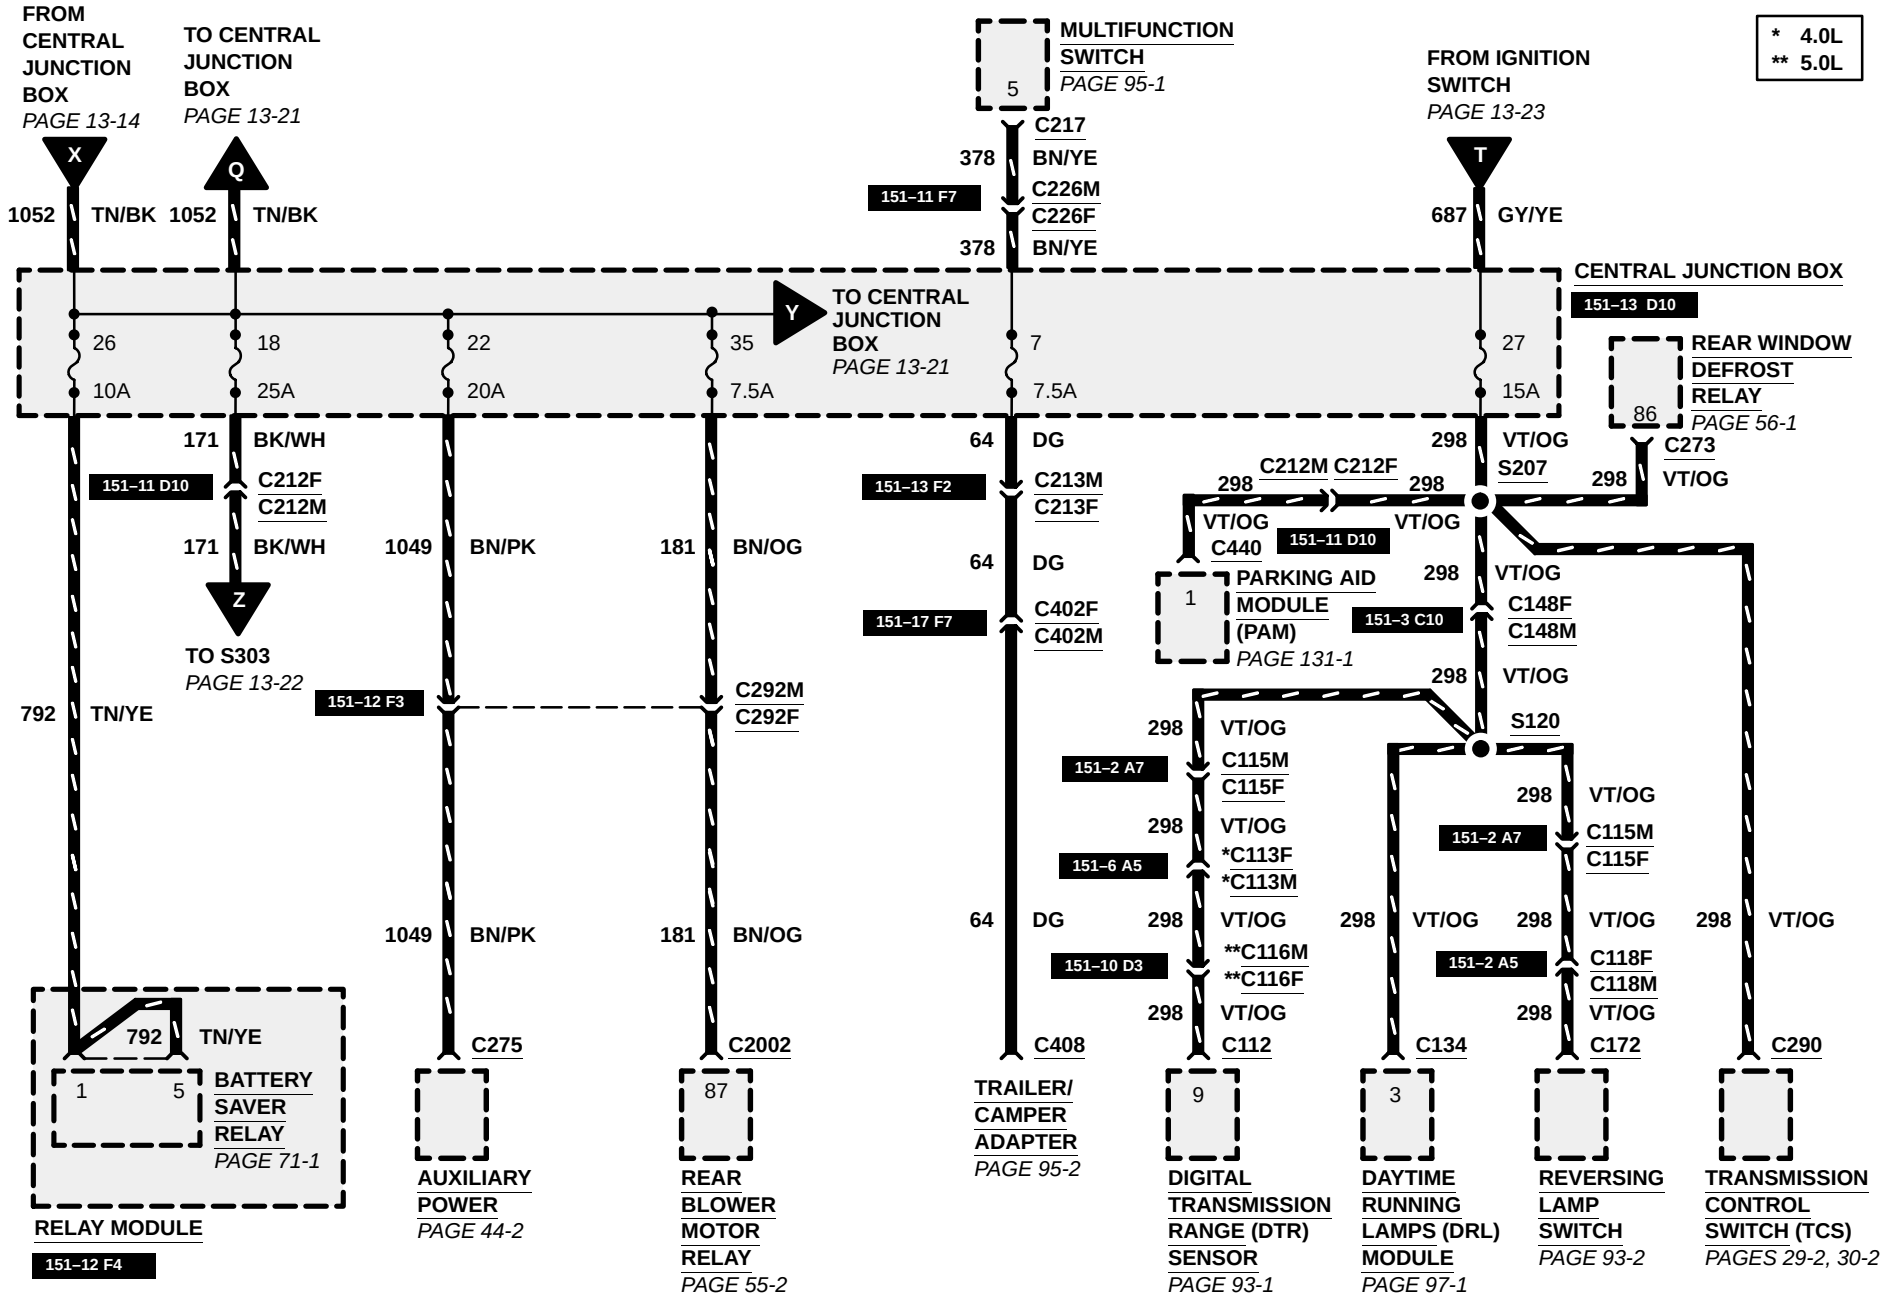
FROM CENTRAL JUNCTION BOX
PAGE 13-14
TO CENTRAL JUNCTION BOX
PAGE 13-21
MULTIFUNCTION SWITCH
PAGE 95-1
FROM IGNITION SWITCH
PAGE 13-23
* 4.0L
** 5.0L
X
Q
5
T
1052 TN/BK
1052 TN/BK
C217
378 BN/YE
151–11 F7
C226M
C226F
378 BN/YE
687 GY/YE
CENTRAL JUNCTION BOX
151–13 D10
Y
TO CENTRAL JUNCTION BOX
PAGE 13-21
26
18
22
35
7
27
10A
25A
20A
7.5A
7.5A
15A
REAR WINDOW DEFROST RELAY
PAGE 56-1
86
171 BK/WH
64 DG
298 VT/OG
S207
C273
298 VT/OG
151–11 D10
C212F
C212M
151–13 F2
C213M
C213F
298
C212M C212F
298
298
VT/OG
VT/OG
C440
151–11 D10
171 BK/WH
1049 BN/PK
181 BN/OG
64 DG
PARKING AID MODULE (PAM)
PAGE 131-1
1
298 VT/OG
C148F
C148M
151–3 C10
151–17 F7
C402F
C402M
Z
TO S303
PAGE 13-22
298 VT/OG
792 TN/YE
151–12 F3
C292M
C292F
S120
298 VT/OG
151–2 A7
C115M
C115F
298 VT/OG
*C113F
*C113M
151–6 A5
298 VT/OG
298 VT/OG
298 VT/OG
298 VT/OG
64 DG
1049 BN/PK
181 BN/OG
151–10 D3
**C116M
**C116F
151–2 A5
C118F
C118M
298 VT/OG
298 VT/OG
298 VT/OG
792 TN/YE
C275
C2002
C408
C112
C134
C172
C290
1
5
87
9
3
BATTERY SAVER RELAY
PAGE 71-1
TRAILER/ CAMPER ADAPTER
PAGE 95-2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 93-1
DAYTIME RUNNING LAMPS (DRL) MODULE
PAGE 97-1
REVERSING LAMP SWITCH
PAGE 93-2
TRANSMISSION CONTROL SWITCH (TCS)
PAGES 29-2, 30-2
RELAY MODULE
151–12 F4
AUXILIARY POWER
PAGE 44-2
REAR BLOWER MOTOR RELAY
PAGE 55-2