C890a

14335

E18
Interior lamp, front



F01005

C1129	C1137	Circuit function
1	29-LB13 (OG/BU)	Voltage supplied at all times (overload protected)

C890b

14335

E18
Interior lamp, front



F02009

Pin	Circuit	Circuit function
1	31S-LB13 (BK/BU)	Ground, Switched
2	31-LB13 (BK)	Ground

C893

12A522

B22
Mass Air Flow (MAF) sensor (12B579)

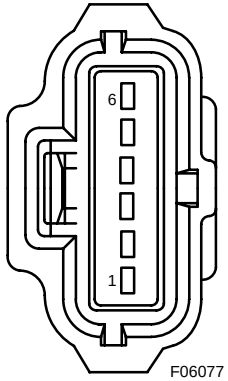

F06077

Pin	Circuit	Circuit function
1	8-RJ17 (WH/VT)	Sensor signal
2	15-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
3	91-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	91-RJ17 (BN/WH)	Sensor signal return (reference/ground)