## C810

**14K733**

N1
Brake fluid level switch

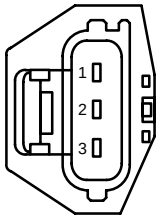


F03124

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-GC7 (BK) | Ground |
| 2 | 31S-GC6 (BK/YE) | Ground, switched |
| 3 | 31S-GE44 (BK/RD) | Ground, switched |

## C811

**14014**

H5
Anti–theft horn

F01015

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 49-GL26 (BU/YE) | Pulsed power feed (overload protected) |

## C812

**14K733**

N88
Low coolant level switch

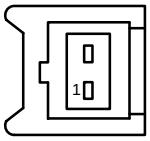


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-GC9 (BK) | Ground |
| 2 | 8-GC9 (WH/GN) | Sensor signal |

## C813 (WH)

**14K733**

N89
Low cleaning water level switch

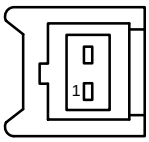


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-GC8 (BK) | Ground |
| 2 | 8-GC8 (WH/BU) | Sensor signal |

## C820 (WH)

**14014**

E57
Luggage compartment lamp




F02009

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 29-LB25 (OG/BU) | Voltage supplied at all times (overload protected) |
| 2 | 31S-LB26 (BK/OG) | Ground, switched |

## C823

**12A522**

Duratec–VE, manual transmission

B11
Vehicle Speed Sensor (VSS)

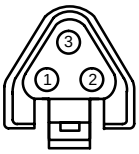


F03015

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-RJ29 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 8-RJ29 (WH/BU) | Sensor signal |
| 3 | 91-RJ29 (BK/OG) | Ground |