C155

14398

ABS control module

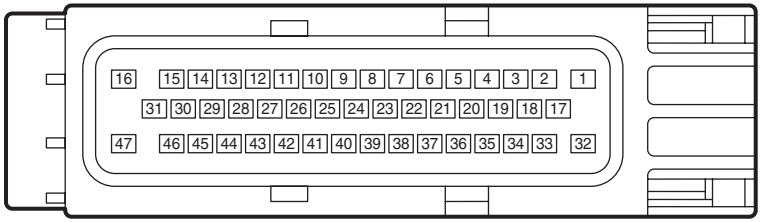

2R8T-14A464-KB (F)

Pin	Circuit	Circuit Function
1	534 (YE/LG)	ABS pump motor feed
2	70 (LB/WH)	ISO 9141 link
3	1572 (DG)	Steering angle input 1 (a)
4	601 (LB/PK)	ABS control module feed
5	1577 (RD/LB)	Lateral G sensor input
6	1573 (YE)	Steering angle input 2 (b)
7	1576 (TN/BK)	Yaw sensor input
8	512 (TN/LG)	Brake fluid reservoir switch to module
9	977 (VT/WH)	Dual brake warning switch to indicator lamp
10	—	not used
11	3126 (TN/YE)	J1850 com2 (+)
12	914 (TN/OG)	J1850 bus plus/data plus
13	960 (BK/LB)	Traction assist on/off indicator to ABS control module
14	915 (PK/LB)	J1850 bus minus/data minus
15	3125 (RD/YE)	J1850 com1 (-)
16	274 (BK/WH)	ABS valve assembly-ground
17	1582 (LG/RD)	Booster eas supply (high side)
18	3601 (WH/RD)	Brake pressure sensor 5v
19	3603 (RD)	Brake pressure ground reference
20	3600 (RD/WH)	Brake pressure signal return
21	—	not used
22	—	not used
23	—	not used
24	3011 (BK/OG)	2 return

Pin	Circuit	Circuit Function
25	1879 (PK/BK)	Yawrate module - CAN L
26	3010 (TN)	2 power
27	1581 (PK/LB)	Booster eas fail-safe switch - normally open
28	1579 (OG/RD)	Yaw ring frequency
29	1878 (WH/BK)	Yawrate module - CAN H
30	1580 (WH/LG)	Booster eas fail-safe switch - normally closed
31	1583 (BN/WH)	Booster eas solenoid drive (low side)
32	493 (BK/PK)	ABS valve assembly to ABS controller
33	514 (YE/RD)	RH front sensor, (hi) to module
34	516 (YE/BK)	RH front sensor, (low) to module
35	602 (RD/LG)	Coil terminal of ignition switch to brake skid control module
36	518 (LG/RD)	Rear sensor, (high) to module
37	519 (LG/BK)	LH rear sensor, (low) to module
38	959 (GY)	Traction assist switch feed to ABS control module
39	—	not used
40	307 (BK/YE)	(less IVD) module, speed control to brake pressure switch
40	3012 (WH)	(with IVD) APS2 signal
41	511 (LG)	Stoplamp (brake on/off) switch to stoplamps
42	524 (PK/BK)	RH rear sensor, (low) to module
43	523 (RD/PK)	RH rear sensor, (high) to module
44	810 (RD/LG)	Stoplamp (brake on/off) switch to stoplamps
45	522 (TN/BK)	LH front sensor, (low) to module
46	521 (TN/OG)	LH front sensor, (high) to module
47	530 (LG/YE)	ABS controller to chassis ground