EXCURSION

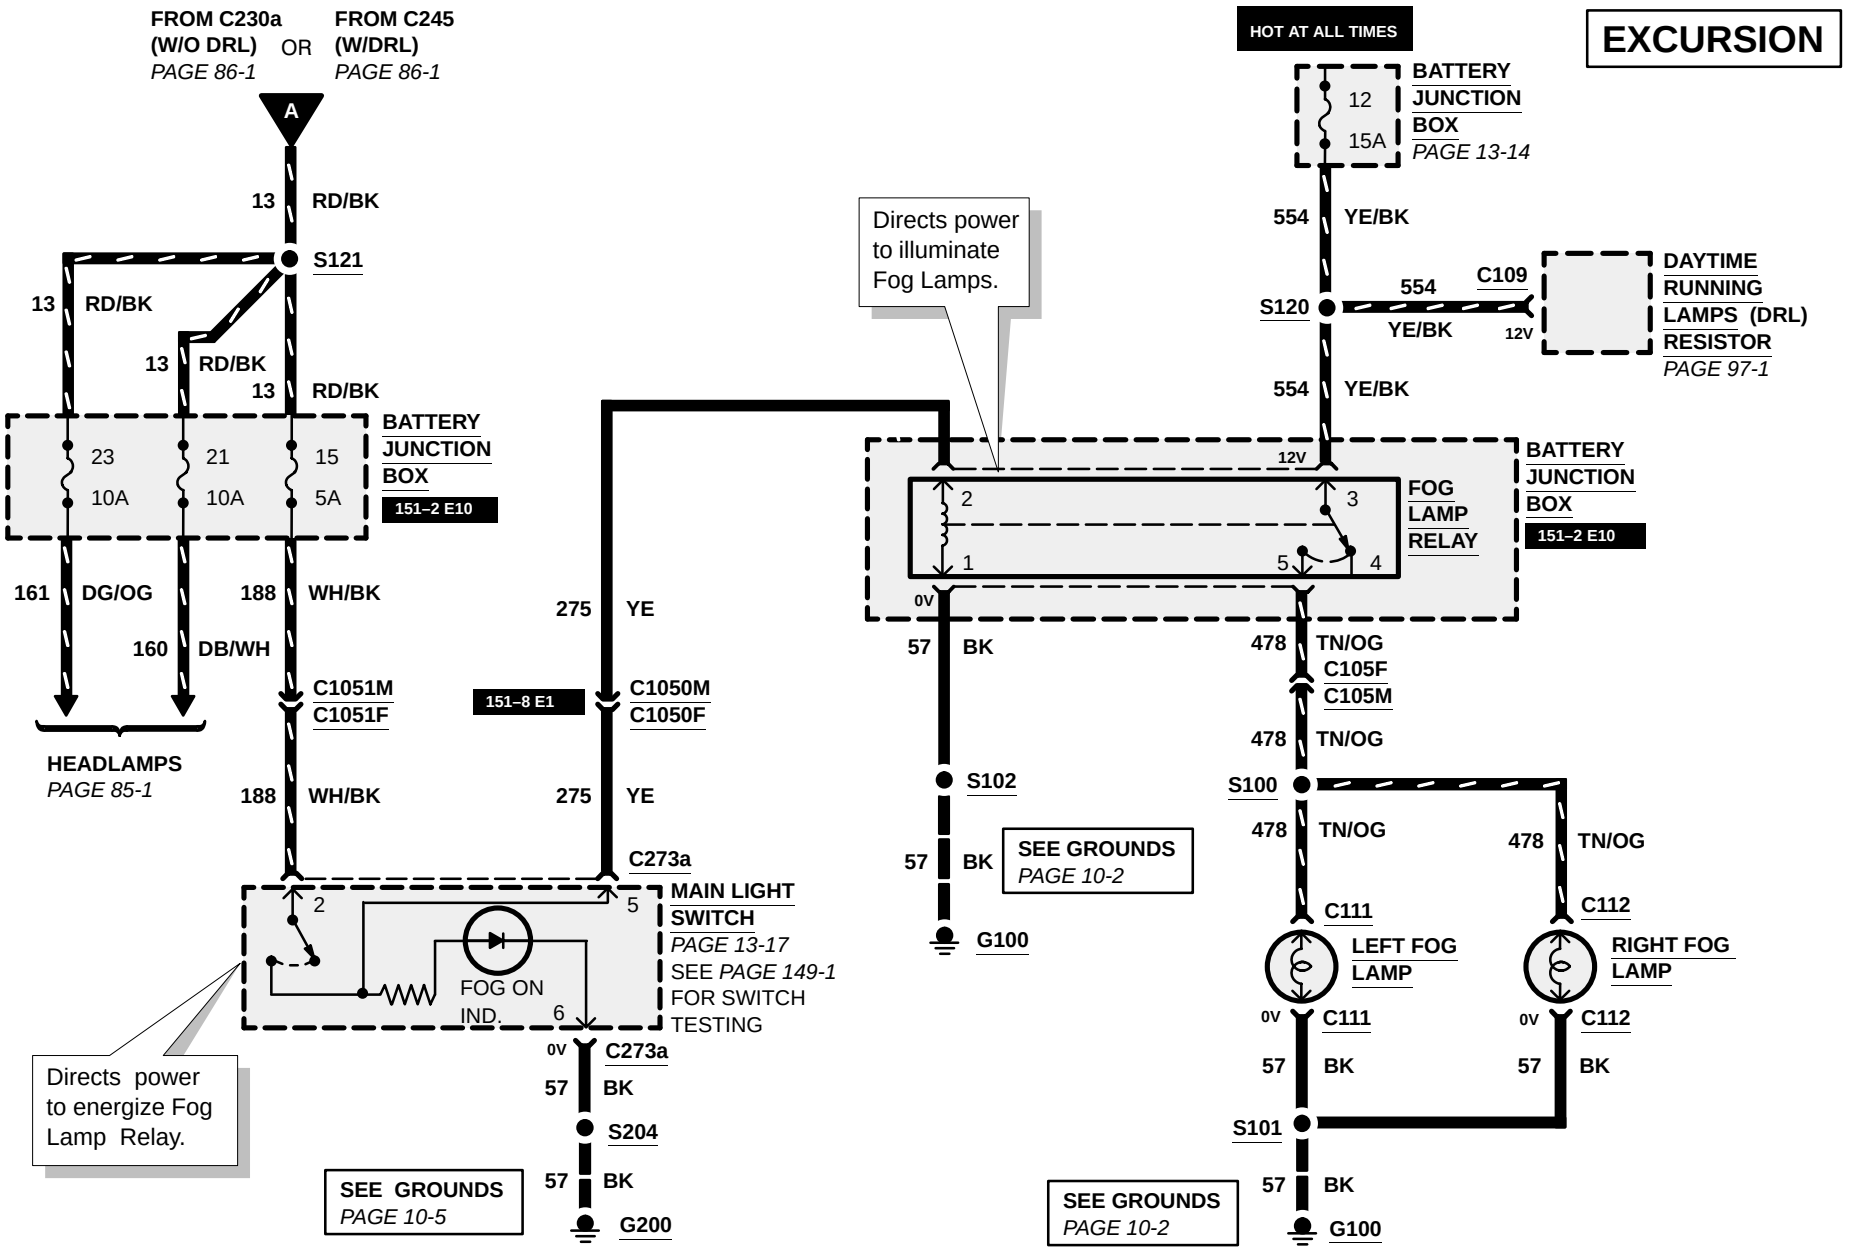
FROM C230a (W/O DRL) OR FROM C245 (W/DRL)
PAGE 86-1
PAGE 86-1
A
13 RD/BK
S121
13 RD/BK
13 RD/BK
13 RD/BK
BATTERY JUNCTION BOX
23 10A
21 10A
15 5A
151–2 E10
161 DG/OG
160 DB/WH
188 WH/BK
188 WH/BK
C1051M
C1051F
HEADLAMPS
PAGE 85-1
275 YE
151–8 E1
C1050M
C1050F
275 YE
C273a
MAIN LIGHT SWITCH
PAGE 13-17
SEE PAGE 149-1 FOR SWITCH TESTING
FOG ON IND.
Directs power to energize Fog Lamp Relay.
0V C273a
57 BK
S204
57 BK
G200
SEE GROUNDS PAGE 10-5
Directs power to illuminate Fog Lamps.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
12 15A
PAGE 13-14
554 YE/BK
S120
554 YE/BK
C109
12V
DAYTIME RUNNING LAMPS (DRL) RESISTOR
PAGE 97-1
554 YE/BK
12V
BATTERY JUNCTION BOX
151–2 E10
FOG LAMP RELAY
2
1
3
5
4
0V
57 BK
S102
57 BK
G100
SEE GROUNDS PAGE 10-2
478 TN/OG
C105F
C105M
478 TN/OG
S100
478 TN/OG
478 TN/OG
C111
C112
LEFT FOG LAMP
RIGHT FOG LAMP
0V C111
0V C112
57 BK
57 BK
S101
57 BK
G100
SEE GROUNDS PAGE 10-2