C355

14A699

Power seat switch, right

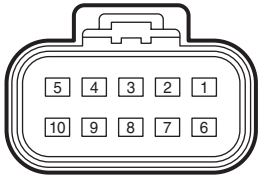

2C5T-14489-CA (F)

Pin	Circuit	Circuit Function
1	1094 (PK)	Power lumbar switch- in position
2	1205 (BK)	General ground (type 4 ground)
3	981 (RD/WH)	Seat regulator switch to horizontal motor-LH
4	980 (YE/WH)	Seat regulator switch to horizontal motor-LH
5	1462 (RD/WH)	Fused battery feed to passenger power seat
6	1097 (BN)	Power lumbar switch- out position
7	982 (YE/LG)	Seat regulator switch to rear motor-LH
8	988 (YE/LG)	Seat regulator switch to rear motor-RH
9	979 (RD/LB)	Seat regulator switch to front motor-LH
10	978 (YE/LB)	Seat regulator switch to front motor-LH

C356

14C719

Seat track position sensor, left

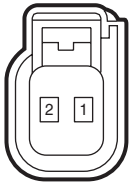

YF1T-14A464-GA (F)

Pin	Circuit	Circuit Function
1	1558 (TN/BK)	Driver seat track position sensor - return
2	1520 (LG)	Driver seat track position switch

C366

14C719

Driver seat lumbar compressor motor



D3AB-14A459-FB (M)

Pin	Circuit	Circuit Function
1	1097 (BN)	Power lumbar switch- out position
2	1094 (PK)	Power lumbar switch- in position

C380

14B079

Power point console

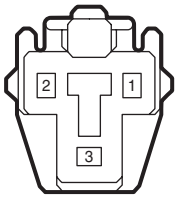

XF2T-14489-AB (F)

Pin	Circuit	Circuit Function
1	1049 (BN/PK)	Fused battery feed to power point
2	—	not used
3	1205 (BK)	General ground (type 4 ground)