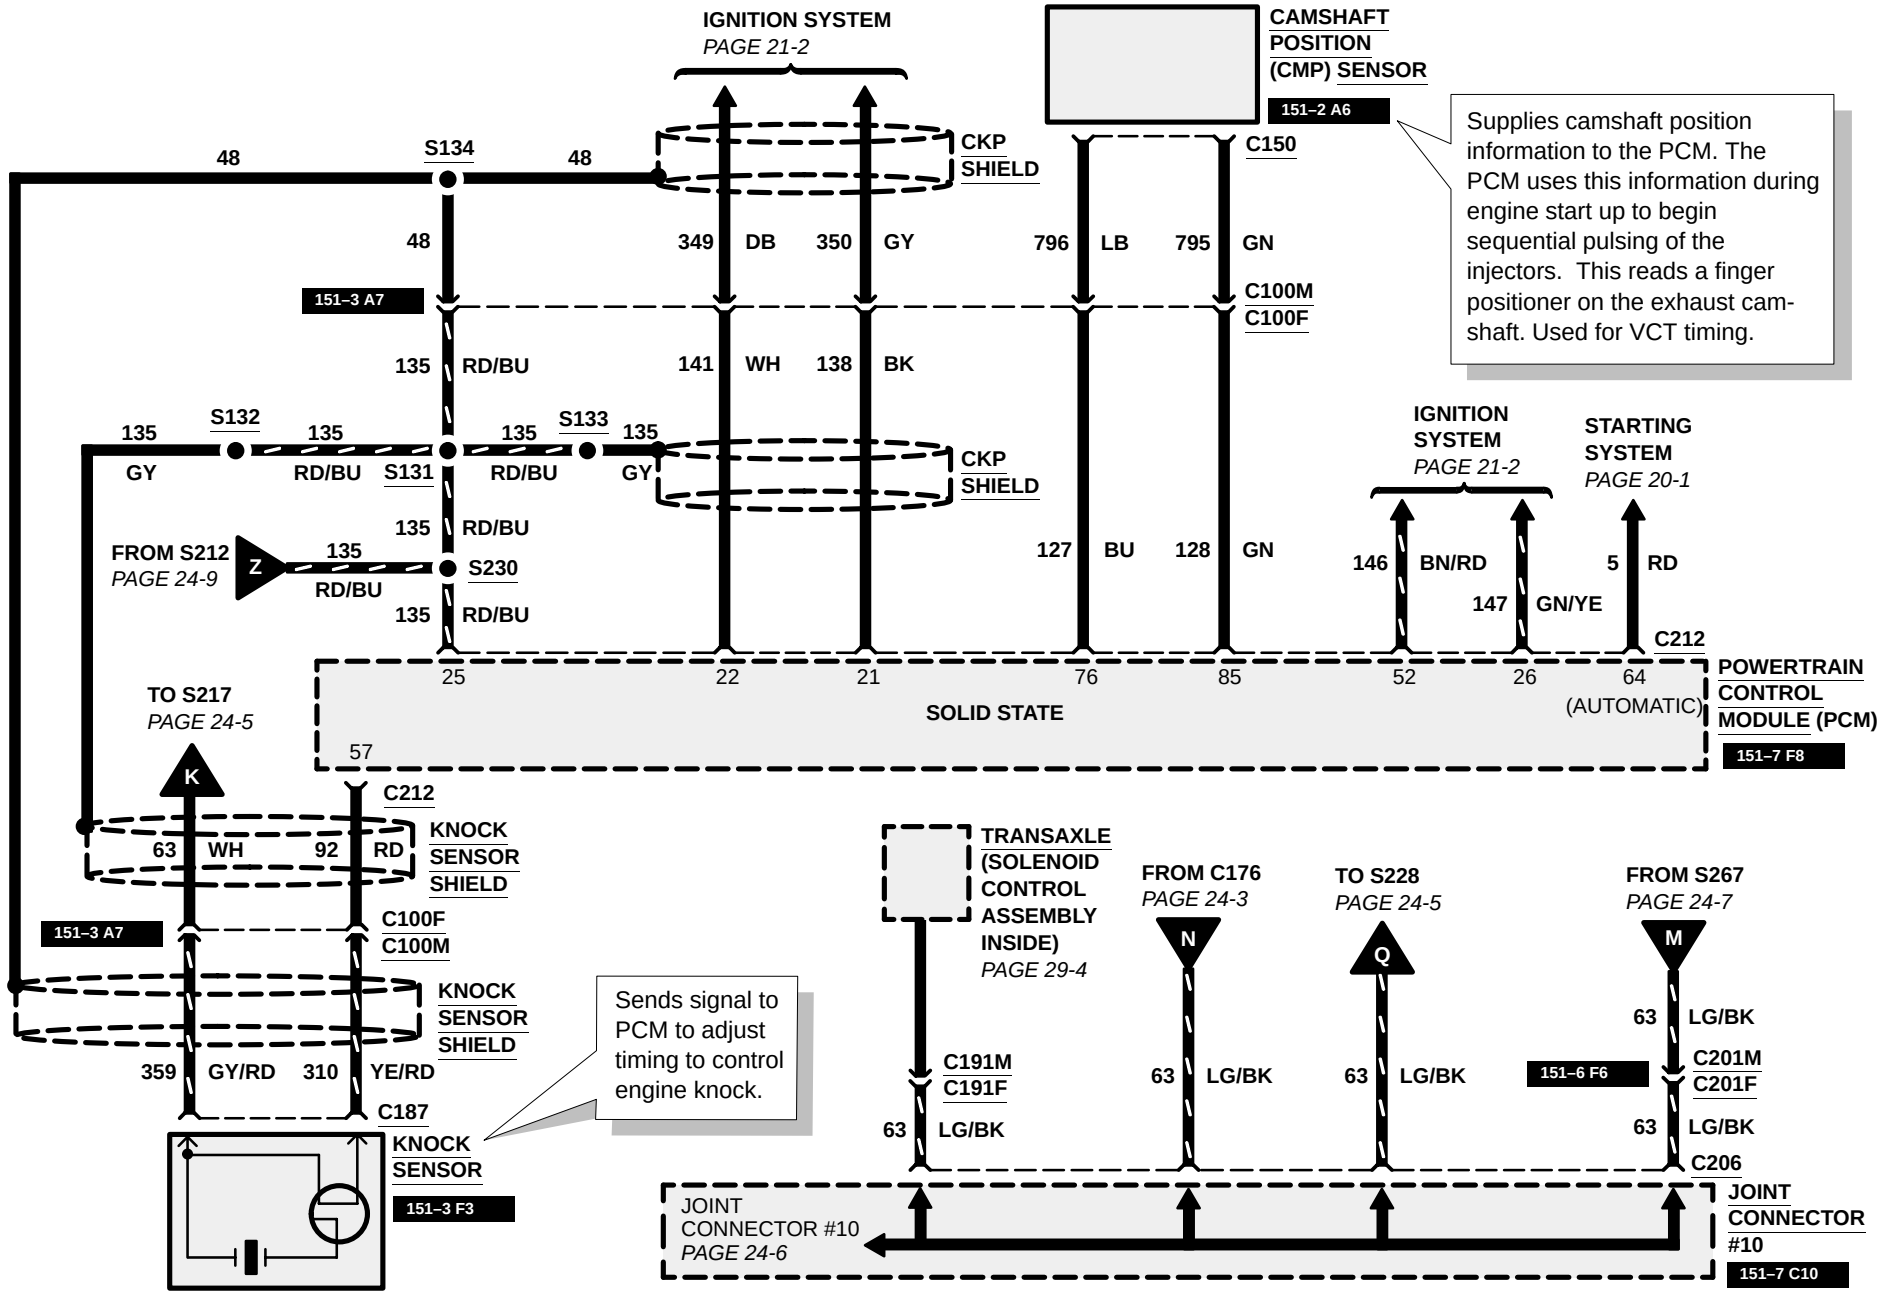
IGNITION SYSTEM
PAGE 21-2
CAMSHAFT POSITION (CMP) SENSOR
151–2 A6
Supplies camshaft position information to the PCM. The PCM uses this information during engine start up to begin sequential pulsing of the injectors. This reads a finger positioner on the exhaust camshaft. Used for VCT timing.
48
S134
48
CKP SHIELD
C150
48
349 DB
350 GY
796 LB
795 GN
151–3 A7
C100M
C100F
135 RD/BU
141 WH
138 BK
135
S132
135
135
S133
135
GY
RD/BU
S131
RD/BU
GY
CKP SHIELD
IGNITION SYSTEM
PAGE 21-2
STARTING SYSTEM
PAGE 20-1
135 RD/BU
FROM S212
PAGE 24-9
Z
135
RD/BU
S230
127 BU
128 GN
146 BN/RD
147 GN/YE
5 RD
135 RD/BU
C212
25
22
21
76
85
52
26
64
SOLID STATE
(AUTOMATIC)
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8
TO S217
PAGE 24-5
57
K
C212
63 WH
92 RD
KNOCK SENSOR SHIELD
151–3 A7
C100F
C100M
KNOCK SENSOR SHIELD
359 GY/RD
310 YE/RD
C187
KNOCK SENSOR
151–3 F3
Sends signal to PCM to adjust timing to control engine knock.
TRANSAXLE (SOLENOID CONTROL ASSEMBLY INSIDE)
PAGE 29-4
FROM C176
PAGE 24-3
N
TO S228
PAGE 24-5
Q
FROM S267
PAGE 24-7
M
63 LG/BK
C191M
C191F
63 LG/BK
63 LG/BK
63 LG/BK
151–6 F6
C201M
C201F
63 LG/BK
63 LG/BK
C206
JOINT CONNECTOR #10
PAGE 24-6
JOINT CONNECTOR #10
151–7 C10