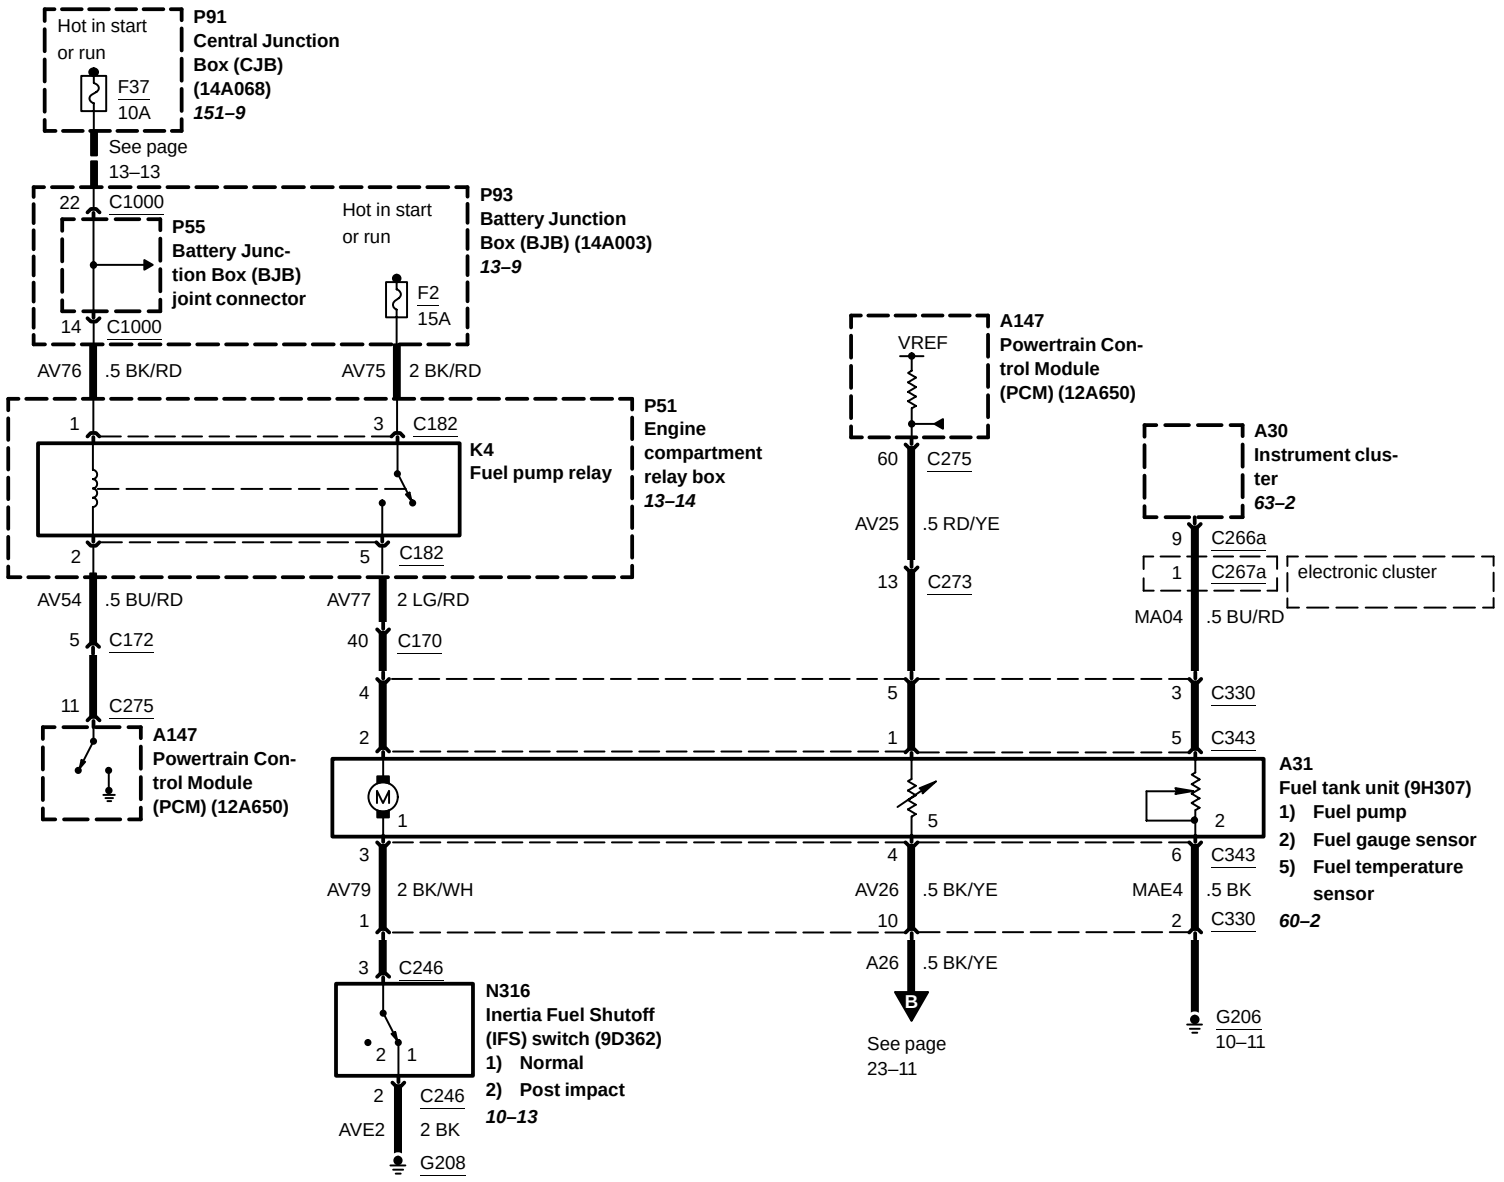
Hot in start or run
F37
10A
P91
Central Junction Box (CJB) (14A068)
151–9
See page 13–13
22 C1000
P55
Battery Junction Box (BJB) joint connector
14 C1000
Hot in start or run
F2
15A
P93
Battery Junction Box (BJB) (14A003)
13–9
AV76 .5 BK/RD
AV75 2 BK/RD
1
3 C182
K4
Fuel pump relay
2
5 C182
P51
Engine compartment relay box
13–14
AV54 .5 BU/RD
AV77 2 LG/RD
5 C172
40 C170
11 C275
A147
Powertrain Control Module (PCM) (12A650)
VREF
A147
Powertrain Control Module (PCM) (12A650)
60 C275
AV25 .5 RD/YE
13 C273
A30
Instrument cluster
63–2
9 C266a
1 C267a
electronic cluster
MA04 .5 BU/RD
4
2
5
1
3 C330
5 C343
M
1
5
2
A31
Fuel tank unit (9H307)
1) Fuel pump
2) Fuel gauge sensor
5) Fuel temperature sensor
60–2
3
AV79 2 BK/WH
1
4
AV26 .5 BK/YE
10
6 C343
MAE4 .5 BK
2 C330
3 C246
A26 .5 BK/YE
B
See page 23–11
G206
10–11
N316
Inertia Fuel Shutoff (IFS) switch (9D362)
1) Normal
2) Post impact
10–13
2 1
2 C246
AVE2 2 BK
G208