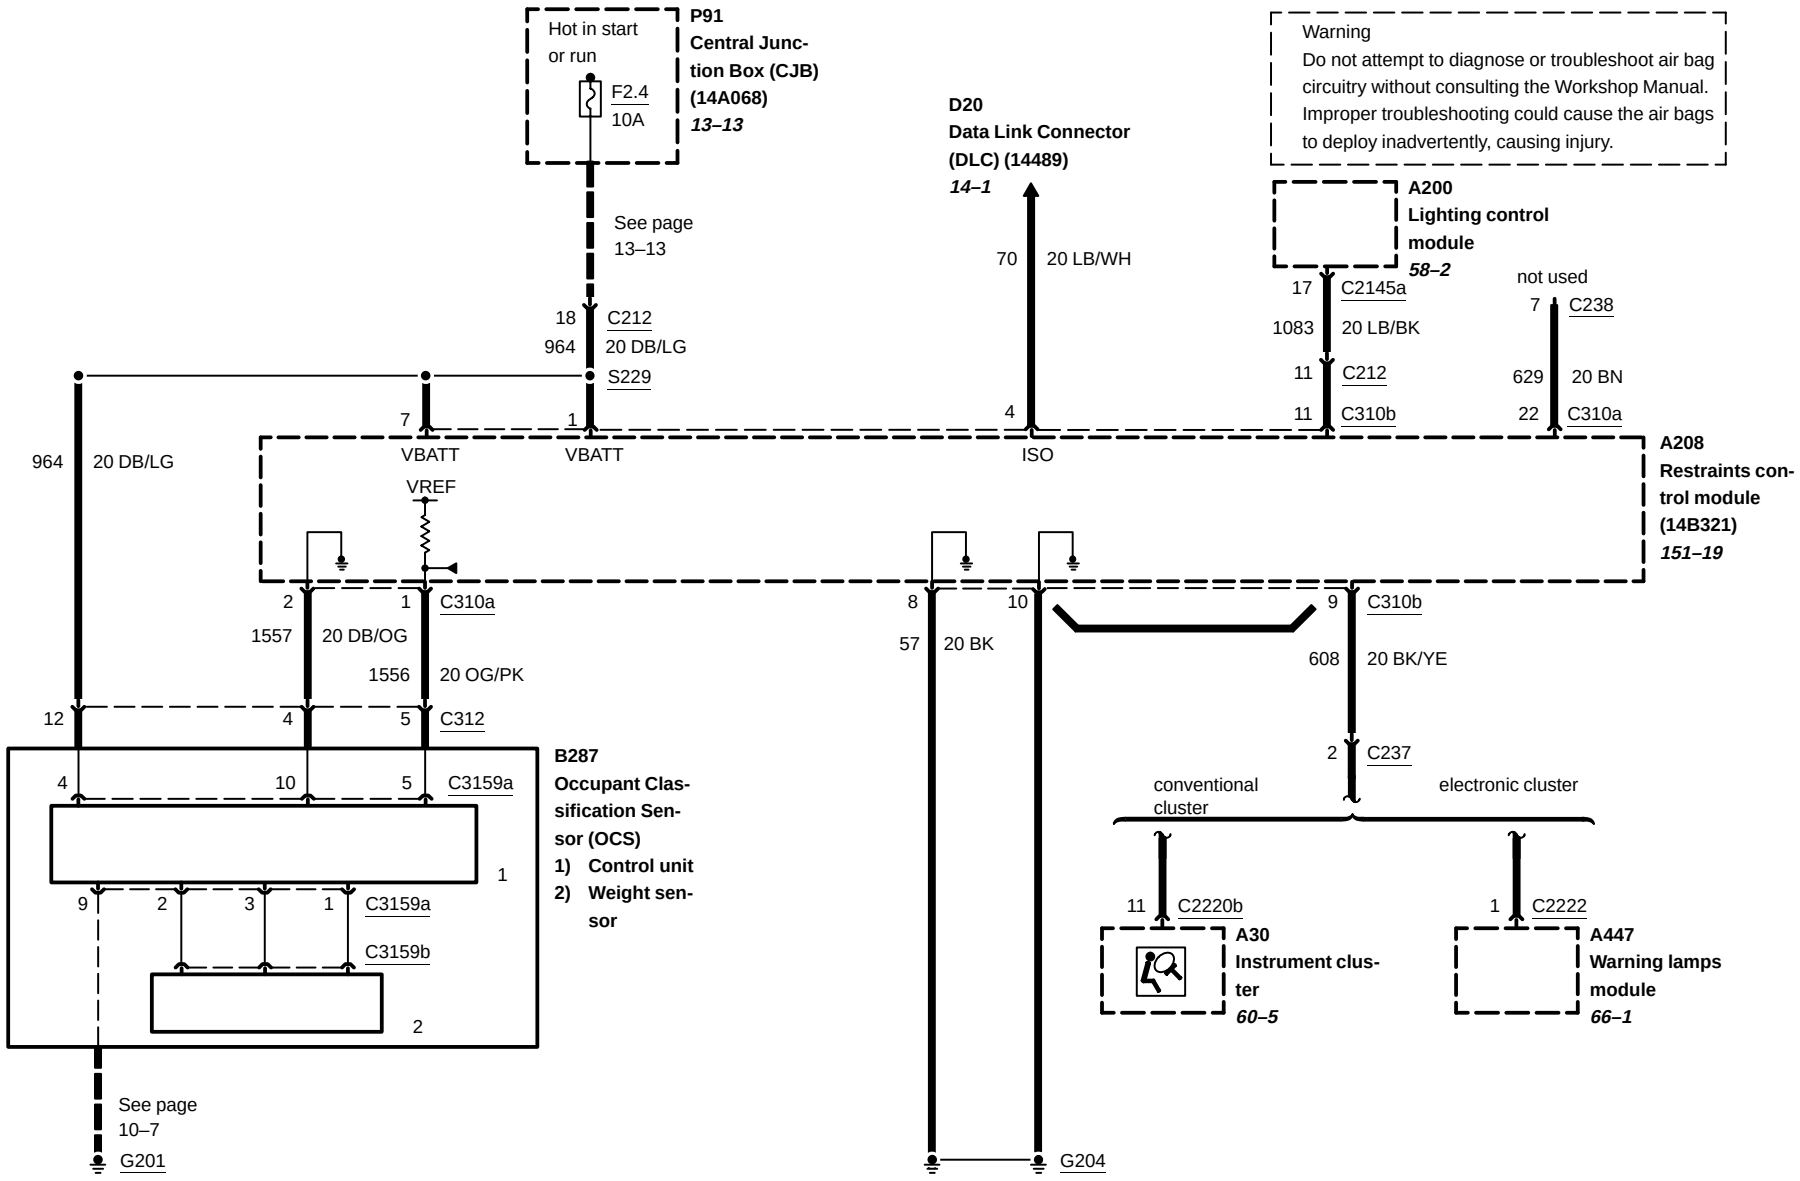
Hot in start or run
F2.4
10A
P91
Central Junction Box (CJB) (14A068)
13–13
See page 13–13
18 C212
964 20 DB/LG
S229
D20
Data Link Connector (DLC) (14489)
14–1
70 20 LB/WH
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
A200
Lighting control module
58–2
17 C2145a
1083 20 LB/BK
11 C212
11 C310b
not used
7 C238
629 20 BN
22 C310a
964 20 DB/LG
7 VBATT
1 VBATT
4 ISO
VREF
A208
Restraints control module (14B321)
151–19
2 1 C310a
1557 20 DB/OG
1556 20 OG/PK
8 10 9 C310b
57 20 BK
608 20 BK/YE
12 4 5 C312
2 C237
conventional cluster
electronic cluster
4 10 5 C3159a
B287
Occupant Classification Sensor (OCS)
1) Control unit
2) Weight sensor
1
9 2 3 1 C3159a
C3159b
2
11 C2220b
1 C2222
A30
Instrument cluster
60–5
A447
Warning lamps module
66–1
See page 10–7
G201
G204