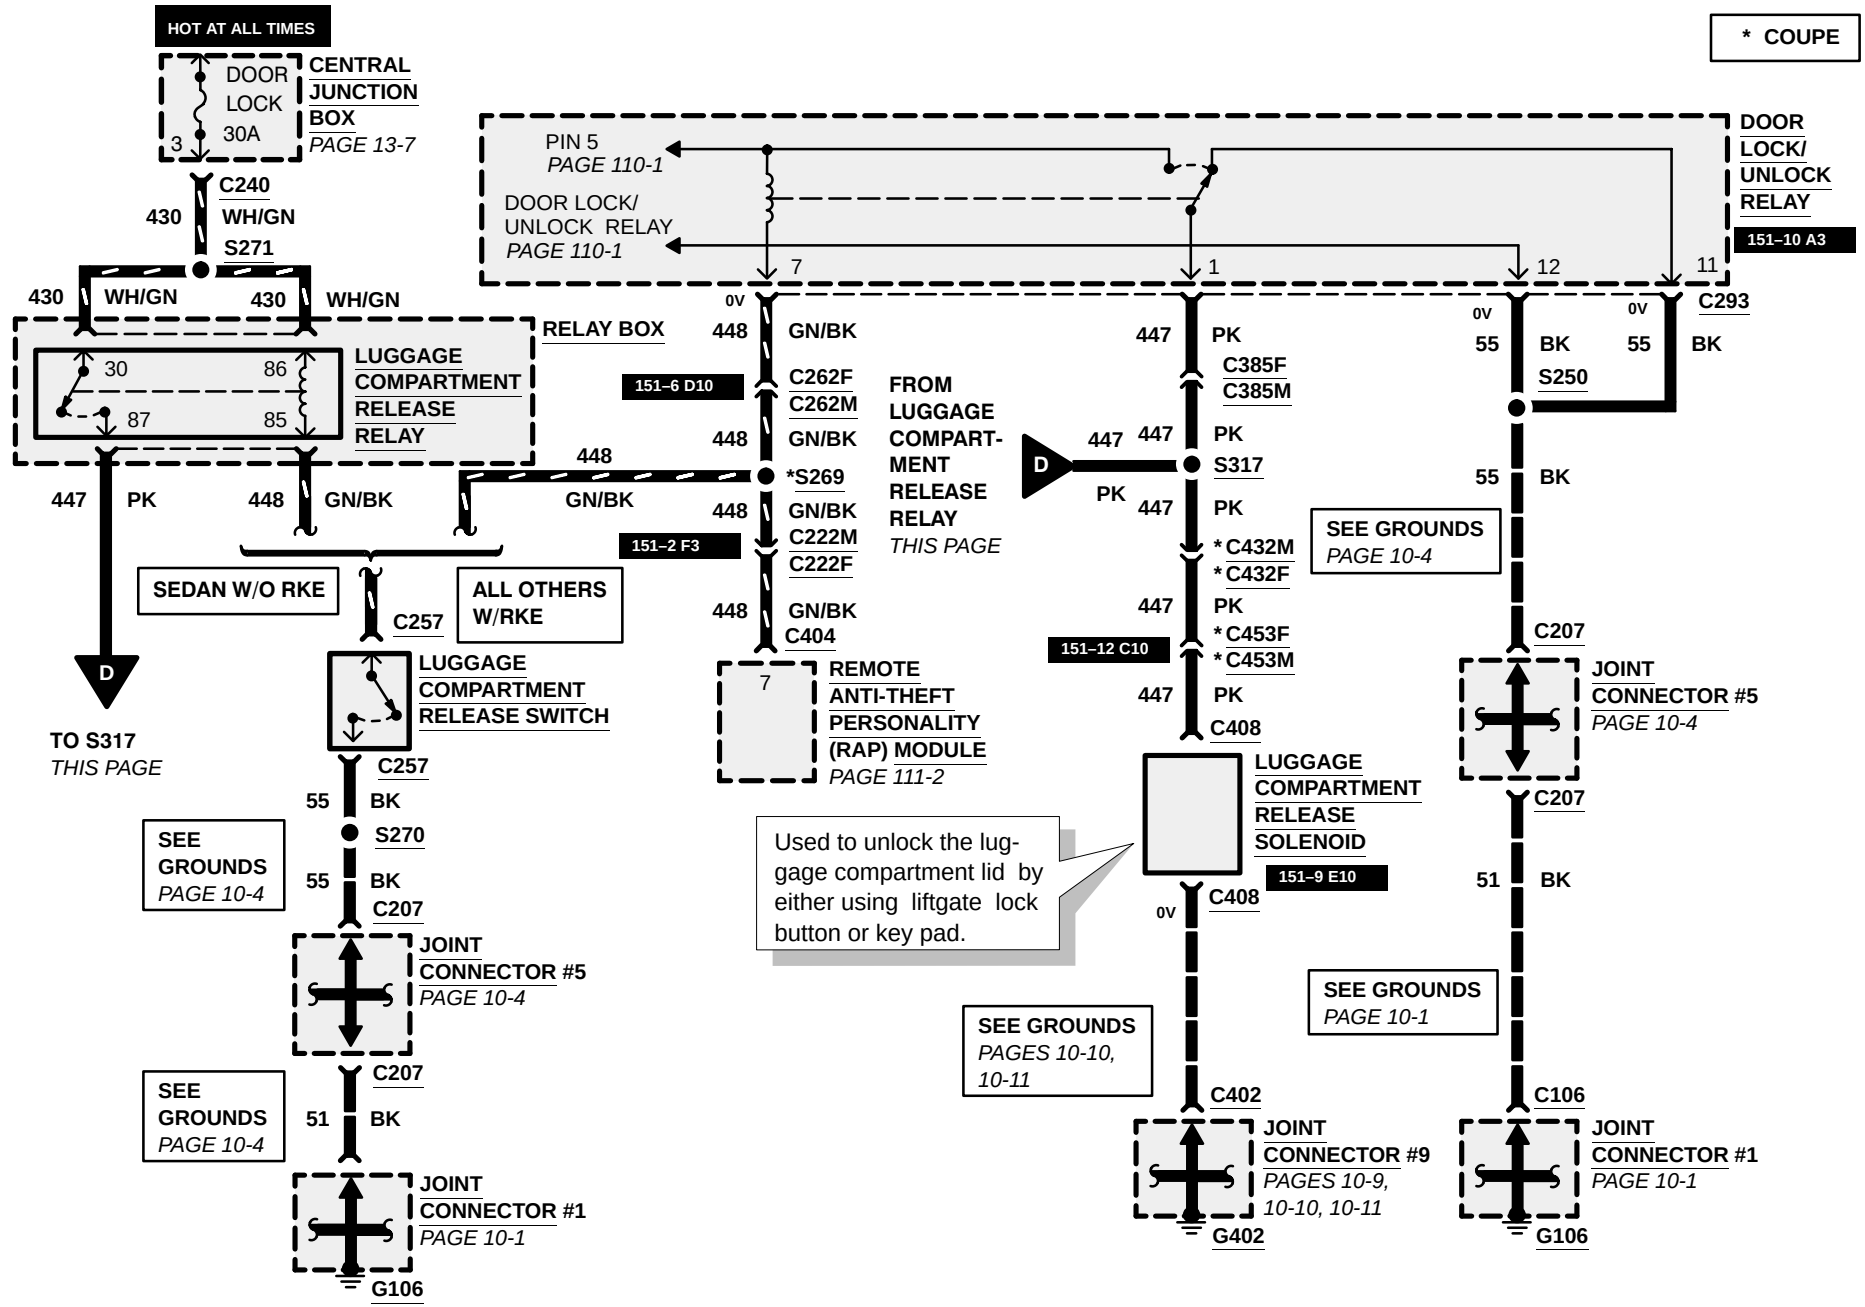
HOT AT ALL TIMES
DOOR LOCK 30A
3
CENTRAL JUNCTION BOX
PAGE 13-7
C240
430
WH/GN
S271
430 WH/GN
430 WH/GN
RELAY BOX
30
86
87
85
LUGGAGE COMPARTMENT RELEASE RELAY
447 PK
448 GN/BK
448 GN/BK
SEDAN W/O RKE
ALL OTHERS W/RKE
C257
LUGGAGE COMPARTMENT RELEASE SWITCH
TO S317
THIS PAGE
C257
55 BK
S270
SEE GROUNDS
PAGE 10-4
55 BK
C207
JOINT CONNECTOR #5
PAGE 10-4
C207
SEE GROUNDS
PAGE 10-4
51 BK
JOINT CONNECTOR #1
PAGE 10-1
G106
PIN 5
PAGE 110-1
DOOR LOCK/ UNLOCK RELAY
PAGE 110-1
7
1
12
11
DOOR LOCK/ UNLOCK RELAY
151–10 A3
* COUPE
0V
448 GN/BK
C262F
C262M
151–6 D10
448 GN/BK
448 GN/BK
*S269
448 GN/BK
C222M
C222F
151–2 F3
448 GN/BK
C404
7
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 111-2
FROM LUGGAGE COMPART-MENT RELEASE RELAY
THIS PAGE
447 PK
C385F
C385M
447 PK
447 PK
S317
PK 447 PK
*C432M
*C432F
447 PK
*C453F
*C453M
151–12 C10
447 PK
C408
LUGGAGE COMPARTMENT RELEASE SOLENOID
151–9 E10
0V
C408
Used to unlock the lug-gage compartment lid by either using liftgate lock button or key pad.
SEE GROUNDS
PAGES 10-10, 10-11
C402
JOINT CONNECTOR #9
PAGES 10-9, 10-10, 10-11
G402
0V
55 BK
S250
0V
55 BK
C293
55 BK
SEE GROUNDS
PAGE 10-4
C207
JOINT CONNECTOR #5
PAGE 10-4
C207
51 BK
SEE GROUNDS
PAGE 10-1
C106
JOINT CONNECTOR #1
PAGE 10-1
G106