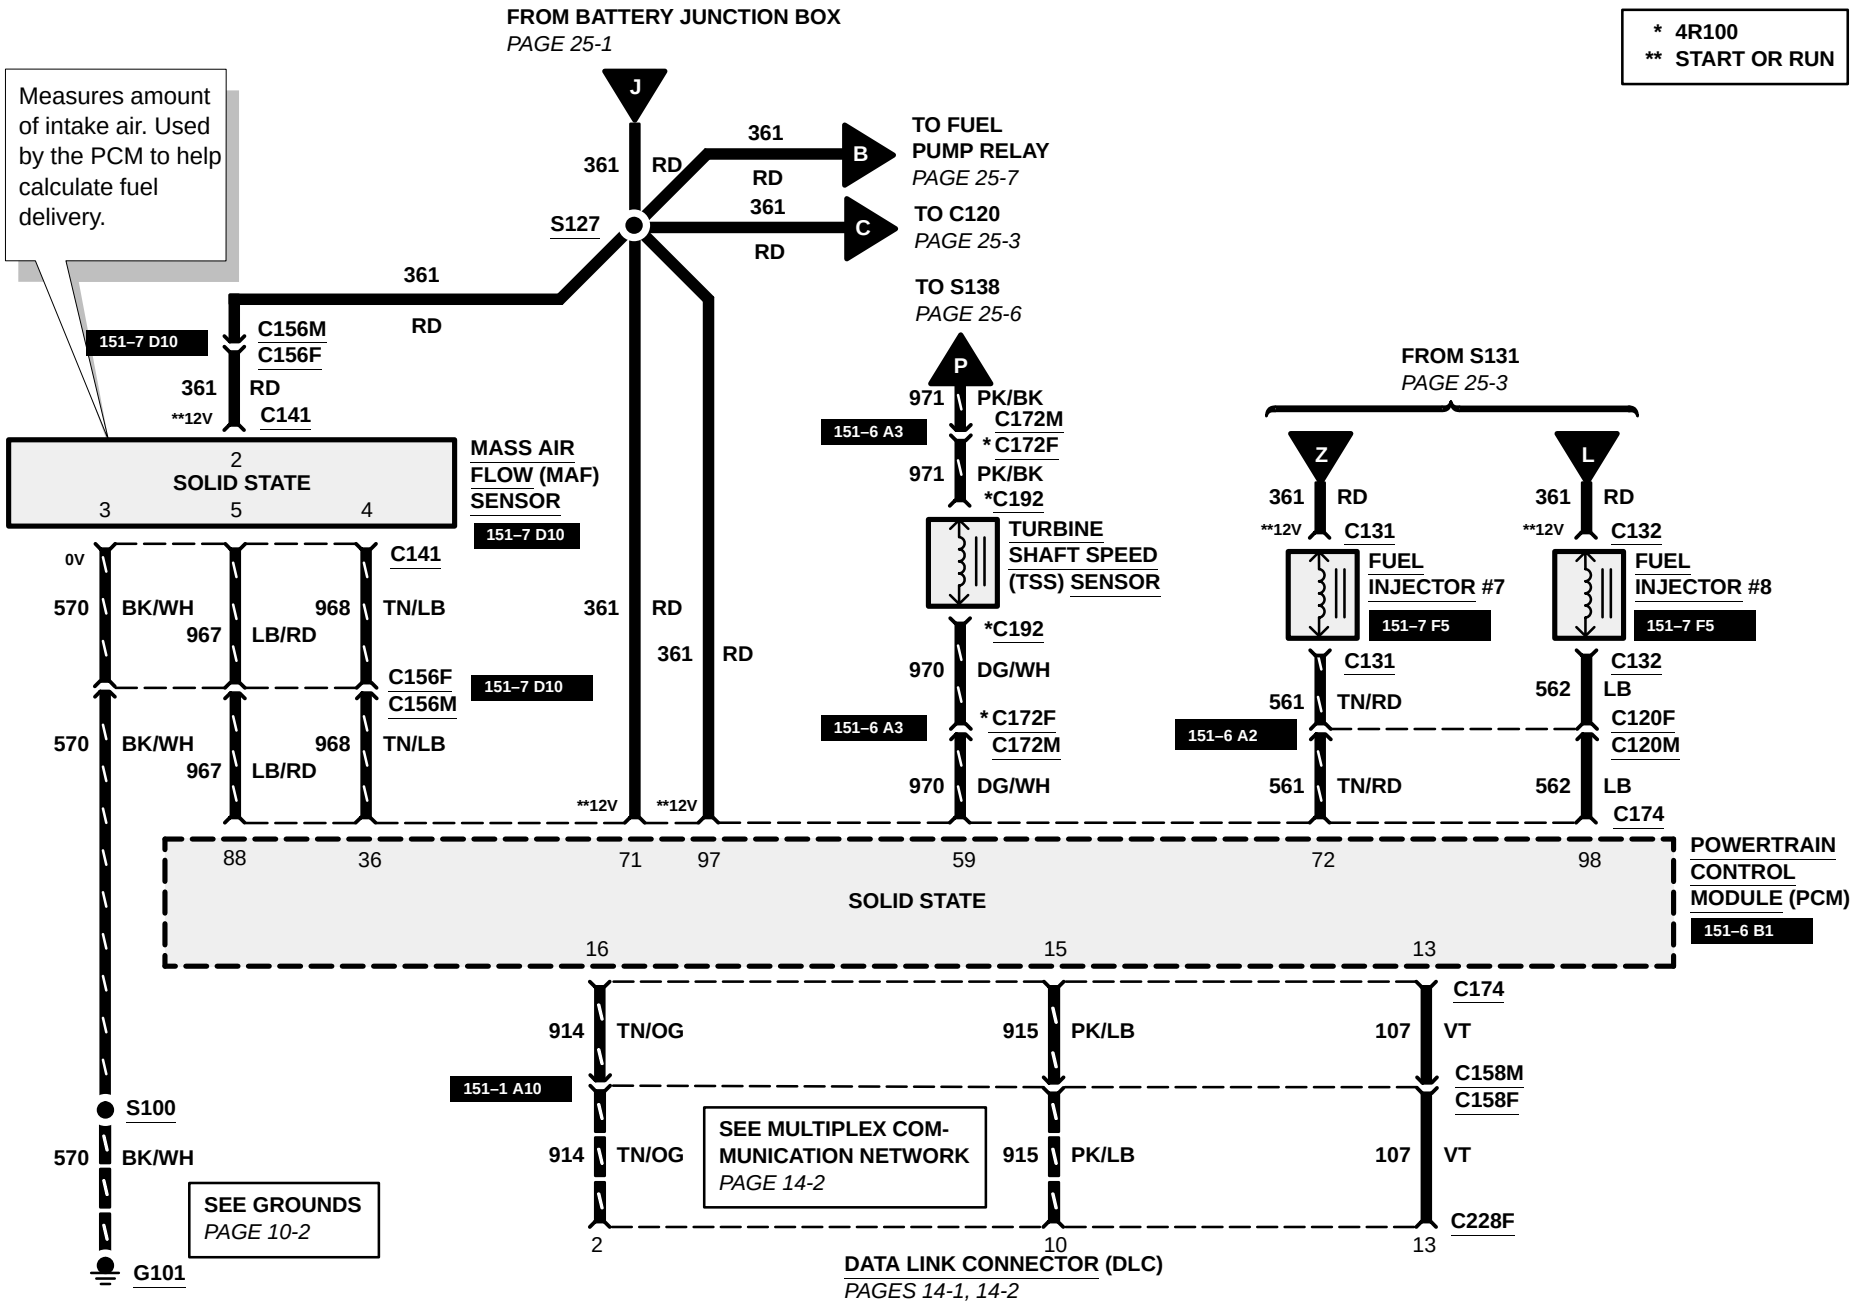
FROM BATTERY JUNCTION BOX
PAGE 25-1
* 4R100
** START OR RUN
Measures amount of intake air. Used by the PCM to help calculate fuel delivery.
J
361 RD
S127
361 RD
B
TO FUEL PUMP RELAY
PAGE 25-7
361 RD
C
TO C120
PAGE 25-3
TO S138
PAGE 25-6
361 RD
151–7 D10
C156M
C156F
361 RD
**12V
C141
2
SOLID STATE
3 5 4
MASS AIR FLOW (MAF) SENSOR
151–7 D10
P
971 PK/BK
151–6 A3
C172M
*C172F
971 PK/BK
*C192
TURBINE SHAFT SPEED (TSS) SENSOR
FROM S131
PAGE 25-3
Z
L
361 RD
**12V
C131
FUEL INJECTOR #7
151–7 F5
C132
FUEL INJECTOR #8
151–7 F5
0V
570 BK/WH
967 LB/RD
968 TN/LB
C141
C156F
C156M
151–7 D10
361 RD
361 RD
*C192
970 DG/WH
*C172F
C172M
151–6 A3
970 DG/WH
561 TN/RD
151–6 A2
562 LB
C120F
C120M
C131
C132
**12V
**12V
C174
88 36 71 97 59 72 98
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–6 B1
16 15 13
914 TN/OG
915 PK/LB
107 VT
C174
C158M
C158F
151–1 A10
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
C228F
2 10 13
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-2
S100
570 BK/WH
SEE GROUNDS
PAGE 10-2
G101